**EXAR DATA SHEET FORMAT TEMPLATES** 



#### MARCH 2006

#### **GENERAL DESCRIPTION**

The XRT75R03D is a three-channel fully integrated Line Interface Unit (LIU) featuring EXAR's R<sup>3</sup> Technology (Reconfigurable, Relayless Redundancy) with Jitter Attenuator for E3/DS3/STS-1 applications. It incorporates 3 independent Receivers, Transmitters and Jitter Attenuators in a single 128 pin LQFP package.

Each channel of the XRT75R03D can be independently configured to operate in the data rate, E3 (34.368 MHz), DS3 (44.736 MHz) or STS-1 (51.84 MHz). Each transmitter can be turned off and tristated for redundancy support or for conserving power.

The XRT75R03D's differential receiver provides high noise interference margin and is able to receive the data over 1000 feet of cable or with up to 12 dB of cable attenuation.

The XRT75R03D incorporates an advanced crystalless jitter attenuator per channel that can be selected either in the transmit or receive path. The jitter attenuator performance meets the ETSI TBR-24 and Bellcore GR-499 specifications.

The XRT75R03D provides both Serial Microprocessor Interface as well as Hardware mode for programming and control.

The XRT75R03D supports local, remote and digital loop-backs. The device also has a built-in Pseudo Random Binary Sequence (PRBS) generator and detector with the ability to insert and detect single bit error for diagnostic purposes.

#### FEATURES

#### **RECEIVER:**

- R<sup>3</sup> Technology (Reconfigurable, Relayless Redundancy)
- On chip Clock and Data Recovery circuit for high input jitter tolerance
- Meets E3/DS3/STS-1 Jitter Tolerance Requirement
- Detects and Clears LOS as per G.775
- Receiver Monitor mode handles up to 20 dB flat loss with 6 dB cable attenuation
- On chip B3ZS/HDB3 encoder and decoder that can be either enabled or disabled
- On-chip clock synthesizer provides the appropriate rate clock from a single 12.288 MHz Clock
- Provides low jitter output clock

#### TRANSMITTER:

- R<sup>3</sup> Technology (Reconfigurable, Relayless Redundancy)
- Compliant with Bellcore GR-499, GR-253 and ANSI T1.102 Specification for transmit pulse
- Tri-state Transmit output capability for redundancy applications
- Each Transmitter can be independently turned on or off
- Transmitters provide Voltage Output Drive

#### JITTER ATTENUATOR:

- On chip advanced crystal-less Jitter Attenuator for each channel
- Jitter Attenuator can be selected in Receive or Transmit paths
- Meets ETSI TBR 24 Jitter Transfer Requirements
- Compliant with jitter transfer template outlined in ITU G.751, G.752, G.755 and GR-499-CORE,1995 standards
- Witter Attenuator can be disabled

#### CONTROL AND DIAGNOSTICS:

- 5 wire Serial Microprocessor Interface for control and configuration
- Supports optional internal Transmit driver
- Hardware Mode for control and configuration
- Each channel supports Local, Remote and Digital Loop-backs
- Single 3.3 V  $\pm$  5% power supply
- 5 V Tolerant I/O
- Available in 128 pin LQFP
- 40℃ to 85℃ Industrial Temperature Range

#### APPLICATIONS


- E3/DS3 Access Equipment
- STS1-SPE to DS3 De-Synchronizing
- DSLAMs
- Digital Cross Connect Systems
- CSU/DSU Equipment
- Routers
- Fiber Optic Terminals

REV. 1.0.4



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER



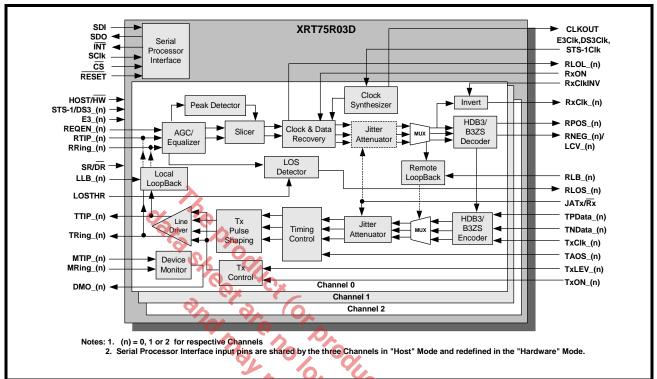

## TRANSMIT INTERFACE CHARACTERISTICS


- inal Equ. • Accepts either Single-Rail or Dual-Rail data from Terminal Equipment and generates a bipolar signal to the line
- Integrated Pulse Shaping Circuit
- Built-in B3ZS/HDB3 Encoder (which can be disabled)
- Accepts Transmit Clock with duty cycle of 30%-70%
- Generates pulses that comply with the ITU-T G.703 pulse template for E3 applications
- Generates pulses that comply with the DSX-3 pulse template, as specified in Bellcore GR-499-CORE and ANSI T1.102\_1993
- Generates pulses that comply with the STSX-1 pulse template, as specified in Bellcore GR-253-CORE
- Transmitter can be turned off in order to support redundancy designs

## **RECEIVE INTERFACE CHARACTERISTICS**

- Integrated Adaptive Receive Equalization (optional) for optimal Clock and Data Recovery
- Declares and Clears the LOS defect per ITU-T G.775 requirements for E3 and DS3 applications
- Meets Jitter Tolerance Requirements, as specified in ITU-T G.823 1993 for E3 Applications
- Meets Jitter Tolerance Requirements, as specified in Bellcore GR-499-CORE for DS3 Applications
- Declares Loss of Signal (LOS) and Loss of Lock (LOL) Alarms
- Built-in B3ZS/HDB3 Decoder (which can be disabled)
- Recovered Data can be muted while the LOS Condition is declared
- Outputs either Single-Rail or Dual-Rail data to the Terminal Equipment



#### FIGURE 2. PIN OUT OF THE XRT75R03D

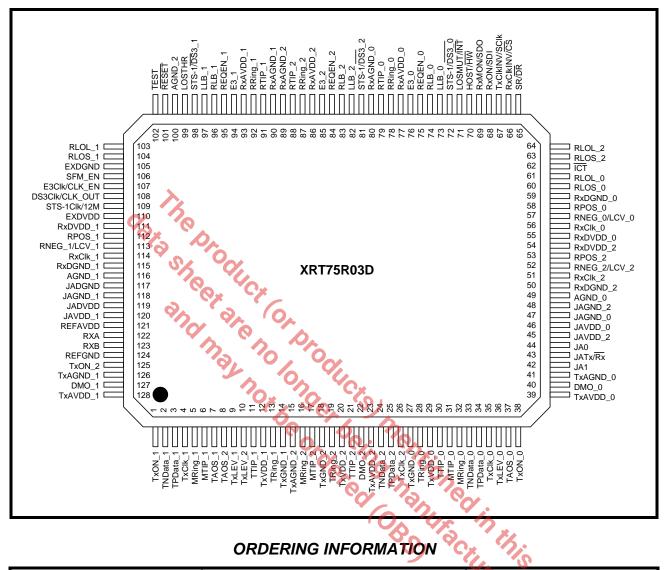

## ORDERING INFORMATION

PART NUMBER	PACKAGE	OPERATING TEMPERATURE RANGE
XRT75R03DIV	128 Pin LQFP	- 40°C to + 85°C

# **EXAR** Experience Our Connectivity.

## **XRT75R03D**

THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER	REV. 1.0.4
GENERAL DESCRIPTION	1
Features	
APPLICATIONS	
FIGURE 1. BLOCK DIAGRAM OF THE XRT 75R03D	2
TRANSMIT INTERFACE CHARACTERISTICS	2
Receive Interface Characteristics	2
FIGURE 2. PIN OUT OF THE XRT75R03D	
ORDERING INFORMATION	3
PIN DESCRIPTIONS (BY FUNCTION)	
System-Side Transmit Input and Transmit Control Pins	
TRANSMIT LINE SIDE PINS	
System-Side Receive Output and Receive Control Pins	10
Receive Line Side Pins	
GENERAL CONTROL PINS	
CONTROL AND ALARM INTERFACE	
JITTER ATTENUATOR INTERFACE	
POWER SUPPLY AND GROUND PINS	
XRT75R03D PIN LISTING IN NUMERICAL ORDER	24
1.0 R3 TECHNOLOGY (RECONFIGURABLE, RELAYLESS REDUNDANCY)	29
1.1 NETWORK ARCHITECTURE	
FIGURE 3. NETWORK REDUNDANCY ARCHITECTURE	
1.3 SOFTWARE VS HARDWARE AUTOMATIC PROTECTION SWITCHING	
2.0 ELECTRICAL CHARACTERISTICS	
TABLE 1: ABSOLUTE MAXIMUM RATINGS	
TABLE 2: DC ELECTRICAL CHARACTERISTICS	
3.0 TIMING CHARACTERISTICS	
FIGURE 4. TYPICAL INTERFACE BETWEEN TERMINAL EQUIPMENT AND THE XRT75R03D (DUAL-RAIL DATA)	
Figure 5. Transmitter Terminal Input Timing	
Figure 6. Receiver Data output and code violation fining Figure 7. Transmit Pulse Amplitude test circuit for E3, DS3 and STS-1 Rates	
4.0 LINE SIDE CHARACTERISTICS:	
4.1 E3 LINE SIDE PARAMETERS:	34
FIGURE 8. PULSE MASK FOR E3 (34.368 MBITS/S) INTERFACE AS PER ITU-T G.703	
TABLE 3: E3 TRANSMITTER LINE SIDE OUTPUT AND RECEIVER LINE SIDE INPUT SPECIFICATIONS	
FIGURE 9. BELLCORE GR-253 CORE TRANSMIT OUTPUT PULSE TEMPLATE FOR SONET STS-1 APPLICATIONS TABLE 4: STS-1 PULSE MASK EQUATIONS	
TABLE 4: STS-1 TOLSE MASK EQUATIONS	
FIGURE 10. TRANSMIT OUPUT PULSE TEMPLATE FOR DS3 AS PER BELLCORE GR-499	
TABLE 6: DS3 PULSE MASK EQUATIONS	
TABLE 7: DS3 TRANSMITTER LINE SIDE OUTPUT AND RECEIVER LINE SIDE INPUT SPECIFICATIONS (GR-499) FIGURE 11. MICROPROCESSOR SERIAL INTERFACE STRUCTURE	
FIGURE 11. MICROPROCESSOR SEXIAL INTERFACE STRUCTURE FIGURE 12. TIMING DIAGRAM FOR THE MICROPROCESSOR SERIAL INTERFACE	
TABLE 8: MICROPROCESSOR SERIAL INTERFACE TIMINGS ( $TA = 250C$ , $VDD=3.3V \pm 5\%$ and $LOAD = 10pF$ )	
FUNCTIONAL DESCRIPTION:	41
5.0 THE TRANSMITTER SECTION:	
FIGURE 13. SINGLE-RAIL OR NRZ DATA FORMAT (ENCODER AND DECODER ARE ENABLED)	41
FIGURE 14. DUAL-RAIL DATA FORMAT (ENCODER AND DECODER ARE DISABLED)	
5.1 TRANSMIT CLOCK:	
5.2 B3ZS/HDB3 ENCODER:	
5.2.1 B3ZS ENCODING: Figure 15. B3ZS Encoding Format	
5.2.2 HDB3 ENCODING:	
FIGURE 16. HDB3 ENCODING FORMAT	
5.3 TRANSMIT PULSE SHAPER:	
5.3.1 GUIDELINES FOR USING TRANSMIT BUILD OUT CIRCUIT:	
5.3.2 INTERFACING TO THE LINE:	
5.4 TRANSMIT DRIVE MONITOR Figure 17. Transmit Driver Monitor set-up	
5.5 TRANSMITTER SECTION ON/OFF:	

THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

EXAR Experience Our Connectivity. REV. 1.0.4

## XRT75R03D

THREE CHANNEL E3/DS3/STS-1 LINE

6.0 THE RECEIVER SECTION:	44
6.1 AGC/EQUALIZER:	44
6.1.1 INTERFERENCE TOLERANCE:	45
FIGURE 18. INTERFERENCE MARGIN TEST SET UP FOR DS3/STS-1	45
FIGURE 19. INTERFERENCE MARGIN TEST SET UP FOR E3	46
TABLE 9: INTERFERENCE MARGIN TEST RESULTS	-
6.2 CLOCK AND DATA RECOVERY:	-
6.3 B3ZS/HDB3 DECODER:	
6.4 LOS (LOSS OF SIGNAL) DETECTOR:	
6.4.1 DS3/STS-1 LOS CONDITION:	
TABLE 10: THE ALOS (ANALOG LOS) DECLARATION AND CLEARANCE THRESHOLDS FOR A GIVEN SETTING OF LOSTHR AND P	
AND STS-1 APPLICATIONS)	
DISABLING ALOS/DLOS DETECTION:	
6.4.2 E3 LOS CONDITION:	47
FIGURE 20. LOSS OF SIGNAL DEFINITION FOR E3 AS PER ITU-T G.775	
FIGURE 21. LOSS OF SIGNAL DEFINITION FOR E3 AS PER ITU-T G.775.	
6.4.3 MUTING THE RECOVERED DATA WITH LOS CONDITION:	
7.0 JITTER:	
7.1 JITTER TOLERANCE RECEIVER:	
FIGURE 22. JITTER TOLERANCE MEASUREMENTS	
7.1.1 DS3/STS-1 JITTER TOLERANCE REQUIREMENTS: Figure 23. Input Jitter Tolerance For DS3/STS-1	
7.1.2 E3 JITTER TOLERANCE REQUIREMENTS:	
Figure 24. Input Jitter Tolerance For E3	
TABLE 11: JITTER AMPLITUDE VERSUS MODULATION FREQUENCY (JITTER TOLERANCE)	
7.2 JITTER TRANSFER - RECEIVER/TRANSMITTER:	
Table 12: Jitter Transfer Specification/References	
7.3 JITTER ATTENUATOR:	
TABLE 13: JITTER TRANSFER PASS MASKS	
FIGURE 25. JITTER TRANSFER REQUIREMENTS AND JITTER ATTENDATOR PERFORMANCE	
7.3.1 JITTER GENERATION:	52
8.0 SERIAL HOST INTERFACE:	52
TABLE 14: FUNCTIONS OF SHARED PINS	53
TABLE 15: XRT75R03D REGISTER MAP - QUICK LOOK	
Legend:	
THE REGISTER MAP AND DESCRIPTION FOR THE XRT75R03D 3-CHANNEL DS3/E3/STS-1	LIU IC57
TABLE 16: COMMAND REGISTER ADDRESS MAP, WITHIN THE XRT75R03D 3-CHANNEL DS3/E3/STS-1 LIU W/ JITTER ATT	ENUATOR <b>IC</b>
57	
THE GLOBAL/CHIP-LEVEL REGISTERS	59
TABLE 17: LIST AND ADDRESS LOCATIONS OF GLOBAL REGISTERS	
REGISTER DESCRIPTION - GLOBAL REGISTERS	59
TABLE 18: APS/REDUNDANCY CONTROL REGISTER - CR0 (ADDRESS LOCATION = 0x00)	59
TABLE 19: BLOCK LEVEL INTERRUPT ENABLE REGISTER - CR32 (ADDRESS LOCATION = 0x20)	
TABLE 20: BLOCK LEVEL INTERRUPT STATUS REGISTER - CR33 (ADDRESS LOCATION = 0x21)	
TABLE 21: DEVICE/PART NUMBER REGISTER - CR62 (ADDRESS LOCATION = 0x3E)	
TABLE 22: CHIP REVISION NUMBER REGISTER - CR63 (ADDRESS LOCATION = 0x3F)	
THE PER-CHANNEL REGISTERS	
TABLE 23: COMMAND REGISTER ADDRESS MAP, WITHIN THE XRT75R03D 3-CHANNEL DS3/E3/STS-1 LIU W/ JITTER ATT	ENUATOR IC
65 REGISTER DESCRIPTION - PER CHANNEL REGISTERS	67
Table 24:       Source Level Interrupt Enable Register - Channel 0 Address Location = 0x01         Trace 25:       Output Description         Trace 25:       Output Description	-
TABLE 25: SOURCE LEVEL INTERRUPT STATUS REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x02         TABLE 26: ALARM STATUS REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x03	
TABLE 20. ALARM STATUS REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x03 TABLE 27: TRANSMIT CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x04	
TABLE 27: TRANSMIT CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x04         TABLE 28: RECEIVE CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x05	-
TABLE 20: RECEIVE CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x00         TABLE 29: CHANNEL CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x00	-
TABLE 30: JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x07	
9.0 DIAGNOSTIC FEATURES:	
9.1 PRBS GENERATOR AND DETECTOR:	
Figure 26. PRBS MODE	
9.2 LOOPBACKS:	
9.2.1 ANALOG LOOPBACK:	
Figure 27. Analog Loopback	



THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

Experience *Our* Connectivity.

	DIGITAL LOOPBACK:	
	DIGITAL LOOPBACK	
	REMOTE LOOPBACK:	
	. Rемоте Loopback	
	SMIT ALL ONES (TAOS):	
	. TRANSMIT ALL ONES (TAOS)	
	ONET/SDH DE-SYNC FUNCTION WITHIN THE XRT75R03D	
10.1 BAC	KGROUND AND DETAILED INFORMATION - SONET DE-SYNC APPLICATIONS	90
FIGURE 31	. A SIMPLE ILLUSTRATION OF A DS3 SIGNAL BEING MAPPED INTO AND TRANSPORTED OVER THE SONET NETWORK	. 91
10.2 MAP	PING/DE-MAPPING JITTER/WANDER	92
10.2.1	HOW DS3 DATA IS MAPPED INTO SONET	92
FIGURE 32	. A SIMPLE ILLUSTRATION OF THE SONET STS-1 FRAME	. 93
	. A SIMPLE ILLUSTRATION OF THE STS-1 FRAME STRUCTURE WITH THE TOH AND THE ENVELOPE CAPACITY BYTES DESIG	NATED
	94	
	. THE BYTE-FORMAT OF THE TOH WITHIN AN STS-1 FRAME	
	. THE BYTE-FORMAT OF THE TOH WITHIN AN STS-1 FRAME	
	. ILLUSTRATION OF THE BYTE STRUCTURE OF THE STS-1 SPE	
FIGURE 37	. AN ILLUSTRATION OF TELCORDIA GR-253-CORE'S RECOMMENDATION ON HOW MAP DS3 DATA INTO AN STS-1 SPE	. 98
	. A SIMPLIFIED "BIT-ORIENTED" VERSION OF TELCORDIA GR-253-CORE'S RECOMMENDATION ON HOW TO MAP DS3 DAT	
	DS3 FREQUENCY OFFSETS AND THE USE OF THE "STUFF OPPORTUNITY" BITS	
	. A SIMPLE ILLUSTRATION OF A DS3 DATA-STREAM BEING MAPPED INTO AN STS-1 SPE, VIA A PTE	
	. AN ILLUSTRATION OF THE STS-1 SPE TRAFFIC THAT WILL BE GENERATED BY THE "SOURCE" PTE, WHEN MAPPING IN A	
	SIGNAL THAT HAS A BIT RATE OF 44.736MBPS + 1PPM, INTO AN STS-1 SIGNAL	
	. AN ILLUSTRATION OF THE STS-1 SPE TRAFFIC THAT WILL BE GENERATED BY THE SOURCE PTE, WHEN MAPPING A DS3 S THAT HAS A BIT RATE OF 44.736/MBPS - 1PPM, INTO AN STS-1 SIGNAL	
	ER/WANDER DUE TO POINTER ADJUSTMENTS	
	THE CONCEPT OF AN STS-1 SPE POINTER	
	AN ILLUSTRATION OF AN STS-T SPE FOUNTER	
	. AN ILLUSTRATION OF AN \$13-1 SPE STRADDLING ACROSS TWO CONSECUTIVE \$13-1 FRAMES . THE BIT-FORMAT OF THE 16-BIT WORD (CONSISTING OF THE H1 AND H2 BYTES) WITH THE 10 BITS, REFLECTING THE LOC	
	OF THE J1 BYTE, DESIGNATED	
	. THE RELATIONSHIP BETWEEN THE CONTENTS OF THE "POINTER BITS" (E.G., THE 10-BIT EXPRESSION WITHIN THE H1 A	
	BYTES) AND THE LOCATION OF THE J1 BYTE WITHIN THE ENVELOPE CAPACITY OF AN STS-1 FRAME	
	POINTER ADJUSTMENTS WITHIN THE SONET NETWORK	
	CAUSES OF POINTER ADJUSTMENTS	
	. AN ILLUSTRATION OF AN STS-1 SIGNAL BEING PROCESSED VIA A SLIP BUFFER	
FIGURE 46	. AN ILLUSTRATION OF THE BIT FORMAT WITHIN THE 16-BIT WORD (CONSISTING OF THE H1 AND H2 BYTES) WITH THE "I"	BITS
	DESIGNATED	
	. AN ILLUSTRATION OF THE BIT-FORMAT WITHIN THE 16-BIT WORD (CONSISTING OF THE H1 AND H2 BYTES) WITH THE "D	
	DESIGNATED	
10.3.4	WHY ARE WE TALKING ABOUT POINTER ADJUSTMENTS?	110
10.4 CLO	CK GAPPING JITTER	110
	. ILLUSTRATION OF THE TYPICAL APPLICATIONS FOR THE XRT75R03D IN A SONET DE-SYNC APPLICATION	
10.5 A RE	EVIEW OF THE CATEGORY I INTRINSIC JITTER REQUIREMENTS (PER TELCORDIA GR-253-CC	DRE)
FOR		111
	SUMMARY OF "CATEGORY I INTRINSIC JITTER REQUIREMENT PER TELCORDIA GR-253-CORE, FOR DS3 APPLICATIONS	
	DS3 DE-MAPPING JITTER	
10.5.2	SINGLE POINTER ADJUSTMENT	112
FIGURE 49	. ILLUSTRATION OF SINGLE POINTER ADJUSTMENT SCENARIO	112
	POINTER BURST	
	. ILLUSTRATION OF BURST OF POINTER ADJUSTMENT SCENARIO	
	PHASE TRANSIENTS	
	. ILLUSTRATION OF "PHASE-TRANSIENT" POINTER ADJUSTMENT SCENARIO	
	87-3 PATTERN	
	. AN ILLUSTRATION OF THE 87-3 CONTINUOUS POINTER ADJUSTMENT PATTERN	
	87-3 ADD	-
	. ILLUSTRATION OF THE 87-3 ADD POINTER ADJUSTMENT PATTERN	-
	87-3 CANCEL	
	. ILLUSTRATION OF 87-3 CANCEL POINTER ADJUSTMENT SCENARIO	
	CONTINUOUS PATTERN	
		-
	CONTINUOUS ADD	
	CONTINUOUS CANCEL	
	CONTINUOUS CANCEL	
	. ILLUSTRATION OF GUNTINUUUS-GANGEL FUINTER ADJUSTMENT GGENARIU	110



## THREE CHANNEL E3/DS3/STS-1 LINE

10.6 A REVIEW OF THE DS3 WANDER REQUIREMENTS PER ANSI T1.105.03B-1997.	
10.7 A REVIEW OF THE INTRINSIC JITTER AND WANDER CAPABILITIES OF THE XRT75R03D IN A T	
SYSTEM APPLICATION	
TABLE 32: SUMMARY OF "CATEGORY I INTRINSIC JITTER TEST RESULTS" FOR SONET/DS3 APPLICATIONS	
10.7.2 WANDER MEASUREMENT TEST RESULTS.	
10.8 DESIGNING WITH THE XRT75R03D	
10.8.1 HOW TO DESIGN AND CONFIGURE THE XRT75R03D TO PERMIT A SYSTEM TO MEET THE ABOVE-MEN	TIONED
INTRINSIC JITTER AND WANDER REQUIREMENTS	
FIGURE 58. ILLUSTRATION OF THE XRT75R03D BEING CONNECTED TO A MAPPER IC FOR SONET DE-SYNC APPLICATIONS	
CHANNEL CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x06	
CHANNEL 1 ADDRESS LOCATION = 0x0E	121
CHANNEL 2 ADDRESS LOCATION = 0x16	121
CHANNEL CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x06	122
CHANNEL 1 ADDRESS LOCATION = 0x0E	122
CHANNEL 2 ADDRESS LOCATION = 0x16	122
JITTER ATTENUATOR CONTROL REGISTER - (CHANNEL 0 ADDRESS LOCATION = 0x07	
Channel 1 Address Location = 0x0F	
Channel 2 Address Location = 0x17	
JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x17	
Channel 1 Address Location = 0x07	
Channel 1 Address Location = 0x0F	
JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x07	
Channel 1 Address Location = 0x0F	-
CHANNEL 2 ADDRESS LOCATION = 0x17	
10.8.2 RECOMMENDATIONS ON PRE-PROCESSING THE GAPPED CLOCKS (FROM THE MAPPER/ASIC DEVI	
OR TO ROUTING THIS DS3 CLOCK AND DATA-SIGNALS TO THE TRANSMIT INPUTS OF THE XRT75R03I FIGURE 59. ILLUSTRATION OF MINOR PATTERN P1	
FIGURE 59. ILLUSTRATION OF MINOR PATTERN PT	124 125
FIGURE 61. ILLUSTRATION OF PROCEDURE WHICH IS USED TO SYNTHESIZE MAJOR PATTERN A	125
FIGURE 62. ILLUSTRATION OF MINOR PATTERN P3	126
FIGURE 63. ILLUSTRATION OF PROCEDURE WHICH IS USED TO SYNTHESIZE PATTERN B	
FIGURE 64. ILLUSTRATION OF THE SUPER PATTERN WHICH IS OUTPUT VIA THE "OC-N TO DS3" MAPPER IC	
FIGURE 65. SIMPLE ILLUSTRATION OF THE XRT75R03D BEING USED IN A SONET DE-SYNCHRONIZER" APPLICATION	
10.8.3 HOW DOES THE XRT75R03D PERMIT THE USER TO COMPLY WITH THE SONET APS RECOVERY TIM	
QUIREMENTS OF 50MS (PER TELCORDIA GR-253-CORE)?	127 129
JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x07	
CHANNEL 1 ADDRESS LOCATION = 0x0F	
CHANNEL 1 ADDRESS ECCATION = 0x07	
10.8.4 HOW SHOULD ONE CONFIGURE THE XRT75R03D IF ONE NEEDS TO SUPPORT "DAISY-CHAIN" TES	
THE END CUSTOMER'S SITE?	
JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x07	
CHANNEL 1 ADDRESS LOCATION = 0x07	
CHANNEL 1 ADDRESS EOCATION = 0x0F CHANNEL 2 ADDRESS LOCATION = 0x17	
ORDERING INFORMATION	
PACKAGE DIMENSIONS - 14x20 MM, 128 PIN PACKAGE	
Revisions	131

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER



## **PIN DESCRIPTIONS (BY FUNCTION)**

#### SYSTEM-SIDE TRANSMIT INPUT AND TRANSMIT CONTROL PINS

PIN #	SIGNAL NAME	Түре	DESCRIPTION
38	TxON_0	I	Transmitter ON Input - Channel 0:
1	TxON_1		Transmitter ON Input - Channel 1:
125	TxON_2		Transmitter ON Input - Channel 2:
			These input pins are used to either enable or disable the Transmit Output Driver corresponding to Channel_n.
			"Low" - Disables the Transmit Output Driver of the corresponding Channel. In this setting, the corresponding TTIP_n and TRING_n output pins will be tri-stated.
	037	the pro-	"High" - Enables the Transmit Output Driver of the corresponding Channel. In this setting, the corresponding TTIP_n and TRING_n output pins will be enabled.
	•	0.0	Notes:
		neer and	1. Even when the XRT75R03D is configured in HOST mode, these pins will be active. To enable software control of the Transmit Output Driver outputs, pull these pins "High".
		20	2. When Transmitters are turned off either in Host or Hardware mode, the TTIP and TRing outputs are Tri-stated.
		1	3 These pins are internally pulled "High"
35	TxClk_0	1	Transmit Clock Input - Channel 0:
4	TxClk_1		Transmit Clock Input f - Channel 1:
26	TxClk_2		Transmit Clock Input - Channel 2:
			These input pins have two functions:
			<ul> <li>They function as the timing source for the Transmit Section of the corresponding channel within the XRT75R03D.</li> </ul>
			<ul> <li>They also are used by the Transmit Section of the LIU IC to sample the corresponding TPDATA_n and TNDATA_n input pin.</li> </ul>
			<b>Note:</b> The user is expected to supply a 44.736MHz ± 20ppm clock signal (for DS3 applications), 34.368MHz ± 20 ppm clock signal (for E3 applications) or a 51.84MHz ± 4.6ppm clock signal (for STS-1, Stratum 3E or better applications).
		1	



## THREE CHANNEL E3/DS3/STS-1 LINE

#### SYSTEM-SIDE TRANSMIT INPUT AND TRANSMIT CONTROL PINS

Pin #	SIGNAL NAME	Түре	DESCRIPTION
34	TPDATA_0/TxDATA_0	I	Transmit Positive Data Input - Channel 0:
3	TPDATA_1/TxDATA_1		Transmit Positive Data Input - Channel 1:
25	TPDATA_2/TxDATA_2		Transmit Positive Data Input - Channel 2:
			Transmit Positive Data/Data Input - Channel n:
			The function of these input pins depends upon whether the corresponding channel has been configured to operate in the Single-Rail or Dual-Rail Mode.
			Single Rail Mode - Transmit Data Input - Channel n:
	dara sh	Drock	If the Channel has been configured to operate in the Single-Rail Mode, then all transmit output data will be serially applied to this input pin. This signal will latched into the Transmit Section circuitry upon either the rising or falling edge of the TxCLK_n signal, depending upon user configuration. In the Single-Rail Mode, the Transmit Section of the LIU IC will then encode this data into either the B3ZS line code (for DS3 and STS-1 applications) or the HDB3 line code (for E3 applications).
			Dual Rail Mode - Transmit Positive Data Input - Channel n:
	an		If the Channel has been configured to operate in the Dual-Rail Mode, then the user should apply a pulse to this input pin, anytime the Transmit Sec- tion of the LIU IC is suppose to generate and transmit a positive-polarity pulse onto the line. This signal will be latched into the Transmit Section cir- cuitry upon either the rising or falling edge of the TxCLK_n signal, depend- ing upon user configuration.
			In the Dual-Rail Mode, the Transmit Section of the LIU IC will NOT encode this data into either the B3ZS or HDB3 line codes. If the user configures the LIU IC to operate in the Dual-Rail Mode, then B3ZS/HDB3 encoding must have already been done prior to providing the transmit output data to this input pin.
33	TNData_0	-	Transmit Negative Data Input - Channel 0:
2	TNData_1		Transmit Negative Data Input - Channel 1:
24	TNData_2		Transmit Negative Data Input - Channel 2:
			If a Channel has been configured to operate in the Dual-Rail Mode, then the user should apply a pulse to this input pin anytime the Transmit Section of the LIU IC is suppose to generate and transmit a negative-polarity pulse onto the line. This signal will be latched into the Transmit Section circuitry upon either the rising or falling edge of the TxCLK_n signal, depending upon user configuration. <b>Note:</b> If the Channel has been configured operate in the Single-Rail Mode, then this input pin has no function, and should be tied to GND.

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### SYSTEM-SIDE TRANSMIT INPUT AND TRANSMIT CONTROL PINS

PIN #	SIGNAL NAME	Түре	DESCRIPTION
37	TAOS_0	I	Transmit "All Ones" Input - Channel 0:
7	TAOS_1		Transmit "All Ones" Input - Channel 1:
8	TAOS_2		Transmit "All Ones" Input - Channel 2:
			These input pin are used to configure the Transmit Section of the corre- sponding channel to generate and transmit an unframed "All Ones" pattern via the DS3, E3 or STS-1 line signal to the remote terminal equipment.
			When this configuration is implemented the Transmit Section will ignore the data that it is accepting from the System-side equipment and will overwrite this data will the "All Ones" Pattern.
	0	he	"Low" - Does not configure the channel to transmit an unframed "All Ones" Pattern to the remote terminal equipment. In this mode, the Transmit Sec- tion of the Channel will output data based upon the signals that are applied to the TxPOS_n and TxNEG_n input pins.
		he pro	"High" - Configures the Channel to transmit an unframed "All Ones" Pattern to the remote terminal equipment. In this mode, the Transmit Section will override the data that is applied to the TxPOS_n and TxNEG_n input pins, and will proceed to generate and transmit an unframed "All Ones" pattern.
	(		4. This input pin is ignored if the XRT75R03D is operating in the HOST Mode and should be tied to GND.
		9	S. These input pins are internally pulled down.
36	TxLEV_0	1	Transmit Line Build-Out Enable/Disable Select - Channel 0:
9	TxLEV_1		Transmit Line Build-Out Enable/Disable Select - Channel 1:
10	TxLEV_2		Transmit Line Build-Out Enable/Disable Select - Channel 2:
			These input pins are used to enable or disable the Transmit Line Build-Out
			(e.g., pulse shaping) circuit within the corresponding channel. The user should set these input pins either "High" or "Low" based upon the following
			guidelines.
			"Low" - If the cable length between the Transmit Output of the correspond- ing Channel and the DSX-3/STSX-1 location is 225 feet or less.
			"High" - If the cable length between the Transmit Output of the correspond- ing Channel and the DSX-3/STSX-1 location is 225 feet or more.
			Notes:
			<ol> <li>These guidelines must be followed in order to insure that the Transmit Section of Channel_n will always generate a DS3 pulse that complies with the Isolated Pulse Template requirements per Bellcore GR-499-CORE, or an STS-1 pulse that complies with the Pulse Template requirements per Telcordia GR-253-CORE.</li> </ol>
			<ol> <li>This input pin is inactive if the XRT75R03D has been configured to operate in the Host Mode, or if the corresponding channel has been configured to operate in the E3 Mode. If either of these cases are true, then tie this input pin to GND.</li> </ol>
			3. These input pins are internally pulled "Low".



R REV. 1.0.4



#### THREE CHANNEL E3/DS3/STS-1 LINE

#### SYSTEM-SIDE TRANSMIT INPUT AND TRANSMIT CONTROL PINS

Pin #	SIGNAL NAME	Түре	DESCRIPTION
40	DMO_0	0	Drive Monitor Output - Channel 0:
127	DMO_1		Drive Monitor Output - Channel 1:
22	DMO_2		Drive Monitor Output - Channel 2:
			These output signals are used to indicate some sort of fault condition within the Transmit Output signal path.
			This output pin will toggle "High" anytime the Transmit Drive Monitor cir- cuitry either, via the corresponding MTIP and MRING input pins or inter- nally, detects no bipolar pulses via the Transmit Output line signal (e.g., via the TTIP_n and TRING_n output pins) for 128 bit-periods. This output pin will be driven "Low" anytime the Transmit Drive Monitor cir-
	n h		cuitry has detected at least one bipolar pulse via the Transmit Output line signal within the last 128 bit periods.
67	TxClkINV/		Hardware Mode: Transmit Clock Invert
	SCIk 💊		Host Mode: Serial Clock Input:
	0	9	Hardware mode
	an an	80, X	This input pin is used to select the edge of the TxCLK_n input that the Transmit Section of all channels will use to sample the TPDATA_n and TNDATA_n input pins.
	~	3	Setting this input pin "High" configures all three Transmitters to sample the TPData_n and TNData_n data on the rising edge of the TxClk_n.
		84	Setting this input pin "Low" configures all three Transmitters to sample the TPData_n and TNData_n data on the falling edge of the TxClk_n .
			Host Mode In the Host Mode this pin functions as SCIk input pin please refer to the pin descriptions for the Microprocessor interface.

and TNL. It Mode this pin functions as constructions for the Microprocessor interface.

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER



#### TRANSMIT LINE SIDE PINS

PIN #	SIGNAL NAME	Түре	DESCRIPTION
30	TTIP_0	0	Transmit TTIP Output - Positive Polarity Signal - Channel 0:
11	TTIP_1		Transmit TTIP Output - Positive Polarity Signal - Channel 1:
21	TTIP_2		Transmit TTIP Output - Positive Polarity Signal - Channel 2:
			These output pins along with the corresponding TRING_n output pins, function as the Transmit DS3/E3/STS-1 Line output signal drivers for a given channel, of the XRT75R03D.
			Connect this signal and the corresponding TRING_n output signal to a 1:1 transformer.
		2	Whenever the Transmit Section of the Channel generates and transmits a posi- tive-polarity pulse onto the line, this output pin will be pulsed to a "higher-volt- age" than its corresponding TRING_n output pins.
	Q	Thek	Conversely, whenever the Transmit Section of the Channel generates and transmit a negative-polarity pulse onto the line, this output pin will be pulsed to a "lower-voltage" than its corresponding TRING_n output pin.
		ne	<b>Note:</b> This output pin will be tri-stated whenever the corresponding TxON_n input pin or bit-field is set to "0".
28	TRing_0	0	Transmit Ring Output - Negative Polarity Signal - Channel 0:
13	TRing_1	<b>`(</b>	Transmit Ring Output - Negative Polarity Signal - Channel 1:
19	TRing_2	4	Transmit Ring Output - Negative Polarity Signal - Channel 2:
			These output pins along with the corresponding TTIP_n output pins, function as the Transmit DS3/E3/STS-1 Line output signal drivers for a given channel, within the XRT75R03D.
			Connect this signal and the corresponding TTIP_n output signal to a 1:1 trans- former.
			Whenever the Transmit Section of the Channel generates and transmits a posi- tive-polarity pulse onto the line. This output pin will be pulsed to a "lower-volt- age" than its corresponding TTIP_n output pins.
			Conversely, whenever the Transmit Section of the Channel generates and transmit a negative-polarity pulse onto the line. This output pin will be pulsed to a "higher-voltage" than its corresponding TTIP_n output pin.
			<b>Note:</b> This output pin will be tri-stated whenever the corresponding TxON_n input pin or bit-field is set to "0".



#### TRANSMIT LINE SIDE PINS

## THREE CHANNEL E3/DS3/STS-1 LINE

PIN #	SIGNAL NAME	Түре	DESCRIPTION
31	MTIP_0	I	Monitor Tip Input - Positive Polarity Signal - Channel 0:
6	MTIP_1		Monitor Tip Input - Positive Polarity Signal - Channel 1:
17	MTIP_2		Monitor Tip Input - Positive Polarity Signal - Channel 2:
	0 <sub>313</sub>	he production	These input pins along with MRING_n function as the Transmit Drive Monitor Output (DMO) input monitoring pins. To (1) monitor the Transmit Output line signal and (2) to perform this monitoring externally, then this pin MUST be con- nected to the corresponding TTIP_n output pin via a 274 ohm series resistor. Similarly, the MRING_n input pin MUST also be connected to its corresponding TRING_n output pin via a 274 ohm series resistor. The MTIP_n and MRING_n input pins will continuously monitor the Transmit Output line signal via the TTIP_n and TRING_n output pins for bipolar activity. If these pins do not detect any bipolar activity for 128 bit periods, then the Transmit Drive Monitor circuit will drive the corresponding DMO_n output pin "High" in order to denote a possible fault condition in the Transmit Output Line signal path.
		Sh d	Notes:
		199°	<i>These input pins are inactive if the user choose to internally monitor the Transmit Output line signal.</i>
		ndh	2. Onternal Monitoring is only available as an option if the XRT75R03D in is being operated in the Host Mode.
32	MRing_0		Monitor Ring Input - Channel 0:
5	MRing_1		Monitor Ring Input - Channel 1:
16	MRing_2		Monitor Ring Input - Channel 2:
			These input pins along with MTIP_n function as the Transmit Drive Monitor Out- put (DMO) input monitoring pins. To (1) monitor the Transmit Output line signal and (2) to perform this monitoring externally, then this input pin MUST be con- nected to the corresponding TRING_n output pin via a 274 ohm series resistor. Similarly, the MTIP_n input pin MUST be connected to its corresponding TTIP_n output pin via a 274 ohm series resistor. The MTIP_n and MRING_n input pins will continuously monitor the Transmit Output line signal via the TTIP_n and TRING_n output pins for bipolar activity. If these pins do not detect any bipolar activity for 128 bit periods, then the Transmit Drive Monitor circuit will drive the corresponding DMO_n output pin "High" to indicate a possible fault condition in the Transmit Output Line signal path. <b>Notes:</b>
			<ol> <li>These input pins are inactive if the user chooses to internally monitor the Transmit Output line signal.</li> <li>Internal Monitoring is only available as an option if the XRT75R03D is baim approach in the Uset Made</li> </ol>
			<ol> <li>These input pins are inactive if the user chooses to inter the Transmit Output line signal.</li> </ol>

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### SYSTEM-SIDE RECEIVE OUTPUT AND RECEIVE CONTROL PINS

Pin #	SIGNAL NAME	Түре	DESCRIPTION
60	RLOS_0	0	Receive Loss of Signal Output Indicator - Channel 0:
104	RLOS_1		Receive Loss of Signal Output Indicator - Channel 1:
63	RLOS_2		Receive Loss of Signal Output Indicator - Channel 2:
			This output pin indicates whether or not the corresponding channel is declaring the Loss of Signal (LOS) Defect condition.
			"Low" - Indicates that the corresponding Channel is NOT currently declaring the LOS defect condition.
			"High" - Indicates that the corresponding Channel is currently declaring the LOS defect condition.
61	RLOL_0	0	Receive Loss of Lock Output Indicator - Channel 0:
103	RLOL_1 📿	9	Receive Loss of Lock Output Indicator - Channel 1:
64	RLOL_2	6 1	Receive Loss of Lock Output Indicator - Channel 2:
		And	This output pin indicates whether or not the corresponding channel is declaring the Loss of Lock (LOL) Condition.
		0	CLow" - Indicates that the corresponding Channel is NOT declaring the LOL condition.
		20	"High" Indicates that the corresponding Channel is currently declaring the LOL condition
			<b>NOTE:</b> The Receive Section of a given channel will declare the LOL condition anytime the frequency of the Recovered Clock (RCLK) signal differs from that of the E3CLK input clock signal (if the channel is operating in the E3 Mode), the DS3CLK input clock signal (if the channel is operating in the DS3 Mode) the STS-1CLK input clock signal (if the channel is operating in the DS3 Mode) the STS-1 Mode), or that clock signal which is derived from the SFM Clock Synthesizer block (if the chip is operating in the Single-Frequency Mode) by 0.5% (or 5000ppm) or more.
58	RPOS_0/	0	Receive Positive Data Output - Receive Data Output - Channel 0:
112	RDATA_0		Receive Positive Data Output - Receive Data Output - Channel 1:
53	RPOS_1/		Receive Positive Data Output - Receive Data Output - Channel 2:
	RDATA_1 RPOS_2/ RDATA_2		The function of these output pins depends upon whether the channel/device has been configured to operate in the Single-Rail or Dual-Rail Mode.
			Dual-Rail Mode - Receive Positive Polarity Data Output
			If the channel/device has been configured to operate in the Dual-Rail Mode, then all positive-polarity data will be output via this output pin. The negative- polarity data will be output via the corresponding RNEG_n output pin. In other words, the Receive Section of the corresponding Channel will pulse this output pin "High" for one period of RCLK_n anytime it receives a positive-polarity pulse via the RTIP/RRING input pins.
			The data that is output via this pin is updated upon a user-selectable edge of the RCLK_n output clock signal.
			Single-Rail Mode - Receive Data Output
			If the channel/device has been configured to operate in the Single-Rail Mode, then all Receive (or Recovered) data will be output via this output pin.
			The data that is output via this pin is updated upon a user-selectable edge of the RCLK_n output clock signal.





THREE CHANNEL E3/DS3/STS-1 LINE

#### SYSTEM-SIDE RECEIVE OUTPUT AND RECEIVE CONTROL PINS

Pin #	SIGNAL NAME	Түре	DESCRIPTION		
57	RNEG_0/LCV_0	0	Receive Negative Data Output/Line Code Violation Indicator - Channel 0:		
113	RNEG_1/LCV_1		Receive Negative Data Output/Line Code Violation Indicator - Channel 1:		
52	RNEG_2/LCV_2		Receive Negative Data Output/Line Code Violation Indicator - Channel 2:		
			The function of these pins depends on whether the XRT75R03D is configured in Single Rail or Dual Rail mode.		
	0 <sub>ata</sub>	he pro	Dual-Rail Mode - Receive Negative Polarity Data Output If the channel/device has been configured to operate in the Dual-Rail Mode, then all negative-polarity data will be output via this output pin. The positive- polarity data will be output via the corresponding RPOS_n output pin. In other words, the Receive Section of the corresponding Channel will pulse this output pin "High" for one period of RCLK_n anytime it receives a negative-polarity pulse via the RTIP/RRING input pins.		
		Nee.	The data that is output via this pin is updated upon a user-selectable edge of the RCLK_n output clock signal.		
		and ma	output In this configuration, the Receive Section of the Channel will pulse this output pin "High" for at least one RCLK period whenever it detects either an LCV (Line		
			Code Violation) or an EXZ (Excessive Zero Event). The data that is output via this pin is updated upon a user-selectable edge of the RCLK_n output clock signal.		
56 114 51	RxClk_0 RxClk_1 RxClk_2	0	Receive Clock Output - Channel 0: Receive Clock Output - Channel 1: Receive Clock Output - Channel 2: This output pin functions as the Receive or recovered clock signal. All Receive (or recovered) data will output via the RPOS_n and RNEG_n outputs upon the user-selectable edge of this clock signal. Additionally, if the device/channel has been configured to operate in the Single- Rail Mode, then the RNEG_n/LCV_n output pins will also be updated upon the user-selectable edge of this clock signal.		
75 95 84	REQEN_0 REQEN_1 REQEN_2	Ι	<ul> <li>Receive Equalization Enable Input - Channel 0:</li> <li>Receive Equalization Enable Input - Channel 1:</li> <li>Receive Equalization Enable Input - Channel 2:</li> <li>These input pins are used to either enable or disable the Receive Equalizer block within the Receive Section of the corresponding channel.</li> <li>"Low" - Disables the Receive Equalizer within the corresponding channel.</li> <li>"High" - Enables the Receive Equalizer within the corresponding channel.</li> <li><i>Notes:</i> <ol> <li>For virtually all applications, it is recommend that this input pin be pulled "High" and enable the Receive Equalizer.</li> <li>This input pin ignored and should be tied to GND if the XRT75R03D has been configured to operate in the Host Mode.</li> <li>These input pins are internally pulled low.</li> </ol> </li> </ul>		

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### SYSTEM-SIDE RECEIVE OUTPUT AND RECEIVE CONTROL PINS

Pin #	SIGNAL NAME	Түре	DESCRIPTION
71	LOSMUT/ INT	I/O	Muting Upon LOS Enable/Interrupt Output Pin This input pin is used to configure the Receive Section, in each of the three channels within the chip, to automatically pull their corresponding Recovered Data Output pins (e.g. RPOS_n and RNEG_n) to GND anytime and for the duration that the Receive Section declares the LOS defect condition. In other words, this feature if enabled will cause the Receive Channel to automatically mute the Recovered data anytime and for the duration that the Receive Section declares the LOS defect condition.
	୧	The Lashe	"Low" - Disables the Muting upon LOS feature. In this setting the Receive Sec- tion will NOT automatically mute the Recovered Data whenever it is declaring the LOS defect condition. "High" - Enables the Muting upon LOS feature. In this setting the Receive Sec- tion will automatically mute the Recovered Data whenever it is declaring the LOS defect condition. Notes:
		she	the Microprocessor Serial Interface, if the XRT75R03D has been configured to operate in the Host Mode.
		and	2. This configuration setting applies globally to each of the three (3) channels within the XRT75R03D.
99	LOSTHR	1	<ul> <li>Analog LOS Detector Threshold Level Select Input: This input pin permits the user to select both of the following parameters for the Analog LOS Detector within each of the three Receive Sections within the XRT75R03D.</li> <li>1. The Analog LOS Defect Declaration Threshold (e.g., the maximum signal level that the Receive Section of a given channel must detect before declaring the LOS Defect Clearance Threshold (e.g., the minimum signal level that the Receive Section of a given channel must detect before declaring the LOS Defect Clearance Threshold (e.g., the minimum signal level that the Receive Section of a given channel must detect before clearing the LOS Defect condition)</li> <li>Setting this input pin "High" selects one set of Analog LOS Defect Declaration</li> </ul>
			and Clearance thresholds. Setting this input pin "Low" selects the other set of Analog LOS Defect Declaration and Clearance thresholds. Please see Table 10 for more details.
			<b>Note:</b> This input pin is only active if at least one channel within the XRT75R03D has been configured to operate in the DS3 or STS-1 Modes.



REV. 1.0.4



THREE CHANNEL E3/DS3/STS-1 LINE

#### SYSTEM-SIDE RECEIVE OUTPUT AND RECEIVE CONTROL PINS

Pin #	SIGNAL NAME	Түре	DESCRIPTION
69	RxMON/ SDO	he pro	<ul> <li>Receiver Monitor Mode Enable:</li> <li>This input pin permits the user to configure each of the three (3) Receive Sections within the XRT75R03D, into the Receiver Monitor Mode.</li> <li>If the user configures each of the Receive Sections into the Receive Monitor Mode, then each of the Receiver Sections will be able to receive a nominal DSX-3/STSX-1 signal that has been attenuated by 20dB of flat loss along with 6dB of cable loss, in an error-free manner. This allows monitoring very weak signal, however the internal LOS circuitry is suppressed and LOS will never assert nor LOS be declared when operating under this mode.</li> <li>"Low" - Configures each of the Receive Sections to operate in the Normal Mode.</li> <li>"High" - Configures each of the Receive Sections to operate in the Receive Monitor Mode.</li> <li><i>Notes:</i> <ol> <li>This input pin will function as the SDO (Serial Data Output pin within the Microprocessor Serial Interface) whenever the XRT75R03D has been configured to operate in the Host Mode.</li> <li>This configuration setting applies globally to all three (3) of the Channels within the XRT75R03D.</li> <li>In HOST Mode, each channel can be independently configured to be a monitoring channel by setting the bits in the channel control registers.</li> </ol> </li> </ul>
68	RxON/ SDI		<ul> <li>Receive ON:</li> <li>This input pin permits the user to either turn on or turn off each of the three (3) Receive Sections within the XRT75R03D. If the user turns on the Receive Sections of each channel, then all three channels will begin to receive the incoming DS3, E3 or STS-1 data-streams via the RTIP_n and RRING_n input pins.</li> <li>Conversely, if the user turns off the Receive Section, then the entire Receive Section (e.g., the AGC and Receive Equalizer blocks, Clock Recovery PLL, etc.) will be powered down.</li> <li>"Low" - Shuts off the Receive Sections within each of the three (3) Channels in the XRT75R03D.</li> <li>"High" - Turns on the Receive Sections within each of the three (3) Channels in the XRT75R03D.</li> <li><i>Notes:</i> <ol> <li>This input pin will function as the SDI (Serial Data Input pin within the Microprocessor Serial Interface) whenever the XRT75R03D has been configured to operate in the Host Mode.</li> <li>This configuration setting applies globally to all three (3) of the channels within the XRT75R03D.</li> </ol> </li> </ul>

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### SYSTEM-SIDE RECEIVE OUTPUT AND RECEIVE CONTROL PINS

PIN #	SIGNAL NAME	Түре	DESCRIPTION
66	RxClkINV/ CS	I	Receive Clock Invert Input - Chip SelectI: In Hardware Mode is pin is used to configure the Receive Sections of the three (3) channels in the XRT75R03D to either output the recovered data via the RPOS_n or RNEG_n/LCV_n output pins upon either the rising or falling edge of the RCLK_n clock output signal.
			"Low" - Configures each of the Receive Sections to output the recovered data via the RPOS_n and RNEG_n/LCV_n output pins upon the rising edge of the RCLK_n output clock signal.
			"High" - Configures each of the Receive Sections to output the recovered data via the RPOS_n and RNEG_n/LCV_n output pins upon the falling edge of the
		12	Notes:
	Ŷ	The Lashe and	<ol> <li>This input pin will function as the CS (Chip Select Input pin) of the Microprocessor Serial Interface when the XRT75R03D has been configured to operate in the Host Mode.</li> </ol>
		No.	<i>C</i> . This configuration setting applies globally to all three (3) of the channels within the XRT75R03D.
		and	3. If the Receive Sections are configured to operate in the Single-Rail Mode, then the LCV_n output pin will be updated on the user-selected edge of the RCLK_n signal, per this configuration selection.
106	SFM_EN	I	Single Frequency Mode Enable:
	_		This input pin is used to configure the XRT75R03D to operate in the SFM (Sin- gle Frequency) Mode.
			When this feature is invoked the Single-Frequency Mode Synthesizer will become active. By applying a 12,288MHz clock signal to pin 109, STS-1CLK/ 12M the XRT75R03D will, depending upon which mode the user has configured each of the three channels, generate all of the appropriate clock signals (e.g., 34.368MHz, 44.736MHz or 51.84. Further, the XRT75R03D internal circuitry will route each of these synthesized clock signals to the appropriate nodes of the corresponding three channels in the XRT75R03D.
			"Low" - Disables the Single Frequency Mode. In this configuration setting, the user is required to supply to the E3CLK, DS3CLK or STS-1CLK input pins all of the relevant clock signals that are to be used within the chip.
			"High" - Enables the Single-Frequency Mode. A 12.288MHz clock signal MUST be applied to pin 109 (STS-1CLK/12M).
			<b>Note:</b> This input pin is internally pulled low.



#### THREE CHANNEL E3/DS3/STS-1 LINE

#### SYSTEM-SIDE RECEIVE OUTPUT AND RECEIVE CONTROL PINS

PIN #	SIGNAL NAME	Түре	DESCRIPTION
107	E3Clk/ CLK_EN	I	E3 Reference Clock Input/SFM Clock Output Enable: The function of this chip depends upon whether or not the XRT75R03D has been configured to operate in the Single-Frequency Mode. If NOT operating in the Single-Frequency Mode
			If the XRT75R03D has NOT been configured to operate in the SFM (Single Frequency) Mode, and if at least one channel is to be operated in the E3 Mode, then a $34.368MHz \pm 20$ ppm clock signal must be applied to this input pin.
			If the user does not intend to operate the device in the SFM Mode nor operate any of the channels in the E3 Mode tie this input signal to GND.
			If operating in the Single-Frequency Mode
	0'ar	hep	If the XRT75R03D is operated in the SFM Mode and is to output a clock signal that is synthesized from the SFM Clock Synthesizer PLL so that the user's system can use this clock signal as a timing source, pull this input pin to a logic "High".
	<b>\$</b>	SACO	If the user pull this input pin "High", then the XRT75R03D will output the line rate clock signal that has been synthesized for Channel 1, via pin 108 (DS3CLK/CLK_OUT).
	ſ	and	For example, if Channel 1 is configured to operate in the STS-1 Mode and this input pin is pulled "High", then the XRT75R03D will output a 51.84MHz clock signal via the CLK_OUT pin.

the use. , ate clock signa ... (DS3CLK/CLK\_OUT). For example, if Channel 1 is contrue. input pin is pulled "High", then the XRT75two. signal via the CLK\_OUT pin.

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### SYSTEM-SIDE RECEIVE OUTPUT AND RECEIVE CONTROL PINS

Pin #	SIGNAL NAME	Түре	DESCRIPTION
108	DS3CIk/ CLK_OUT	I/O	DS3 Reference Clock Input/SFM Synthesizer Clock Output: The function of this chip depends upon whether or not the XRT75R03D has been configured to operate in the SFM Mode. If NOT operating in the Single-Frequency Mode If the XRT75R03D has NOT been configured to operate in the SFM Mode, and if at least one channel of the XRT75R03D is configured in the DS3 Mode, then a clock signal with a frequency of 44.736 MHz ± 20ppm must be applied to this input pin. If the XRT75R03D is not configured to operate in the SFM Mode and none of the channels are to be operated in the DS3 Mode, tie this input signal to GND. If operating in the Single-Frequency Mode If the XRT75R03D is configured to operate in the SFM Mode, and if pin 107 (E3CLK/CLKEN) is pulled to a logic "High", then the SFM Clock Synthesizer PLL generated line rate clock signal for Channel 1 will be output via this output pin. In this mode, this particular output pin can be used by the user's system as a timing source.
109	STS-1Clk/ 12M	and	STS-1 Reference Clock Input/12.288MHz SFM Reference Clock Input: The function of this pin depends upon whether or not the XRT75R03D has been configured to operate in the SFM Mode. If NOT operating in the Single-Frequency Mode If the XRT75R03D has NOT been configured to operate in the SFM Mode and if at least one channel is intended to operate in the STS-1 Mode, then the user must supply a clock signal with a frequency of 51.84MHz ± 20ppm to this input pin If the XRT75R03D is not to be operated in the SFM Mode and none of the chan- nels are to be operated in the STS-1 Mode, tie this input signal to GND. If operating in the Single-Frequency Mode If the XRT75R03D has been configured to operate in the SFM Mode a clock sig- nal with a frequency of 12.288MHz ± 20ppm MUST be applied to this input pin. The SFM Synthesizer will then synthesize all of the appropriate line rate fre- quencies (e.g., 34.368MHz for E3, 44.736MHz for DS3, and 51.84MHz for STS- 1) based upon this 12.288MHz Reference Clock source.




R *REV. 1.0.4* 



#### **RECEIVE LINE SIDE PINS**

Pin #	SIGNAL NAME	Түре	DESCRIPTION
79	RTIP_0	I	Receive TIP Input - Channel 0:
91	RTIP_1		Receive TIP Input - Channel 1:
88	RTIP_2		Receive TIP Input - Channel 2:
			These input pins along with the corresponding RRing_n input pin function as the Receive DS3/E3/STS-1 Line input signal receiver for a given channel of the XRT75R03D.
			Connect this signal and the corresponding RRING_n input signal to a 1:1 transformer.
		6	Whenever the RTIP/RRING input pins are receiving a positive-polarity pulse within the incoming DS3, E3 or STS-1 line signal, then this input pin will be pulsed to a "higher-voltage" than its corresponding RRING_n input pin.
	dara ta	he pro	Conversely, whenever the RTIP/RRING input pins are receiving a negative- polarity pulse within the incoming DS3, E3 or STS-1 line signal, then this input pin will be pulsed to a "lower-voltage" than its corresponding RRING_n input pin.
78	RRing_0	IQ.	Receive Ring Input - Channel 0:
92	RRing_1	20 C	Receive Ring Input - Channel 1:
87	RRing_2	9	Receive Ring Input - Channel 2:
		ma	These input pins along with the corresponding RTIP_n input pin function as the Receive DS3/E3/STS-1 Line input signal receiver for a given channel of the XRT75R03D.
			Connect this signal and the corresponding RTIP_n input signal to a 1:1 trans- former.
			Whenever the RTIP/RRING input pins are receiving a positive-polarity pulse
			within the incoming DS3, E3 or STS-1 line signal, then this input pin will be pulsed to a "lower-voltage" than its corresponding RTIP_n input pin.
			Conversely, whenever the RTIP/RRING input pins are receiving a negative- polarity pulse within the incoming DS3, E3 or STS-1 line signal, then this input pin will be pulsed to a "higher-voltage" than its corresponding RTIP_n input pin.
		l	

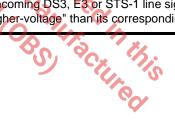



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

## GENERAL CONTROL PINS

PIN #	SIGNAL NAME	Түре	DESCRIPTION
65	SR/DR	The She and	<ul> <li>Single-Rail/Dual-Rail Select Input - Chip Level This input pin is used to configure the XRT75R03D to operate in either the Sin- gle-Rail or Dual-Rail Mode.</li> <li>If the XRT75R03D is configured to operate in the Single-Rail Mode, then all of the following will happen.</li> <li>All of the B3ZS/HDB3 Encoder and Decoder blocks in the XRT75R03D will be enabled.</li> <li>The Transmit Section of each channel will accept all of the outbound data from the System-side Equipment via the TPDATA_n (or TxDATA_n) input pin.</li> <li>The Receive Section of each channel will output all of the recovered data to the System-side Equipment via the RPOS output pin.</li> <li>Each of the RNEG/LCV output pins will now function as the LCV (Line Code Violation or Excessive Zero Event) indicator output pin.</li> <li>If the user configures the device to operate in the Dual-Rail Mode, then all of the following will happen.</li> <li>All of the B3ZS/HDB3 Encoder and Decoder blocks in the XRT75R03D will be disabled.</li> <li>The Transmit Section of each channel will accept positive-polarity data via the TPDATA_n input pin, and negative-polarity data via the TNDATA_n input pin.</li> <li>The Receive Section of each channel will pulse the RPOS_n output pin "High" for one period of RCLK_n for each time a positive-polarity pulse is received via the RTIP_n/RRING_n input pins.</li> <li>Likewise, the Receive Section of each channel will pulse the RPOS_n output pin "High" for one period of RCLK_n for each time a positive-polarity pulse is received via the RTIP_n/RRING_n input pins.</li> <li>Likewise, the Receive Section of each channel will also pulse the RNEG_n output pin "High" for one period of RCLK_n for each time a negative-polarity pulse is received via the RTIP_n/RRING_n input pins.</li> <li>"Low" - Configures the XRT75R03D to operate in the Dual-Rail Mode.</li> <li>"High" - Configures the XRT75R03D to operate in the Single-Rail Mode.</li> <li><i>Notes:</i> <ol> <li>This input pin is ignored and should be tied to GND if the XRT75R03D has</li></ol></li></ul>
76 94 85	E3_0 E3_1 E3_2	Ι	<ul> <li>E3 Mode Select Input - Channel 0</li> <li>E3 Mode Select Input - Channel1</li> <li>E3 Mode Select Input - Channel 2</li> <li>This input pin, along with the corresponding STS-1/DS3_n input pin is used the to configure a given channel within the XRT75R03D into either the DS3, E3 or STS-1 Modes.</li> <li>"High" - Configures the corresponding channel to operate in the E3 Mode.</li> <li>"Low" - Configures the corresponding channel to operate in either the DS3 or STS-1 Modes, depending upon the setting of the corresponding STS-1/DS3_n input pin.</li> <li>Notes: <ol> <li>This input pin is ignored and should be tied to GND if the XRT75R03D has been configured to operate in the Host Mode.</li> <li>This input pin is internally pulled low.</li> </ol> </li> </ul>



## THREE CHANNEL E3/DS3/STS-1 LINE

#### **GENERAL CONTROL PINS**

PIN #	SIGNAL NAME	Түре	DESCRIPTION				
72 98 81 74 96 83	STS-1/ <u>DS3</u> _0 STS-1/ <u>DS3</u> _1 STS-1/ <u>DS3</u> _2	The Dro She Ret and ma	STS-1/DS3 Select Input - Channel 0 STS-1/DS3 Select Input - Channel 1 STS-1/DS3 Select Input - Channel 2 This input pin, along with the corresponding E3_n input pin is used the to config- ure a given channel within the XRT75R03D into either the DS3, E3 or STS-1 Modes. "High" - Configures the corresponding channel to operate in the STS-1 Mode provided that the corresponding E3_n input pin is pulled "Low". "Low" - Configures the corresponding channel to operate in DS3 Mode provided that the corresponding E3_n input pin is pulled "Low".				
			RLB_n       LLB_n       Loopback Mode         0       0       Normal (No Loop-Back) Mode         0       1       Analog Loop-Back Mode         1       0       Remote Loop-Back Mode         1       1       Digital Local Loop-Back Mode         Note:       This input pin is ignored and should be connected to GND if the XRT75R03D is operating in the HOST Mode.				
73	LLB_0	I	Loop-Back Select - LLB Input - Channel 0				
97	LLB_1		Loop-Back Select - LLB Input - Channel 1				
82	LLB_2		Loop-Back Select - LLB Input - Channel 2 Please see description above for RLB_n				
102	TEST	***	Factory Test Mode Input Pin This pin must be connected to GND for normal operation. <b>Note:</b> This input pin is internally pulled "Low".				

### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### ΕX Experience Our Connectivity. REV. 1.0.4

#### **GENERAL CONTROL PINS**

PIN #	SIGNAL NAME	Түре	DESCRIPTION           In-Circuit Test Input:           Setting this pin "Low" causes all digital and analog outputs to go into a high- impedance state to allow for in-circuit testing. For normal operation, set this pin "High".           NOTE: This pin is internally pulled "High".	
62	ICT	I		
70	HOST/HW		<ul> <li>HOST/Hardware Mode Select:</li> <li>Tie this pin "High" to configure the XRT75R03D in HOST mode. Tie this "Low" to configure in Hardware mode.</li> <li>When the XRT75R03D is configured in HOST mode, the states of many of the discrete input pins are controlled by internal register bits.</li> <li>Note: This pin is internally pulled up.</li> </ul>	

## CONTROL AND ALARM INTERFACE

5

0

Pin #	SIGNAL NAME	Түре	DESCRIPTION
122	RXA	****	External Resistor of 3.01K $\Omega \pm 1\%$ . Should be connected between RxA and RxB for internal bias.
123	RXB	****	External Resistor of 3.01K $\Omega$ ± 1%. Should be connected between RxA and RxB for internal bias.

## JITTER ATTENUATOR INTERFACE

PIN #	SIGNAL NAME	Түре		0,	O DES	CRIPTION
44	JA0	I	In Hard	ttenuator Sele ware Mode, th in the table be	nis pin along with	pin 42 configures the Jitter Attenuato
				JA0	JA1	Mode
				0	0	FIFO Depth = 16 bits
				0	1	FIFO Depth = 32 bits
				1	0	SONET/SDH De-Sync Mode
				1	1	Jitter Attenuator Disabled
			Notes:			
			1.	The setting in the XRT7		ns applies globally to all three (3) chan
			2.		in is ignored and d to operate in th	should be tied to GND if the XRT75R Host Mode.



## THREE CHANNEL E3/DS3/STS-1 LINE

#### JITTER ATTENUATOR INTERFACE

42	JA1	I	Jitter Attenuator Select 1: Please see the Description above for JA0					
43	JATx/Rx	I	Jitter Attenuator in Transmit/Receive Path Select Input: This input pin is used to configure the Jitter Attenuator to operate in either the Transmit or Receive path within each of the three (3) channels of the XRT75R03D. "Low" - Configures the Jitter Attenuator within each channel to operate in the Receive Path. "High" - Configures the Jitter Attenuator within each channel to operate in the Transmit Path.					
		6	<ul> <li>Notes:</li> <li>1. The setting of this input pin applies globally to all three (3) channels of the XRT75R03D.</li> </ul>					
	ara	NO.	<ol> <li>This input pin is ignored and should be tied to GND if the XRT75R03D is configured to operate in the Host Mode or if the Jitter Attenuators are disabled.</li> </ol>					

# Microprocessor Serial INTERFACE - (HOST MODE)

Pin #	SIGNAL NAME	Түре	DESCRIPTION
69	SDO/RxMON	1/0	<ul> <li>Microprocessor Serial Interface - Serial Data Output:</li> <li>This pin serially outputs the contents of a specified on-chip Command Register during READ Operations via the Microprocessor Serial Interface. The data which is output via this pin is updated upon the falling edge of the SCLK clock signal.</li> <li>This output pin will be tri-stated upon completion of a given READ operation.</li> <li><b>Note:</b> This pin functions as the RxMON input pin if the XRT75R03D has been configured to operate in the Hardware Mode.</li> </ul>
68	SDI/RxON	I	<ul> <li>Microprocessor Serial Interface - Serial Data Input: This input pin functions as the Serial Data Input pin for the Microprocessor Serial Interface. In particular, this input pin will accept all of the following data in a serial manner during READ and WRITE operations with the Microprocessor Serial Interface.</li> <li>The READ/WRITE indicator bit.</li> <li>The Address Value of the Targeted Command Register for this particular READ or WRITE operation.</li> <li>The Data to be written into the targeted Command Register for a given WRITE operation.</li> <li>All data that is applied to this input will be sampled upon the rising edge of the SCLK input clock signal.</li> <li>Note: This input pin will function as the RxON input pin if the XRT75R03D has been configured to operate in the Hardware Mode.</li> </ul>

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

Microprocessor Serial INTERFACE - (HOST MODE)

PIN #	SIGNAL NAME	Түре	DESCRIPTION						
67	SCIk/TCLKINV	I	Microprocessor Serial Interface -Serial Clock Input: This input pin functions as the Clock Source for the Microprocessor Serial Inter- face. Each time the user wishes to perform a READ or WRITE operate with the on- chip Command Registers via the Microprocessor Serial Interface, the user MUST do the following.						
			• Assert the CS input pin by toggling it "Low", and						
			<ul> <li>Provide 16 Clock Periods to this particular input pin for each READ and WRITE operation.</li> </ul>						
	Q	The	The Microprocessor Serial Interface will sample any data residing upon the SDI input pin, upon the rising edge of this clock signal. Further, for READ operations, the Microprocessor Serial Interface will serially output the contents of a target Command Register upon the falling edge of this clock signal. <b>Note:</b> The maximum frequency of this particular clock signal is 10MHz.						
66	CS/RCLKINV	4%	Microprocessor Serial Interface - Chip Select Input:						
		and	This input pin should be pulled "Low" whenever a READ or WRITE operation is to be executed to the on-chip Command Registers, via the Microprocessor Serial Interface.						
			This input pin should remain "Low" until the READ or WRITE operation has been completed. This input pin should be pulled "High" at all other times. <b>Note:</b> If the XRT75R03D has been configured to operate in the Host Mo						
			then this input pin will function as the RCLKINV input pin.						
71	INT/LOSMUT	0	Microprocessor Serial Interface - Interrupt Request Output: If the XRT75R03D has been configured to operate in the Host Mode, then pin becomes the Interrupt Request Output for the XRT75R03D. During normal conditions, this output pin will be pulled "High". However, if user enables certain interrupts within the device, and if those conditions oc then the XRT75R03D will request an interrupt from the Microprocessor by gling this output pin "Low".						
			<ul> <li>Notes:</li> <li>1. If the XRT75R03D is configured to operate in the Hardware Mode, then this pin functions as the LOSMUT input pin.</li> <li>2. This pin will remain "Low" until the Interrupt has been served.</li> </ul>						
101	RESET	I	Microprocessor Serial Interface - H/W RESET Input: Pulsing this input "Low" causes the XRT75R03D to reset the contents of the on- chip Command Registers to their default values. As a consequence, the XRT75R03D will then also be operating in its default condition. For normal operation pull this input pin to a logic "High". <b>Note:</b> This input pin is internally pulled high.						

#### POWER SUPPLY AND GROUND PINS

PIN #	PIN NAME	Түре	DESCRIPTION				
			Receive Analog VDD				
77	RxAVDD_0	****					
93	RxAVDD_1						
86	RxAVDD_2						



R REV. 1.0.4



## THREE CHANNEL E3/DS3/STS-1 LINE

#### POWER SUPPLY AND GROUND PINS

Pin #	PIN NAME	Түре	DESCRIPTION					
	TRANSMIT ANALOG VDD							
39	TxAVDD_0	****						
128	TxAVDD_1							
23	TxAVDD_2							
121	REFAVDD							
			JITTER ATTENUATOR ANALOG VDD					
46	JAVDD_0	****						
120	JAVDD_1							
45	JAVDD_2							
	9.7	0	DIGITAL VDD					
29	TxVDD_0	****						
12	TxVDD_1	, 0,						
20	TxVDD_2							
55	RxDVDD_0	°Qx	C <sub>2</sub>					
111	RxDVDD_1 🤣	<b>.</b> .	6.					
54	RxDVDD_2	0						
119	JADVDD	3	Do Nr.					
110	EXDVDD	91						
	•		GROUNDS GROUNDS BROUND					
41	TxAGND_0	****	6 8 9					
126	TxAGND_1		8 6 h					
15	TxAGND_2							
80	RxAGND_0							
90	RxAGND_1							
89	RxAGND_2							
47	JAGND_0		(O, 4x h)					
118	JAGND_1							
48	JAGND_2							
49	AGND_0							
116	AGND_1		Š,					
100	AGND_2		*					
124	REFGND							
27	TxGND_0							
14	TxGND_1							
18	TxGND_2							
59	RxDGND_0							
115	RxDGND_1							
50	RxDGND_2							
117	JADGND							
105	EXDGND							

## XRT75R03D THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

## EXAR Experience Our Connectivity. ZER REV. 1.0.4

Pin #	PIN NAME	Түре	Сомментя
1	TxON_1	I	This input pin is internally pulled 'High'.
2	TNDATA_1	I	
3	TPDATA_1	I	
4	TxCLK_1	I	
5	MRING_1	I	
6	MTIP_1	X	
7	TAOS_1	A C	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
8	TAOS_2	She	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
9	TxLEV_1	30	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
10	TxLEV_2	1.0	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
11	TTIP_1	0	D OD YUG
12	DVDD	***	
13	TRING_1	0	e b n
14	TxAGND_1	***	ra in ne:
15	TxAGND_2	***	
16	MRING_2	I	
17	MTIP_2	I	
18	GND	***	
19	TRING_2	0	C
20	TxVDD_2	***	
21	TTIP_2	0	
22	DMO_2	0	
23	TxAVDD_2	***	
24	TNDATA_2	I	
25	TPDATA_2	I	
26	TxCLK_2	I	
27	TxGND_0	***	
28	TRING_0	0	
29	TxVDD_0	***	



THREE CHANNEL E3/DS3/STS-1 LINE

Pin #	PIN NAME	Түре	Comments
30	TTIP_0	0	
31	MTIP_0	I	
32	MRING_0	I	
33	TNDATA_0	I	
34	TPDATA_0	I	
35	TxCLK_0	I	
36	TxLEV_0	I	1. Not Active while in Host Mode
			2. This input pin is internally pulled low.
37	TAOS_0	0	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
38	TxON_0		This input pin is internally pulled 'High'.
39	TxAVDD_0	***	40.
40	DMO_0	0	
41	TxAGND_0	***	C D
42	JA1		Not Active while in Host Mode
43	JATx/Rx	I	Not Active while in Host Mode
44	JA0	I	Not Active while in Host Mode
45	JAVDD_2	***	
46	JAVDD_0	***	de no nije
47	JAGND_0	***	
48	JAGND_2	***	Contractin Contractin S Regultis
49	AGND_0	***	
50	RxDGND_2	***	
51	RCLK_2	0	<sup>C</sup> C
52	RNEG_2/LCV_2	0	· · · · · · · · · · · · · · · · · · ·
53	RPOS_2	0	
54	RxDVDD_2	***	
55	RxDVDD_0	***	
56	RCLK_0	0	
57	RNEG_0/LCV_0	0	
58	RPOS_0	0	
59	RxDGND_0	***	
60	RLOS_0	0	
61	RLOL_0	0	



REV. 1.0.4

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

PIN NAME	Түре	Сомментя
ICT	I	This input pin is internally pulled low.
RLOS_2	0	
RLOL_2	0	
SR/DR	I	1. Not Active while in Host Mode
		2. This input pin is internally pulled low.
RCLKINV (CS)	I	
TCLKINV (SCLK)	Ι	
RxON (SDI)	X	This input pin is internally pulled low.
RxMON (SDO)	1/00	
HOST/HW		This input pin is internally pulled low.
LOSMUT (INT)	1/0	q <sub>L</sub>
STS-1/DS3_0	1.6	1. Not Active while in Host Mode
	80	2. This input pin is internally pulled low.
LLB_0		Not Active while in Host Mode
RLB_0	I	Not Active while in Host Mode
REQEN_0	I	1. Not Active while in Host Mode
<b>F</b> 2 0		<ol> <li>This input pin is internally pulled low.</li> <li>Not Active while in Host Mode</li> </ol>
E3_0	I	2. This input pin is internally pulled low.
RxAVDD_0	***	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
RRING_0	I	ted maned
RTIP_0	I	Contradio
RxAGND_0	***	
STS-1/DS3_2	I	1. Not Active while in Host Mode
		2. This input pin is internally pulled low.
LLB_2	Ι	Not Active while in Host Mode
RLB_2	I	Not Active while in Host Mode
REQEN_2	I	1. Not Active while in Host Mode
		<ol> <li>This input pin is internally pulled low.</li> <li>Not Active while in Host Mode</li> </ol>
E3_2	1	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
RxAVDD_2	***	
RRING_2	I	
RTIP_2	I	
RxAGND_2	***	
RxAGND_1	***	
	ICT RLOS_2 RLOL_2 SR/DR RCLKINV (CS) TCLKINV (SCLK) RXON (SDI) RXMON (SDO) HOST/HW LOSMUT (INT) STS-1/DS3_0 LLB_0 RLB_0 REQEN_0 REQEN_0 REQEN_0 RXAVDD_0 RXING_0 RTIP_0 RXAVDD_0 RTIP_0 RXAGND_0 RTIP_0 RXAGND_0 RTIP_0 RXAGND_0	ICT       I         RLOS_2       O         RLOL_2       O         SR/DR       I         RCLKINV (CS)       I         TCLKINV (SCLK)       I         RXON (SDI)       I         RXMON (SDO)       I/O         HOST/HW       I/O         LOSMUT (INT)       I/O         STS-1/DS3_0       I         RLB_0       I         REQEN_0       I         RXAVDD_0       ****         RRING_0       I         RXAGND_0       ****         RLB_2       I         RXAGND_1       I         RXAGND_0       ****         REQEN_2       I         RXAGND_1       ****         REQEN_2       I         RXAGND_1       ****         REQEN_2       I         RXAQUD_2       ****         RRING_2       I         RXAQUD_2       <



THREE CHANNEL E3/DS3/STS-1 LINE

Pin #	PIN NAME	Түре	Comments
91	RTIP_1	I	
92	RRING_1	I	
93	RxAVDD_1	***	
94	E3_1	I	1. Not Active while in Host Mode
05			<ol> <li>This input pin is internally pulled low.</li> <li>Not Active while in Host Mode</li> </ol>
95	REQEN_1	I	<ol> <li>Not Active while in Host Mode</li> <li>This input pin is internally pulled low.</li> </ol>
96	RLB_1	I	Not Active while in Host Mode
97	LLB_1		Not Active while in Host Mode
98	STS-1/DS3	<b>1</b>	1. Not Active while in Host Mode
	6		2. This input pin is internally pulled low.
99	LOSTHR		4 -
100	AGND_2	***	
101	RESET	nd a	This input pin is internally pulled high.
102	TEST		This input pin is internally pulled low.
103	RLOL_1	0	D On Up
104	RLOS_1	0	
105	EXDGND	***	o b n
106	SFM_EN	I	This input pin is internally pulled low.
107	E3CLK/CLK_EN	Ι	Pro prop
108	DS3CLK/ CLK_OUT	I/O	
109	STS-1CLK/12M	Ι	
110	EXDVDD	***	
111	RxDVDD_1	***	<b>℃</b>
112	RPOS_1	0	
113	RNEG_1/LCV_1	0	
114	RCLK_1	0	
115	RxDGND_1	***	
116	AGND_1	***	
117	JADGND	***	
118	JAGND_1	***	
119	JADVDD	***	
120	JADVDD_1	***	
121	REFAVDD	***	



REV. 1.0.4

#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### XRT75R03D PIN LISTING IN NUMERICAL ORDER

Pin #	PIN NAME	Түре	Сомментя
122	RXA	***	
123	RXB	***	
124	REFGND	***	
125	TxON_2	I	This input pin is internally pulled 'High'.
126	TxAGND_1	***	
127	DMO_1	0	
128	TxAVDD_1	***	

deres sheet are no products mentioned in this order being mentioned in this order being mentioned in this ordered ordered menus activities ordered




### 1.0 R<sup>3</sup> TECHNOLOGY (RECONFIGURABLE, RELAYLESS REDUNDANCY)

Redundancy is used to introduce reliability and protection into network card design. The redundant card in many cases is an exact replicate of the primary card, such that when a failure occurs the network processor can automatically switch to the backup card. EXAR's R<sup>3</sup> technology has re-defined E3/DS-3/STS-1 LIU design for 1:1 and 1+1 redundancy applications. Without relays and one Bill of Materials, EXAR offers multi-port, integrated LIU solutions to assist high density agregate applications and framing requirements with reliability. The following section can be used as a reference for implementing R<sup>3</sup> Technology with EXAR's world leading line interface units.

#### 1.1 Network Architecture

A common network design that supports 1:1 or 1+1 redundancy consists of N primary cards along with N backup cards that connect into a mid-plane or back-plane architecture without transformers installed on the network cards. In addition to the network cards, the design has a line interface card with one source of transformers, connectors, and protection components that are common to both network cards. With this design, the bill of materials is reduced to the fewest amount of components. See Figure 3 for a simplified block diagram of a typical redundancy design.

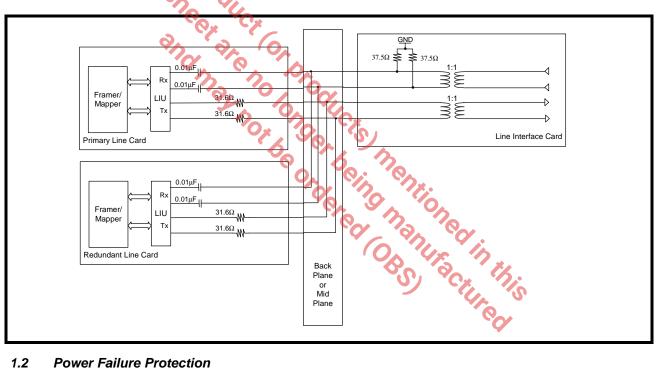

## FIGURE 3. NETWORK REDUNDANCY ARCHITECTURE

#### 1.2 **Power Failure Protection**

EXAR's "High" impedance circuits protect the LIU and preserve the line impedance characteristics when a power failure occurs. As the power supply decreases to a pre-determined voltage, the I/O pads are automatically switched to "High" impedance. This effectively removes the LIU, preventing a line impedance mismatch or system degradation. Power failures or network card hot swapping change the network circuit. It is critical that under these circumstances, that the primary card still behaves according to network standards. The three sensitive specifications are pulse mask conformance, receive sensitivity and return loss. Each must be carefully characterized to ensure network integrity and reliability.

#### Software vs Hardware Automatic Protection Switching 1.3

The implementation of R<sup>3</sup> technology can be controlled through programming the internal registers or through the use of the TxON hardware pin available within the LIU. To use software to tri-state the transmitters, first the TxON pin must be pulled "High". Once the pin is pulled "High", the individual register bits can be used to



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

control the output activity of the transmit path. To use the TxON pin, the individual register bits can be set "High", and the control of the transmitters is handled by setting the state of the TxON pin.

He product of products sheet are of products and may no products mentioned in the order being manufactin this of the order ed (Des) actured in this ed to the order of the ord



#### 2.0 ELECTRICAL CHARACTERISTICS

SYMBOL	PARAMETER	MIN	МАХ	UNITS	COMMENTS
V <sub>DD</sub>	Supply Voltage	-0.5	6.0	V	Note 1
V <sub>IN</sub>	Input Voltage at any Pin	-0.5	5.5	V	Note 1
I <sub>IN</sub>	Input current at any pin		100	mA	Note 1
S <sub>TEMP</sub>	Storage Temperature	-65	150	0C	Note 1
A <sub>TEMP</sub>	Ambient Operating Temperature	-40	85	0 <sup>0</sup> C	linear airflow 0 ft./min
Theta JA	Thermal Resistance		23	<sup>0</sup> C/W	linear air flow 0ft/min (See Note 3 below)
M <sub>LEVL</sub>	Exposure to Moisture	5		level	EIA/JEDEC JESD22-A112-A
ESD	ESD Rating	2000		V	Note 2

#### TABLE 1: ABSOLUTE MAXIMUM RATINGS

#### Notes:

1. Exposure to or operating near the Min or Max values for extended period may cause permanent failure and impair reliability of the device.

- 2. ESD testing method is per MIL-STD-883D,M-3015.7
- 3. With Linear Air flow of 200 ft/min, reduce Theta JA by 20%, Theta JC is unchanged.

## TABLE 2: DC ELECTRICAL CHARACTERISTICS:

SYMBOL	PARAMETER	MIN.	TYP.	MAX.	UNITS
$DV_DD$	Digital Supply Voltage	3.135	3.3	3.465	V
$AV_{DD}$	Analog Supply Voltage	3.135	3.3	3.465	V
I <sub>CC</sub>	Supply current requirements	, ac.	410	470	mA
P <sub>DD</sub>	Power Dissipation		1.10	1.2	W
V <sub>IL</sub>	Input Low Voltage		4	0.8	V
V <sub>IH</sub>	Input High Voltage	2.0		5.5	V
V <sub>OL</sub>	Output Low Voltage, I <sub>OUT</sub> = - 4mA			0.4	V
V <sub>OH</sub>	Output High Voltage, I <sub>OUT</sub> = 4 mA	2.4			V
١L	Input Leakage Current <sup>1</sup>			±10	μA
CI	Input Capacitance			10	pF
CL	Load Capacitance			10	pF

#### Notes:

- 1. Not applicable for pins with pull-up or pull-down resistors.
- 2. The Digital inputs and outputs are TTL 5V compliant.



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### 3.0 TIMING CHARACTERISTICS

FIGURE 4. TYPICAL INTERFACE BETWEEN TERMINAL EQUIPMENT AND THE XRT75R03D (DUAL-RAIL DATA)


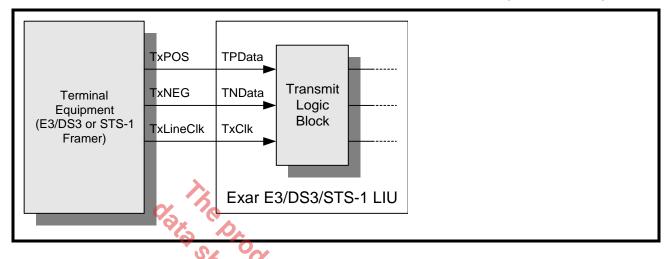



FIGURE 5. TRANSMITTER TERMINAL INPUT TIMING



SYMBOL	PARAMETER	MIN	ТҮР	МАХ	UNITS
TxClk	Duty Cycle	-30	50	<b>o</b> 70	%
	E3		34.368		MHz
	DS3		44.736		MHz
	STS-1		51.84		MHz
t <sub>RTX</sub>	TxClk Rise Time (10% to 90%)			4	ns
t <sub>FTX</sub>	TxClk Fall Time (10% to 90%)			4	ns
t <sub>TSU</sub>	TPData/TNData to TxClk falling set up time	3			ns
t <sub>THO</sub>	TPData/TNData to TxClk falling hold time	3			ns
t <sub>TDY</sub>	TTIP/TRing to TxClk rising propagation delay time		8		ns

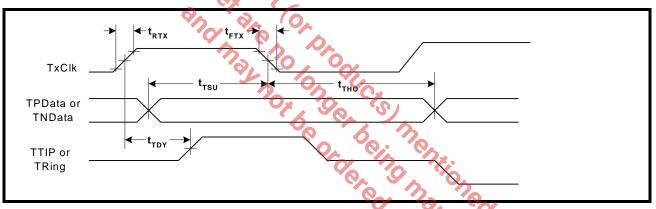


#### FIGURE 6. RECEIVER DATA OUTPUT AND CODE VIOLATION TIMING

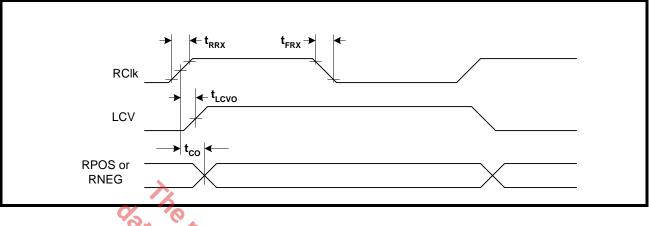

SYMBOL	PARAMETER	MIN	ТҮР	MAX	UNITS
RxClk	Duty Cycle	45	50	55	%
	E3		34.368		MHz
	DS3		44.736		MHz
	STS-1		51.84		MHz
t <sub>RRX</sub>	RxClk rise time (10% o 90%)		2	4	ns
t <sub>FRX</sub>	RxClk falling time (10% to 90%)		2	4	ns
t <sub>CO</sub>	RxClk to RPOS/RNEG delay time			4	ns
t <sub>LCVO</sub>	RxClk to rising edge of LCV output delay		2.5		ns

#### FIGURE 7. TRANSMIT PULSE AMPLITUDE TEST CIRCUIT FOR E3, DS3 AND STS-1 RATES

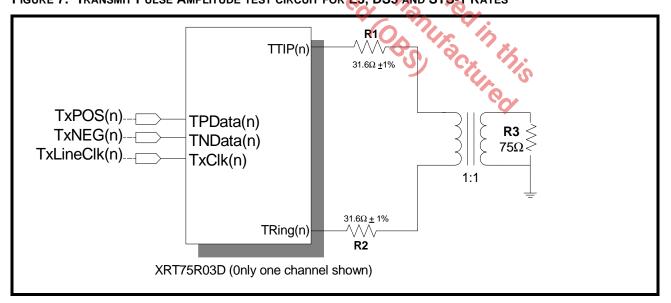


#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER



#### 4.0 LINE SIDE CHARACTERISTICS:

#### 4.1 E3 line side parameters:

The XRT75R03D line output at the transformer output meets the pulse shape specified in ITU-T G.703 for 34.368 Mbits/s operation. The pulse mask as specified in ITU-T G.703 for 34.368 Mbits/s is shown in Figure 7.

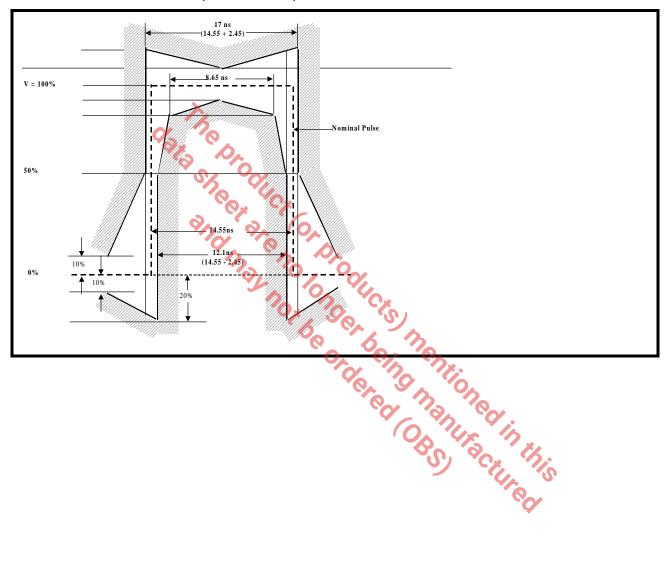

#### FIGURE 8. PULSE MASK FOR E3 (34.368 MBITS/S) INTERFACE AS PER ITU-T G.703



#### TABLE 3: E3 TRANSMITTER LINE SIDE OUTPUT AND RECEIVER LINE SIDE INPUT SPECIFICATIONS

PARAMETER	MIN	ТҮР	MAX	UNITS
TRANSMITTER LINE SIDE OUTPUT CH	ARACTERISTICS			
Transmit Output Pulse Amplitude	0.90	1.00	1.10	V <sub>pk</sub>
(Measured at secondary of the transformer)				
Transmit Output Pulse Amplitude Ratio	0.95	1.00	1.05	
Transmit Output Pulse Width	12.5	14.55	16.5	ns
Transmit Intrinsic Jitter		0.02	0.05	UI <sub>PP</sub>
RECEIVER LINE SIDE INPUT CHAR	ACTERISTICS		1	
Receiver Sensitivity (length of cable)	900	1200		feet
Interference Margin	-20	-14		dB
Jitter Tolerance @ Jitter Frequency 800KHz	0.15	0.28		UI <sub>PP</sub>
Jitter Tolerance @ Jitter Frequency 800KHz Signal level to Declare Loss of Signal Signal Level to Clear Loss of Signal Occurence of LOS to LOS Declaration Time Termination of LOS to LOS Clearance Time Note: The above values are at TA = 25°C and V <sub>DD</sub> = 3.3 V± 5%.			-35	dB
Signal Level to Clear Loss of Signal	-15			dB
Occurence of LOS to LOS Declaration Time	10		255	UI
Termination of LOS to LOS Clearance Time	10		255	UI
IOTE: The above values are at TA = 25°C and $v_{DD}$ = 3.3 V ± 5%	3			



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### FIGURE 9. BELLCORE GR-253 CORE TRANSMIT OUTPUT PULSE TEMPLATE FOR SONET STS-1 APPLICATIONS

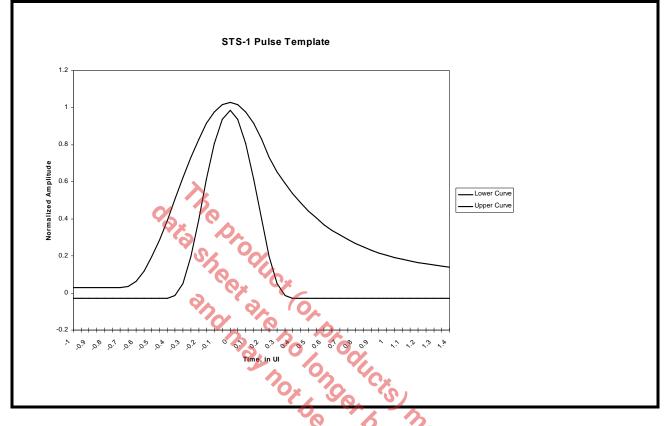


TABLE 4: STS-1 PULSE MASK EQUATIONS

TIME IN UNIT INTERVALS	Normalized Amplitude
LOWEF	CURVE
-0.85 <u>≤</u> T <u>≤</u> -0.38	- 0.03
-0.38 <u>&lt;</u> T <u>&lt;</u> 0.36	$0.5 \left[ 1 + \sin \left\{ \frac{\pi}{2} \left( 1 + \frac{T}{0.18} \right) \right\} \right] - 0.03$
0.36 <u>&lt;</u> T <u>&lt;</u> 1.4	- 0.03
UPPER	CURVE
-0.85 ≤ T ≤ -0.68	0.03
-0.68 <u>&lt;</u> T <u>&lt;</u> 0.26	$0.5 \left[ 1 + \sin \left\{ \frac{\pi}{2} \left( 1 + \frac{T}{0.34} \right) \right\} \right] + 0.03$
0.26 <u>&lt;</u> T <u>&lt;</u> 1.4	0.1 + 0.61 x e <sup>-2.4[T-0.26]</sup>






#### TABLE 5: STS-1 TRANSMITTER LINE SIDE OUTPUT AND RECEIVER LINE SIDE INPUT SPECIFICATIONS (GR-253)

PARAMETER	Min	Түр	Мах	UNITS	
TRANSMITTER LINE SIDE OUTP	UT CHARACTERISTICS				
Transmit Output Pulse Amplitude (measured with TxLEV = 0)	0.65	0.75	0.9	V <sub>pk</sub>	
Transmit Output Pulse Amplitude (measured with TxLEV = 1)	0.90	1.00	1.10	V <sub>pk</sub>	
Transmit Output Pulse Width	8.6	9.65	10.6	ns	
Transmit Output Pulse Amplitude Ratio	0.90	1.00	1.10		
Transmit Intrinsic Jitter		0.02	0.05	UI <sub>pp</sub>	
	CHARACTERISTICS		·		
Receiver Sensitivity (length of cable)	900	1100		feet	
Jitter Tolerance @ Jitter Frequency 400 KHz	0.15			Ul <sub>pp</sub>	
Signal Level to Declare Loss of Signal		Refer to Table 10			
Signal Level to Clear Loss of Signal		Refer to Table 10			

**NOTE:** The above values are at TA =  $25^{\circ}$ C and V<sub>DD</sub> = 3.3 V  $\pm$  5%.

#### FIGURE 10. TRANSMIT OUPUT PULSE TEMPLATE FOR DS3 AS PER BELLCORE GR-499

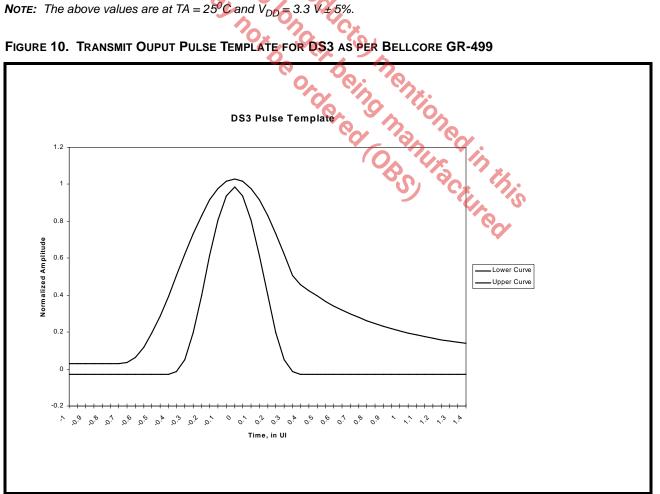



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### TABLE 6: DS3 PULSE MASK EQUATIONS

TIME IN UNIT INTERVALS	NORMALIZED AMPLITUDE					
LOWER CURVE						
-0.85 ≤ T ≤ -0.36	- 0.03					
-0.36 <u>&lt;</u> T <u>&lt;</u> 0.36	$0.5\left[1+\sin\left(\frac{\pi}{2}\left(1+\frac{T}{0.18}\right)\right)\right] - 0.03$					
0.36 <u>≤</u> T <u>≤</u> 1.4	- 0.03					
	CURVE					
-0.85 <u>&lt; </u> , -0.68	0.03					
-0.68 ≤ T ≤ 0.36	$0.5 \left[ 1 + \sin \left\{ \frac{\pi}{2} \left( 1 + \frac{T}{0.34} \right) \right\} \right] + 0.03$					
0.36 ≤ T ≤ 1.4	0.08 + 0.407 x e <sup>-1.84[T-0.36]</sup>					


### TABLE 7: DS3 TRANSMITTER LINE SIDE OUTPUT AND RECEIVER LINE SIDE INPUT SPECIFICATIONS (GR-499)

PARAMETER	0, 0, 0	Min	Түр	Мах	UNITS		
TRANSMITTER LINE SIDE OUTPUT CHARACTERISTICS							
Transmit Output Pulse Amplitude (measured with TxLEV = 0)	Or de lin	0.65	0.75	0.85	V <sub>pk</sub>		
Transmit Output Pulse Amplitude (measured with TxLEV = 1)	°9	0.90	1.00	1.10	V <sub>pk</sub>		
Transmit Output Pulse Width	•	10.10	11.18	12.28	ns		
Transmit Output Pulse Amplitude Ratio		0.90	1.00	1.10			
Transmit Intrinsic Jitter		0.02	0.05	UI <sub>pp</sub>			
RECEIV	ER LINE SIDE INPUT CHARAC	TERISTICS		ġr.			
Receiver Sensitivity (length of cable)		900	1100		feet		
Jitter Tolerance @ 400 KHz (Cat II)		0.15			UI <sub>pp</sub>		
Signal Level to Declare Loss of Signal		Refer to Table 10					
Signal Level to Clear Loss of Signal			Refer to	Table 10			

**Note:** The above values are at TA =  $25^{\circ}C$  and  $V_{DD} = 3.3V \pm 5\%$ .





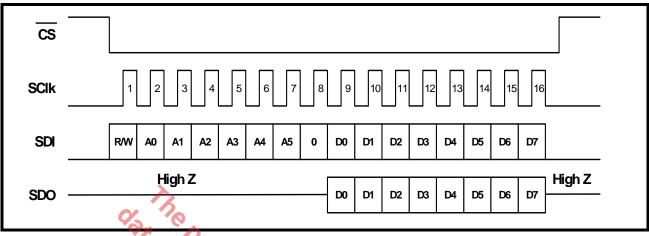

**Note:** If the R/W bit is set to "1", then this denotes a "READ" operation with the Microprocessor Serial Interface. Conversely, if the R/W bit is set to "0", then this denotes a "WRITE" operation.

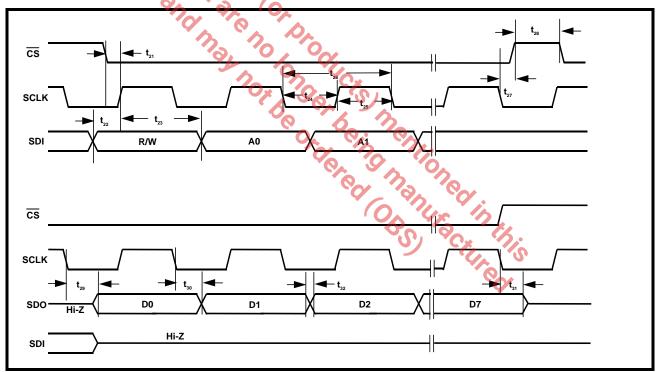


FIGURE 12. TIMING DIAGRAM FOR THE MICROPROCESSOR SERIAL INTERFACE

## TABLE 8: MICROPROCESSOR SERIAL INTERFACE TIMINGS ( $T_A = 25^{0}C$ , $V_{DD}=3.3V \pm 5\%$ and load = 10PF)

SYMBOL	PARAMETER	Min.	Typ.	ΜΑΧ	Units
t <sub>21</sub>	CS Low to Rising Edge of SClk	5			ns
t <sub>22</sub>	SDI to Rising Edge of SCIk	5			ns
t <sub>23</sub>	SDI to Rising Edge of SCIk Hold Time	5			ns



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER REV. 1.0.4

## TABLE 8: MICROPROCESSOR SERIAL INTERFACE TIMINGS ( $T_A = 25^{\circ}C$ , $V_{DD}=3.3V \pm 5\%$ and load = 10PF)

SYMBOL	PARAMETER	Min.	Typ.	MAX	UNITS
t <sub>24</sub>	SCIk "Low" Time	50			ns
t <sub>25</sub>	SClk "High" Time	50			ns
t <sub>26</sub>	SCIk Period	100			ns
t <sub>27</sub>	Falling Edge of SCIk to rising edge of $\overline{CS}$	0			ns
t <sub>28</sub>	CS Inactive Time	50			ns
t <sub>29</sub>	Falling Edge of SCIk to SDO Valid Time			20	ns
t <sub>30</sub>	Falling Edge of SCIk to SDO Invalid Time			10	ns
t <sub>31</sub>	Rising edge of CS to High Z			25	ns
t <sub>32</sub>	Rise/Fall time of SDO Output			5	ns

Quiput igh Z Quiput And Areno Doducts And Harno Doducts Nor Ber Beinentioned in this Order Red Desing manual in this S. S. Scilling the S.



### FUNCTIONAL DESCRIPTION:

Figure 1 shows the functional block diagram of the device. Each channel can be independently configured either by Hardware Mode or by Host Mode to support E3, DS3 or STS-1 modes. A detailed operation of each section is described below.


Each channel consists of the following functional blocks:

#### 5.0 THE TRANSMITTER SECTION:


The Transmitter Section, within each Channel, accepts TTL/CMOS level signals from the Terminal Equipment in selectable data formats.


- Convert the CMOS level B3ZS or HDB3 encoded data into pulses with shapes that are compliant with the various industry standard pulse template requirements. Figures 7, 8 and 9 illustrate the pulse template requirements.
- Encode the un-encoded NRZ data into either B3ZS format for (DS3 or STS-1) or HDB3 format (for E3) and convert to pulses with shapes and width that are compliant with industry standard pulse template requirements. Figures 7, 8 and 9 illustrate the pulse template requirements.
- In Single-Rail or un-encoded Non-Return-to-Zero (NRZ) mode, data is input via TPData\_n pins while TNData\_n pins must be grounded. The NRZ or Single-Rail mode is selected when the SR/DR input pin is "High" (in Hardware Mode) or bit 0 of channel control register is "1" (in Host Mode). Figure 12 illustrates the Single-Rail or NRZ format.

FIGURE 13. SINGLE-RAIL OR NRZ DATA FORMAT (ENCODER AND DECODER ARE ENABLED)

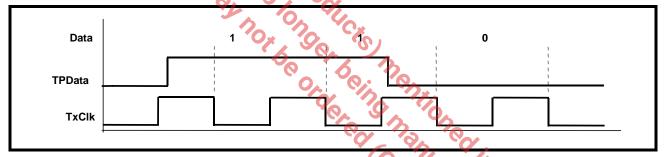

• In Dual-Rail mode, data is input via TPData\_n and TNData\_n pins. TPData\_n contains positive data and TNData\_n contains negative data. The SR/DR input pin = "Low" (in Hardware Mode) or bit 0 of channel register = "0" (in Host Mode) enables the Dual-Rail mode. Figure 13 illustrates the Dual-Rail data format.



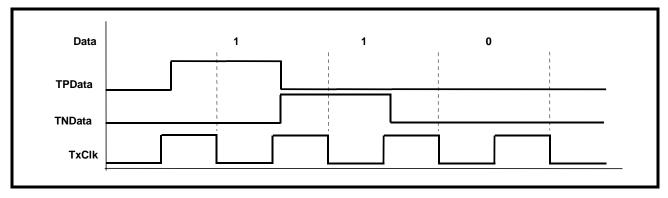



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### 5.1 TRANSMIT CLOCK:

The Transmit Clock applied via TxClk\_n pins, for the selected data rate (for E3 = 34.368 MHz, DS3 = 44.736 MHz or STS-1 = 51.84 MHz), is duty cycle corrected by the internal PLL circuit to provide a 50% duty cycle clock to the pulse shaping circuit. This allows a 30% to 70% duty cycle Transmit Clock to be supplied.


#### 5.2 B3ZS/HDB3 Encoder:

When the Single-Rail (NRZ) data format is selected, the Encoder Block encodes the data into either B3ZS format (for either DS3 or STS-1) or HDB3 format (for E3).

#### 5.2.1 B3ZS Encoding:

An example of B3ZS encoding is shown in Figure 14. If the encoder detects an occurrence of three consecutive zeros in the data stream, it is replaced with either B0V or 00V, where 'B' refers to Bipolar pulse that is compliant with the Alternating polarity requirement of the AMI (Alternate Mark Inversion) line code and 'V' refers to a Bipolar Violation (e.g., a bipolar pulse that violates the AMI line code). The substitution of B0V or 00V is made so that an odd number of bipolar pulses exist between any two consecutive violation (V) pulses. This avoids the introduction of a DC component into the line signal.


### FIGURE 15. B3ZS ENCODING FORMAT

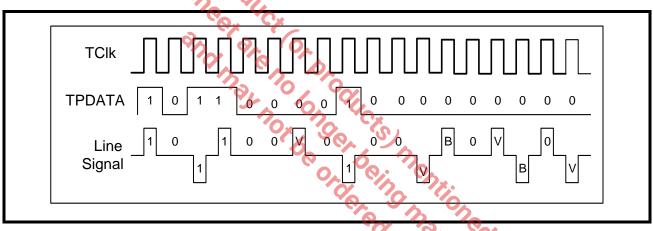

#### 5.2.2 HDB3 Encoding:

An example of the HDB3 encoding is shown in Figure 15. If the HDB3 encoder detects an occurrence of four consecutive zeros in the data stream, then the four zeros are substituted with either 000V or B00V pattern. The substitution code is made in such a way that an odd number of bipolar (B) pulses exist between any consecutive V pulses. This avoids the introduction of DC component into the analog signal.

#### FIGURE 16. HDB3 ENCODING FORMAT

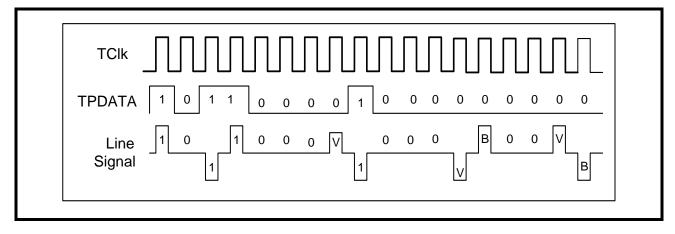



#### NOTES:

- 1. When Dual-Rail data format is selected, the B3ZS/HDB3 Encoder is automatically disabled.
- In Dual-Rail format, the Bipolar Violations in the incoming data stream is converted to valid data pulses.
- 3. Encoder and Decoder is enabled only in Single-Rail mode.

#### 5.3 TRANSMIT PULSE SHAPER:

The Transmit Pulse Shaper converts the B3ZS encoded digital pulses into a single analog Alternate Mark Inversion (AMI) pulse that meet the industry standard mask template requirements for STS-1 and DS3. See Figures 8 and 9.

For E3 mode, the pulse shaper converts the HDB3 encoded pulses into a single full amplitude square shaped pulse with very little slope. This is illustrated in Figure 7.

The Pulse Shaper Block also includes a Transmit Build Out Circuit, which can either be disabled or enabled by setting the TxLEV n input pin "High" or "Low" (in Hardware Mode) or setting the TxLEV n bit to "1" or "0" in the control register (in Host Mode).

For DS3/STS-1 rates, the Transmit Build Out Circuit is used to shape the transmit waveform that ensures that transmit pulse template requirements are met at the Cross-Connect system. The distance between the transmitter output and the Cross-Connect system can be between 0 to 450 feet.

For E3 rate, since the output pulse template is measured at the secondary of the transformer and since there is no Cross-Connect system pulse template requirements, the Transmit Build Out Circuit is always disabled.

#### 5.3.1 Guidelines for using Transmit Build Out Circuit:

If the distance between the transmitter and the DSX3 or STSX-1, Cross-Connect system, is less than 225 feet, enable the Transmit Build Out Circuit by setting the TXLEV\_n input pin "Low" (in Hardware Mode) or setting the TxLEV\_n control bit to "0" (in Host Mode).

If the distance between the transmitter and the DSX3 or STSX-1 is greater than 225 feet, disable the Transmit Build Out Circuit.

 Build Out Circuit.

 5.3.2
 Interfacing to the line:

 The differential line driver increases the transmit waveform to appropriate level and drives into the 75Ω load as

 m to appropriate lev. shown in Figure 6.

#### Experience Our Connectivity. THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER


#### 5.4 Transmit Drive Monitor:

This feature is used for monitoring the transmit line for occurrence of fault conditions such as a short circuit on the line or a defective line driver.

REV. 1.0.4

To activate this function, connect MTIP n pins to the TTIP n lines via a 270  $\Omega$  resistor and MRing n pins to TRing n lines via 270  $\Omega$  resistor as shown in Figure 16.



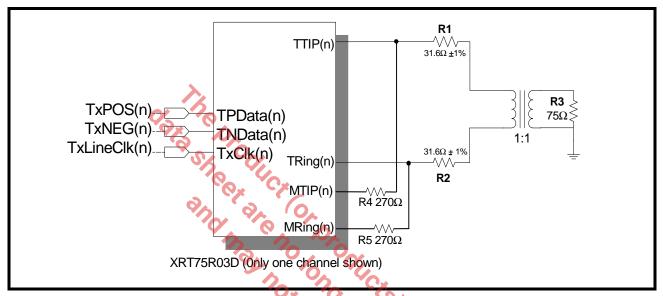

When the MTIP\_n and MRing\_n are connected to the TTIP\_n and TRing\_n lines, the drive monitor circuit monitors the line for transitions. The DMO\_n (Drive Monitor Output) will be asserted "Low" as long as the transitions on the line are detected via MTIP\_n and MRing\_n.

If no transitions on the line are detected for 128 ± 32 TxClk n periods, the DMO\_n output toggles "High" and when the transitions are detected again, DMO n toggles "Low"

Note: The Drive Monitor Circuit is only for diagnostic purpose and does not have to be used to operate the transmitter.

#### 5.5 Transmitter Section On/Off:

The transmitter section of each channel can either be turned on or off. To turn on the transmitter, set the input pin TxON n to "High" (in Hardware Mode) or write a "1" to the TxON n control bits (in Host Mode) and TxON n pins tied "High".

When the transmitter is turned off, TTIP\_n and TRing\_n are tri-stated.

NOTES:

- 1. This feature provides support for Redundancy.
- If the XRT75R03D is configured in Host mode, to permit a system designed for redundancy to quickly shut-off the 2. defective line card and turn on the back-up line card, writing a "1" to the TxON\_n control bits transfers the control to TxON n pins.

#### 6.0 THE RECEIVER SECTION:

This section describes the detailed operation of the various blocks in the receiver. The receiver recovers the TTL/CMOS level data from the incoming bipolar B3ZS or HDB3 encoded input pulses.

#### 6.1 AGC/Equalizer:

The Adaptive Gain Control circuit amplifies the incoming analog signal and compensates for the various flat losses and also for the loss at one-half symbol rate. The AGC has a dynamic range of 30 dB.



#### THREE CHANNEL E3/DS3/STS-1 LINE

The Equalizer restores the integrity of the signal and compensates for the frequency dependent attenuation of up to 900 feet of coaxial cable (1300 feet for E3). The Equalizer also boosts the high frequency content of the signal to reduce Inter-Symbol Interference (ISI) so that the slicer slices the signal at 50% of peak voltage to generate Positive and Negative data.

The Equalizer can either be "IN" or "OUT" by setting the REQEN n pin "High" or "Low" (in Hardware Mode) or setting the REQEN n control bit to "1" or "0" (in Host Mode).

**Recommendations for Equalizer Settings:** 

The Equalizer has two gain settings to provide optimum equalization. In the case of normally shaped DS3/ STS-1 pulses (pulses that meet the template requirements) that has been driven through 0 to 900 feet of cable, the Equalizer can be left "IN" by setting the REQEN n pin to "High" (in Hardware Mode) or setting the REQEN n control bit to "1" (in Host Mode).

However, for square-shaped pulses such as E3 or for DS3/STS-1 high pulses (that does not meet the pulse template requirements), it is recommended that the Equalizer be left "OUT" for cable length less than 300 feet by setting the REQEN n pin "Low" (in Hardware Mode) or by setting the REQEN n control bit to "0" (in Host Mode). This would help to prevent over-equalization of the signal and thus optimize the performance in terms of better jitter transfer characteristics.


The results of extensive testing indicates that even when the Equalizer was left "IN" (REQEN\_n = "HIGH"), NOTE regardless of the cable length, the integrity of the E3 signal was restored properly over 0 to 12 dB cable loss at Industrial Temperature

The Equalizer also contain an additional 20 dB gain stage to provide the line monitoring capability of the resistively attenuated signals which may have 20dB flat loss. This capability can be turned on by writing a "1" to the RxMON n bits in the control register of by setting the RxMON pin (pin 69) "High". However, asserting or enabling RxMON suppresses the internal LOS circuitry and LOS will never assert nor LOS be declared when operating with RxMON enabled.

#### 6.1.1 Interference Tolerance:


For E3 mode, ITU-T G.703 Recommendation specifies that the receiver be able to recover error-free clock and data in the presence of a sinusoidal interfering tone signal. For DS3 and STS-1 modes, the same recommendation is being used. Figure 17 shows the configuration to test the interference margin for DS3/ STS1. Figure 18 shows the set up for E3.



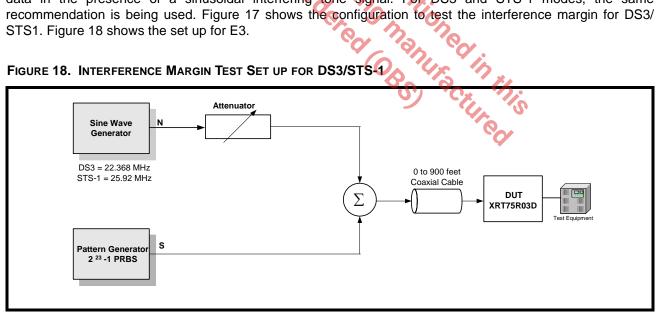

#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### FIGURE 19. INTERFERENCE MARGIN TEST SET UP FOR E3.

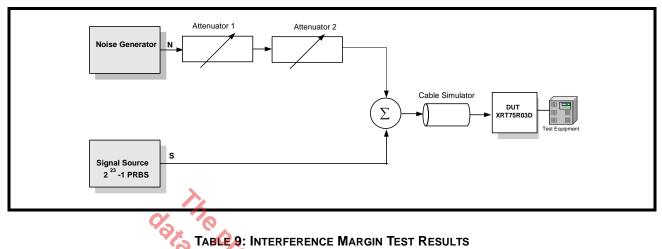

Mode	CABLE LENGTH (ATTENUATION)	INTERFERENCE TOLERANCE
	Cr. Cr	Equalizer "IN"
E3	A B B B	-17 dB
	12 dB	-14 gB
	0 feet	-15 dB
DS3	225 feet	-15 dB
	450 feet 🗞	-14 dB
	0 feet	-15 dB
STS-1	225 feet	-14 dB
	450 feet	-14,dB

#### 6.2 Clock and Data Recovery:

The Clock and Data Recovery Circuit extracts the embedded clock, RxClk\_n from the sliced digital data stream and provides the retimed data to the B3ZS (HDB3) decoder.

The Clock Recovery PLL can be in one of the following two modes:

Training Mode:

In the absence of input signals at RTIP\_n and RRing\_n pins, or when the frequency difference between the recovered line clock signal and the reference clock applied on the ExClk\_n input pins exceed 0.5%, a Loss of Lock condition is declared by toggling RLOL\_n output pin "High" (in Hardware Mode) or setting the RLOL\_n bit to "1" in the control registers (in Host Mode). Also, the clock output on the RxClk\_n pins are the same as the reference clock applied on ExClk\_n pins.

#### Data/Clock Recovery Mode:

In the presence of input line signals on the RTIP\_n and RRing\_n input pins and when the frequency difference between the recovered clock signal and the reference clock signal is less than 0.5%, the clock that is output on the RxClk\_n out pins is the Recovered Clock signal.



#### 6.3 B3ZS/HDB3 Decoder:

The decoder block takes the output from clock and data recovery block and decodes the B3ZS (for DS3 or STS-1) or HDB3 (for E3) encoded line signal and detects any coding errors or excessive zeros in the data stream.

Whenever the input signal violates the B3ZS or HDB3 coding sequence for bipolar violation or contains three (for B3ZS) or four (for HDB3) or more consecutive zeros, an active "High" pulse is generated on the RLCV\_n output pins to indicate line code violation.

**Note:** In Dual-Rail mode, the decoder is bypassed.

#### 6.4 LOS (Loss of Signal) Detector:

#### 6.4.1 DS3/STS-1 LOS Condition:

A Digital Loss of SIgnal (DLOS) condition occurs when a string of  $175 \pm 75$  consecutive zeros occur on the line. When the DLOS condition occurs, the DLOS\_n bit is set to "1" in the status control register. DLOS condition is cleared when the detected average pulse density is greater than 33% for  $175 \pm 75$  pulses.

Analog Loss of Signal (ALOS) condition occurs when the amplitude of the incoming line signal is below the threshold as shown in the Table 10. The status of the ALOS condition is reflected in the ALOS\_n status control register.

RLOS is the logical OR of the DLOS and ALOS states. When the RLOS condition occurs the RLOS\_n output pin is toggled "High" and the RLOS\_n bit is set to "1" in the status control register.

APPLICATION	REQEN SETTING	LOSTHR SETTING	SIGNAL LEVEL TO DECLARE ALOS	SIGNAL LEVEL TO CLEAR ALOS DEFECT
DS3	0	0	< 61mVpk	> 144mVpk
	1	0	< 97mVpk	> 192mVpk
	0	1	< 35mVpk	> 67mVpk
	1	1	< 43mVpk	> 82mVpk
STS-1	0	0	< 91mVpk	> 185mVpk
	1	0	< 95mVpk	> 215mVpk
	0	1	< 44mVpk	> 78mVpk
	1	1	< 44mVpk	> 91mVpk

#### TABLE 10: THE ALOS (ANALOG LOS) DECLARATION AND CLEARANCE THRESHOLDS FOR A GIVEN SETTING OF LOSTHR AND REGEN (DS3 AND STS-1 APPLICATIONS)

#### DISABLING ALOS/DLOS DETECTION:


For debugging purposes it is useful to disable the ALOS and/or DLOS detection. Writing a "1" to both ALOSDIS\_n and DLOSDIS\_n bits disables the LOS detection on a per channel basis.

#### 6.4.2 E3 LOS Condition:

If the level of incoming line signal drops below the threshold as described in the ITU-T G.775 standard, the LOS condition is detected. Loss of signal level is defined to be between 15 and 35 dB below the normal level. If the signal drops below 35 dB for 10 to 255 consecutive pulse periods, LOS condition is declared. This is illustrated in Figure 19.


#### XRT75R03D Experience Our Connectivity. THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

REV. 1.0.4

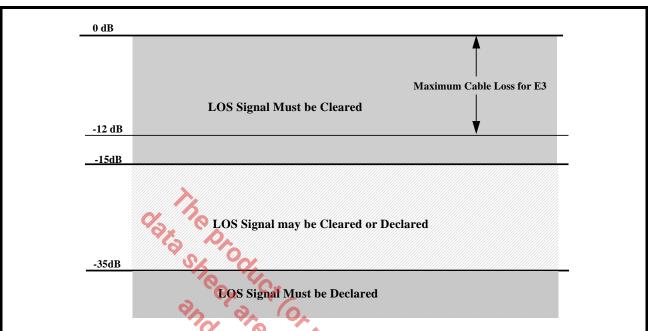

As defined in ITU-T G.775, an LOS condition is also declared between 10 and 255 UI (or E3 bit periods) after the actual time the LOS condition has occurred. The LOS condition is cleared within 10 to 255 UI after restoration of the incoming line signal. Figure 20 shows the LOS declaration and clearance conditions.



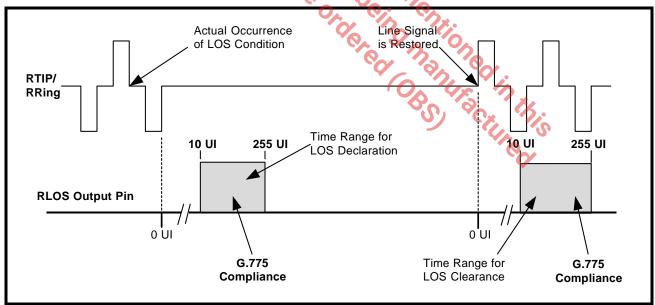



#### 6.4.3 Muting the Recovered Data with LOS condition:

When the LOS condition is declared, the clock recovery circuit locks into the reference clock applied to the ExClk\_n pin and output this clock on the RxClk\_n output.In Single Frequency Mode (SFM), the clock recovery locks into the rate clock generated and output this clock on the RxClk\_n pins. The data on the RPOS\_n and RNEG\_n pins can be forced to zero by pulling the LOSMUT pin "High" (in Hardware Mode) or by setting the LOSMUT\_n bits in the individual channel control register to "1" (in Host Mode).

#### NOTE: When the LOS condition is cleared, the recovered data is output on RPOS\_n and RNEG\_n pins.

#### 7.0 JITTER:


There are three fundamental parameters that describe circuit performance relative to jitter:

- Jitter Tolerance (Receiver)
- Jitter Transfer (Receiver/Transmitter)
- Jitter Generation

#### 7.1 JITTER TOLERANCE - RECEIVER:

Jitter tolerance is a measure of how well a Clock and Data Recovery unit can successfully recover data in the presence of various forms of jitter. It is characterized by the amount of jitter required to produce a specified bit error rate. The tolerance depends on the frequency content of the jitter. Jitter Tolerance is measured as the jitter amplitude over a jitter spectrum for which the clock and data recovery unit achieves a specified bit error rate (BER). To measure the jitter tolerance as shown in Figure 21, jitter is introduced by the sinusoidal modulation of the serial data bit sequence.

#### FIGURE 22. JITTER TOLERANCE MEASUREMENTS

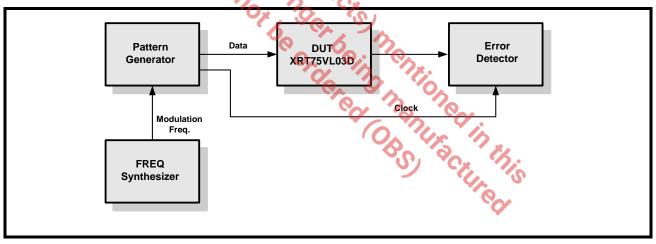

Input jitter tolerance requirements are specified in terms of compliance with jitter mask which is represented as a combination of points.Each point corresponds to a minimum amplitude of sinusoidal jitter at a given jitter frequency.

#### 7.1.1 DS3/STS-1 Jitter Tolerance Requirements:


Bellcore GR-499 CORE, Issue 1, December 1995 specifies the minimum requirement of jitter tolerance for Category I and Category II. The jitter tolerance requirement for Category II is the most stringent. Figure 22 shows the jitter tolerance curve as per GR-499 specification.

 Experience
 Our Con

 THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER
 REV.

ctivity.


REV. 1.0.4

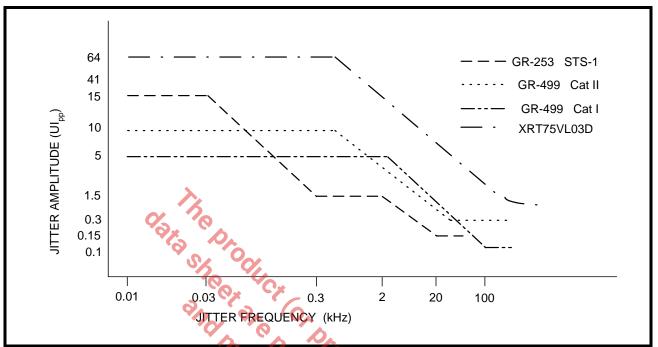



## 7.1.2 E3 Jitter Tolerance Requirements:

ITU-T G.823 standard specifies that the clock and data recovery unit must be able to accommodate and tolerate jitter up to certain specified limits. Figure 23 shows the tolerance curve.

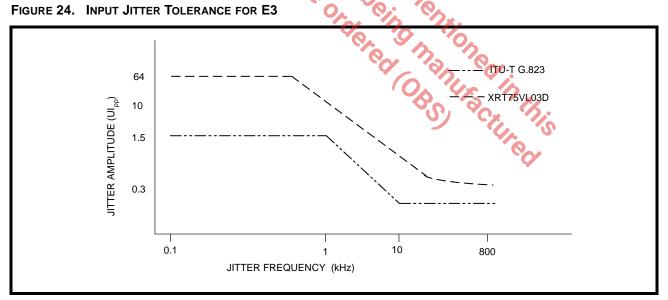

As shown in the Figures 22 and 23 above, in the jitter tolerance measurement, the dark line indicates the minimum level of jitter that the E3/DS3/STS-1 compliant component must tolerate.

The Table 11 below shows the jitter amplitude versus the modulation frequency for various standards.



BIT RATE	STANDARD	INPUT JITT	er Amplitu	IDE (UI <sub>P-P</sub> )		Modul	ATION FREG	UENCY	
(кв/s)	CIANDAND	A1	A2	A3	F1(Hz)	F2(Hz)	<b>F3(кHz)</b>	F4(KHZ)	<b>ғ5(кН</b> z)
34368	ITU-T G.823	1.5	0.15	-	100	1000	10	800	-
44736	GR-499 CORE Cat I	5	0.1	-	10	2.3k	60	300	-
44736	GR-499 CORE Cat II	10	0.3	-	10	669	22.3	300	-
51840	GR-253 CORE Cat II	15	1.5	0.15	10	30	300	2	20

#### TABLE 11: JITTER AMPLITUDE VERSUS MODULATION FREQUENCY (JITTER TOLERANCE)

### 7.2 JITTER TRANSFER - RECEIVER/TRANSMITTER:

Jitter Transfer function is defined as the ratio of jitter on the output relative to the jitter applied on the input versus frequency.

There are two distinct characteristics in jitter transfer: jitter gain (jitter peaking) defined as the highest ratio above 0dB; and jitter transfer bandwidth. The overall jitter transfer bandwidth is controlled by a low bandwidth loop, typically using a voltage-controller crystal oscillator (VCXO).

The jitter transfer function is a ratio between the jitter output and jitter input for a component, or system often expressed in dB. A negative dB jitter transfer indicates the element removed jitter. A positive dB jitter transfer indicates the element had no effect on jitter.

Table 12 shows the jitter transfer characteristics and/or jitter attenuation specifications for various data rates:

#### TABLE 12: JITTER TRANSFER SPECIFICATION/REFERENCES

E3	DS3	STS-1
ETSI TBR-24	GR-499 CORE section 7.3.2 Category I and Category II	GR-253 CORE section 5.6.2.1

The above specifications can be met only with a jitter attenuator that supports E3/DS3/STS-1 rates.

#### 7.3 *Jitter Attenuator:*

An advanced crystal-less jitter attenuator per channel is included in the XRT75R03D. The jitter attenuator requires no external crystal nor high-frequency reference clock.

In Host mode, by clearing or setting the JATx/Rx\_n bits in the channel control registers selects the jitter attenuator either in the Receive or Transmit path on per channel basis. In Hardware mode, JATx/Rx pin selects globally all three channels either in Receive or Transmit path.

The FIFO size can be either 16-bit or 32-bit. In HOST mode, the bits JA0\_n and JA1\_n can be set to appropriate combination to select the different FIFO sizes or to disable the Jitter Attenuator on a per channel basis. In Hardware mode, appropriate setting of the pins JA0 and JA1 selects the different FIFO sizes or disables the Jitter Attenuator for all three channels. Data is clocked into the FIFO with the associated clock signal (TxClk or RxClk) and clocked out of the FIFO with the dejittered clock. When the FIFO is within two bits of overflowing or underflowing, the FIFO limit status bit, FL\_n is set to "1" in the Alarm status register. Reading this bit clears the FIFO and resets the bit into default state.

**Note:** It is recommended to select the 16-bit FIFO for delay-sensitive applications as well as for removing smaller amounts of jitter. Table 13 specifies the jitter transfer mask requirements for various data rates:

Experience Our Connectivity. REV. 1.0.4


#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

RATE (KBITS)	Mask	F1 (Hz)	F2 (Hz)	F3 (Hz)	F4 (кНz)	A1(dB)	A2(dB)
34368	G.823 ETSI-TBR-24	100	300	Зк	800ĸ	0.5	-19.5
44736	GR-499, Cat I GR-499, Cat II GR-253 CORE	10 10 10	10k 56.6k 40	- - -	15k 300k 15k	0.1 0.1 0.1	- - -
51840	GR-253 CORE	10	40k	-	400k	0.1	-

#### TABLE 13: JITTER TRANSFER PASS MASKS

The jitter attenuator within the XRT75R03D meets the latest jitter attenuation specifications and/or jitter transfer characteristics as shown in the Figure 24.



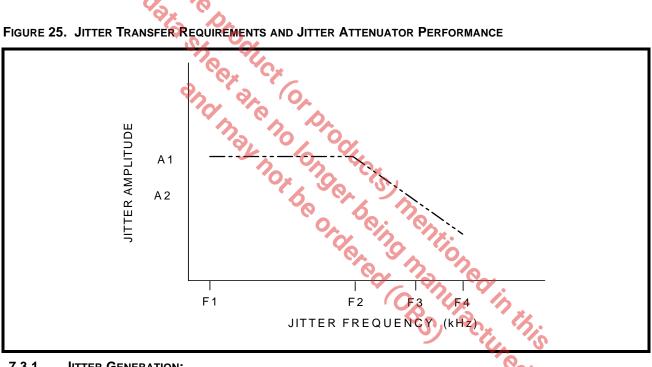

#### 7.3.1 **JITTER GENERATION:**

Jitter Generation is defined as the process whereby jitter appears at the output port of the digital equipment in the absence of applied input jitter. Jitter Generation is measured by sending jitter free data to the clock and data recovery circuit and measuring the amount of jitter on the output clock or the re-timed data. Since this is essentially a noise measurement, it requires a definition of bandwidth to be meaningful. The bandwidth is set according to the data rate. In general, the jitter is measured over a band of frequencies.

#### 8.0 SERIAL HOST INTERFACE:

A serial microprocessor interface is included in the XRT75R03D. The interface is generic and is designed to support the common microprocessors/microcontrollers. The XRT75R03D operates in Host mode when the HOST/HW pin is tied "High". The serial interface includes a serial clock (SClk), serial data input (SDI), serial data output (SDO), chip select (CS) and interrupt output (INT). The serial interface timing is shown in Figure 11.

The active low interrupt output signal (INT pin) indicates alarm conditions like LOS, DMO and FL to the processor.



#### THREE CHANNEL E3/DS3/STS-1 LINE


When the XRT75R03D is configured in Host mode, the following input pins,TxLEV\_n, TAOS\_n, RLB\_n, LLB\_n, E3\_n, STS-1/DS3\_n, REQEN\_n, JATx/Rx, JA0 and JA1 are disabled and must be connected to ground.

The Table 14 below illustrates the functions of the shared pins in either Host mode or in Hardware mode.

PIN NUMBER	IN HOST MODE	IN HARDWARE MODE		
66	CS	RxClkINV		
67	SClk	TxClkINV		
68	SDI	RxON		
69	SDO	RxMON		
71	INT INT	LOSMUT		

#### **TABLE 14: FUNCTIONS OF SHARED PINS**

Note: While configured in Host mode, the TxON\_n input pins will be active if the TxON\_n bits in the control register are set to "1", and can be used to turn on and off the transmit output drivers. This permits a system designed for redundancy to quickly switch out a defective line card and switch-in the backup line card.

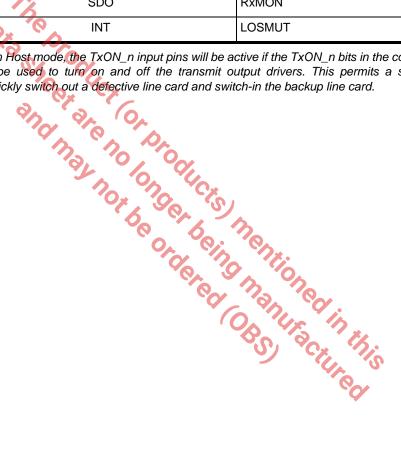



### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

Addres s Locatio N	Register Name	Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
0x00	APS/Redun- dancy Control Register	Reserved	RxON Ch 2	RxON Ch 1	RxON Ch 0	Reserve d	TxON Ch 2	TxON Ch 1	TxON Ch 0
			Cł	HANNEL 0 R	EGISTERS				
0x01	Source Level Interrupt Enable Register - Ch 0	ata sh	Reserved Reserved Reserved Loss of DLOS ALOS PRBS Defect Defect			Change of FL Alarm Condi- tion Interrupt Enable	Change of RLOL Condition Interrupt Enable	Change of RLOS Defect Condition Interrupt Enable	Change of DMO Condition Interrupt Enable
0x02	Source Level Interrupt Status Register - Ch 0	श्रेत्	Rese Thay no		ducis,	Change of FL Alarm Condi- tion Interrupt Status	Change of RLOL Condition Interrupt Status	Change of RLOS Condition Interrupt Status	Change of DMO Condition Interrupt Status
0x03	Alarm Status Register - Ch 0	Reserved	Loss of PRBS Pattern Sync	DLOS Defect Declared	ALOS Defect Declared	FL Alarm Declared	RLOL Condition Declared	RLOS Defect Condition	DMO Condition Status
0x04	Transmit Control Register - Ch 0	Res	erved	Internal Transmit Drive Monitor- ing	Insert PRBS Error	Unused	TAOS	TxCLK INV	TxLEV
0x05	Receive Control Register - Ch 0	Res	erved	DisableD- LOS Detector	DisableA- LOS Detector	RxCLK INV	LOSMUTE	Receive Monitor Mode Enable	Receive Equalizer Enable
0x06	Channel Control Register - Ch 0	Res	erved	PRBS Enable	RLB	LLB	E3 Mode	STS-1/ DS3 Mode	SR/DR Mode
0x07	Jitter Attenuator Control Register - Ch 0	Reserved			SONET APS Recovery Time Mode Disable	JA RESET	JA1 (JA Mode Select Bit 1)	JA in TxPath	JA0 (JA Mode Select 0)
	Channel 1 Registers								

#### TABLE 15: XRT75R03D REGISTER MAP - QUICK LOOK



THREE CHANNEL E3/DS3/STS-1 LINE

#### TABLE 15: XRT75R03D REGISTER MAP - QUICK LOOK

Addres s Locatio N	Register Name	Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
0x08	Reserved			Reserved	Reserved	Reserve d	Reserved	Reserved	Reserved
0x09	Source Level Interrupt Enable Register - Ch 0	The	Reserved			Change of FL Alarm Condi- tion Interrupt Enable	Change of RLOL Condition Interrupt Enable	Change of RLOS Defect Condition Interrupt Enable	Change of DMO Condition Interrupt Enable
0x0A	Source Level Interrupt Status Register - Ch 0	Sheet no n	Reserved Reserved Loss of DLOS ALOS PRBS Defect Defect Pattern Declared			Change of FL Alarm Condi- tion Interrupt Status	Change of RLOL Condition Interrupt Status	Change of RLOS Condition Interrupt Status	Change of DMO Condition Interrupt Status
0x0B	Alarm Status Register - Ch 0	Reserved	Loss of PRBS Pattern Sync	DLOS Defect Declared	ALOS Defect Declared	FL Alarm Declared	RLOL Condition Declared	RLOS Defect Condition	DMO Condition Status
0x0C	Transmit Control Register - Ch 0	Res	erved	Internal Transmit Drive Monitor- ing	Insert PRBS Error	Unused	TAOS	TxCLK INV	TxLEV
0x0D	Receive Control Register - Ch 0	Res	erved	DisableD- LOS Detector	DisableA- LOS Detector	RXCLK	LOSMUTE nable	Receive Monitor Mode Enable	Receive Equalizer Enable
0x0E	Channel Control Register - Ch 0	Res	Reserved		RLB	LLB	E3 Mode	STS-1/ DS3 Mode	SR/DR Mode
0x0F	Jitter Attenuator Control Register - Ch 0	Reserved			SONET APS Recovery Time Mode Disable	JA RESET	JA1 (JA Mode Select Bit 1)	JA in TxPath	JA0 (JA Mode Select 0)
			C	Channel 2 R	egisters				
0x10	Reserved			Reserved	Reserved	Reserve d	Reserved	Reserved	Reserved



### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER REV. 1.0.4

#### TABLE 15: XRT75R03D REGISTER MAP - QUICK LOOK

T .		i							
Addres S Locatio N	Register Name	Віт 7	Віт б	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
0x11	Source Level Interrupt Enable Register - Ch 0		Rese			Change of FL Alarm Condi- tion Interrupt Enable	Change of RLOL Condition Interrupt Enable	Change of RLOS Defect Condition Interrupt Enable	Change of DMO Condition Interrupt Enable
0x12	Source Level Interrupt Status Register - Ch 0	Ala Sh	Rese	erved		Change of FL Alarm Condi- tion Interrupt Status	Change of RLOL Condition Interrupt Status	Change of RLOS Condition Interrupt Status	Change of DMO Condition Interrupt Status
0x13	Alarm Status Register - Ch 0	Reserved	Loss of PRBS Pattern Sync	DLOS Defect Declared	ALOS Defect Declared	FL Alarm Declared	RLOL Condition Declared	RLOS Defect Condition	DMO Condition Status
0x14	Transmit Control Register - Ch 0	Res	Reserved Tr		Insert PRBS Error	Unused	TAOS	TxCLK INV	TxLEV
0x15	Receive Control Register - Ch 0	Res	served	DisableD- LOS Detector	DisableA- LOS Detector	RxCLK INV	LOSMUTE	Receive Monitor Mode Enable	Receive Equalizer Enable
0x16	Channel Control Register - Ch 0	Res	served	PRBS Enable	RLB	LLB	E3 Mode	STS-1/ DS3 Mode	SR/DR Mode
0x17	Jitter Attenuator Control Register - Ch 0		Reserved		SONET APS Recovery Time Mode Disable	JA RESET	JA1 (JA Mode Select Bit 1)	JA in TxPath	JA0 (JA Mode Select 0)
0x19 - 0x1F	Reserved				Rese	erved			
0x20	Block Level Interrupt Enable Register - Ch 32								
0x21	Block Level Interrupt Status Register - Ch 33								



THREE CHANNEL E3/DS3/STS-1 LINE

#### TABLE 15: XRT75R03D REGISTER MAP - QUICK LOOK

Addres S Locatio N	REGISTER NAME	Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
0x22 - 0x3D	Reserved	Reserved							
0x3E	Device Part Number Register	0	1	1	1	0	0	1	1
0x3F	Chip Revision Number Register	0	0	0	0		Revision Nu	umber Valu	9
0x40 - 0xFF	Reserved	The			Rese	rved			

#### LEGEND:

LEGEND:	Sh Og
	Denotes Reserved (or Unused) Register Bits
	Denotes Read/Write Bits
	Denotes Read-Only Bits
	Denotes Reset-Upon-Read Bits

6

# THE REGISTER MAP AND DESCRIPTION FOR THE XRT75R03D 3-CHANNEL DS3/E3/STS-1 LIU IC

#### TABLE 16: COMMAND REGISTER ADDRESS MAP, WITHIN THE XRT75R03D 3-CHANNEL DS3/E3/STS-1 LIU w/ JITTER ATTENUATOR IC 10

Address	COMMAND REGISTER	Түре	REGISTER NAME					
0x00	CR0	R/W	APS/Redundancy Control Register					
	CHANNEL 0 CONTROL REGISTERS							
0x01	CR1	R/O	Source Level Interrupt Enable Register - Channel 0					
0x02	CR2	R/W	Source Level Interrupt Status Register Channel 0					
0x03	CR3	R/O	Alarm Status Register - Channel 0					
0x04	CR4	R/W	Transmit Control Register - Channel 0					
0x05	CR5	R/W	Receive Control Register - Channel 0					
0x06	CR6	R/W	Channel Control Register - Channel 0					
0x07	CR7	R/W	Jitter Attenuator Control Register - Channel 0					
	Сна	NNEL 1 CONTROL RE	GISTERS					
0x08	CR8	R/O	Reserved					
0x09	CR9	R/W	Source Level Interrupt Enable Register - Channel 1					

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

TABLE 16: COMMAND REGISTER ADDRESS MAP, WITHIN THE XRT75R03D 3-CHANNEL DS3/E3/STS-1 LIU W/ JITTER ATTENUATOR IC

FXAR

Experience Our Connectivity.

REV. 1.0.4

Address	COMMAND REGISTER	Түре	REGISTER NAME
0x0A	CR10	RUR	Source Level Interrupt Status Register - Channel 1
0x0B	CR11	R/O	Alarm Status Register - Channel 1
0x0C	CR12	R/W	Transmit Control Register - Channel 1
0x0D	CR13	R/W	Receive Control Register - Channel 1
0x0E	CR14	R/W	Channel Control Register - Channel 1
0x0F	CR15	R/W	Jitter Attenuator Control Register - Channel 1
	Сна	NNEL 2 CONTROL REG	ISTERS
0x10	CR16	R/W	Reserved
0x11	CR17	R/W	Source Level Interrupt Enable Register - Channel 2
0x12	CR18	RUR	Source Level Interrupt Status Register - Channel 2
0x13	CR19	R/O	Alarm Status Register - Channel 2
0x14	CR20	R/W	Transmit Control Register - Channel 2
0x15	CR21	R/W	Receive Control Register - Channel 2
0x16	CR22	R/W	Channel Control Register - Channel 2
0x17	CR23	R/W	Jitter Attenuator Control Register - Channel 2
0x18 - 0x1F	Reserved		in Ope
	BLOCK LEVEL INTERRUP	PT ENABLE/STATUS RE	GISTERS (CHANNELS 0 - 2)
0x20	CR32	R/W	Block Level Interrupt Enable Register
0x21	CR33	R/O	Block Level Interrupt Status Register
0x22 - 0x3D	Reserved		Reserved
	Devi	CE IDENTIFICATION RE	GISTERS
0x3E	CR62	R/O	Device Part Number Register
0x3F	CR63	R/O	Chip Revision Number Register



#### THE GLOBAL/CHIP-LEVEL REGISTERS

The register set, within the XRT75R03D consists of five "Global" or "Chip-Level" Registers and 21 per-Channel Registers. This section will present detailed information on the Global Registers.

ADDRESS	COMMAND REGISTER	Түре	REGISTER NAME
0x00	CR0	R/W	APS/Redundancy Control Register
0x01 - 0x1F	Bank of Per-Channel Registers		
0x20	CR32	R/W	Block Level Interrupt Enable Register
0x21	CR33	R/O	Block Level Interrupt Status Register
0x22 - 0x3D	Reserved Registers		
0x3E	CR62	R/O	Device/Part Number Register
0x3F	CR63	R/O	Chip Revision Number Register

#### TABLE 17: LIST AND ADDRESS LOCATIONS OF GLOBAL REGISTERS

## REGISTER DESCRIPTION - GLOBAL REGISTERS

#### TABLE 18: APS/REDUNDANCY CONTROL REGISTER - CR0 (ADDRESS LOCATION = 0x00)

Віт 7	Віт 6	Віт 5	Bit 4	Віт 3	Віт 2	Віт 1	Віт 0
Reserved	RxONCh 2	RxON Ch 1	RxON Ch 0	Reserved	TxON Ch 2	TxON Ch 1	TxON Ch 0
R/O	R/W	R/W	R/W	R/O	R/W	R/W	R/W
0	0	0	0	0	0	0	0
				0.3	10		

Bit Number	NAME	Түре	DEFAULT VALUE	DESCRIPTION
7	Reserved	R/O	0	S Cr. ni
6	RxON Ch 2	R/W	0	Receiver Section ON - Channel 2 This READ/WRITE bit-field is used to either turn on or turn off the Receive Section of Channel 2. If the user turns on the Receive Sec- tion, then Channel 2 will begin to receive the incoming DS3, E3 or STS-1 data-stream via the RTIP_2 and RRING_2 input pins. Conversely, if the user turns off the Receive Section, then the entire Receive Section (e.g., AGC and Receive Equalizer Block, Clock Recovery PLL, etc) will be powered down. 0 - Shuts off the Receive Section of Channel 2. 1 - Turns on the Receive Section of Channel 2.

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER REV. 1.0.4

EX/AR
Experience Our Connectivity.

perience	Our	Com	nec	uv	n
R	R	FV	1	n	4

Bit Number	NAME	Түре	DEFAULT VALUE	DESCRIPTION
5	RxON Ch 1	R/W	0	Receiver Section ON - Channel 1 This READ/WRITE bit-field is used to either turn on or turn off the Receive Section of Channel 1. If the user turns on the Receive Sec- tion, then Channel 1 will begin to receive the incoming DS3, E3 or STS-1 data-stream via the RTIP_1 and RRING_1 input pins. Conversely, if the user turns off the Receive Section, then the entire Receive Section (e.g., AGC and Receive Equalizer Block, Clock Recovery PLL, etc) will be powered down. 0 - Shuts off the Receive Section of Channel 1. 1 - Turns on the Receive Section of Channel 1.
4	RxON Ch 0	R/W		Receiver Section ON - Channel 0 This READ/WRITE bit-field is used to either turn on or turn off the Receive Section of Channel 0. If the user turns on the Receive Sec- tion, then Channel 0 will begin to receive the incoming DS3, E3 or STS-1 data-stream via the RTIP_0 and RRING_0 input pins. Conversely, if the user turns off the Receive Section, then the entire Receive Section (e.g., AGC and Receive Equalizer Block, Clock Recovery PLL, etc) will be powered down. 0 Shuts off the Receive Section of Channel 0. 1 - Turns on the Receive Section of Channel 0.
3	Reserved	R/O	0	0,00
2	TxON Ch 2	R/W	0	<ul> <li>Transmit Driver ON - Channel 2</li> <li>This READ/WRITE bit-field is used to either turn on or turn off the Transmit Driver associated with Channel 2. If the user turns on the Transmit Driver, then Channel 2 will begin to transmit DS3, E3 or STS-1 pulses on the line via the TTIP_2 and TRING_ 2 output pins. Conversely, if the user turns off the Transmit Driver, then the TTIP_2 and TRING_2 output pins will be tri-stated.</li> <li>0 - Shuts off the Transmit Driver associated with Channel 2 and tristates the TTIP_2 and TRING_2 output pins.</li> <li>1 - Turns on or enables the Transmit Driver associated with Channel 2.</li> <li>Note: If the user wishes to exercise software control over the state of the Transmit Driver associated with Channel 2, then it is imperative that the user pull the TxON_2 (pin 125) to a logic "High" level.</li> </ul>



#### THREE CHANNEL E3/DS3/STS-1 LINE

Bit Number	NAME	Түре	DEFAULT VALUE	DESCRIPTION
1	TxON Ch 1	R/W	0	Transmit Section ON - Channel 1 This READ/WRITE bit-field is used to either turn on or turn off the Transmit Driver associated with Channel 1. If the user turns on the Transmit Driver, then Channel 1 will begin to transmit DS3, E3 or STS-1 pulses on the line via the TTIP_1 and TRING_ 1 output pins. Conversely, if the user turns off the Transmit Driver, then the TTIP_1 and TRING_1 output pins will be tri-stated. 0 - Shuts off the Transmit Driver associated with Channel 1 and tri- states the TTIP_1 and TRING_ 1 output pins. 1 - Turns on or enables the Transmit Driver associated with Channel
	00	The	0r	<ol> <li>Note: If the user wishes to exercise software control over the state of the Transmit Driver associated with Channel 1, then it is imperative that the user pull the TxON_1 (pin 1) to a logic "High" level.</li> </ol>
0	TxON Ch 0	RW	o duct or no to	NOTE: If the user wishes to exercise software control over the state
				of the Transmit Driver associated with Channel 0, then it is imperative that the user pull the TxON_0 (pin 38) to a logic "High" level.

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
		Reserved	Channel 2 Interrupt Enable	Channel 1 Interrupt Enable	Channel 0 Interrupt Enable		
R/O	R/O	R/O	R/O	R/O	R/W	R/W	R/W
0	0	0	0	0	0	0	0

### TABLE 19: BLOCK LEVEL INTERRUPT ENABLE REGISTER - CR32 (ADDRESS LOCATION = 0x20)

Bit Number	NAME	Түре	DEFAULT VALUE	DESCRIPTION
7 - 3	Unused	R/0	0	
2	Channel 2 Interrupt Enable			<ul> <li>Channel 2 Interrupt Enable Bit:</li> <li>This READ/WRITE bit-field is used to do either of the following</li> <li>To enable Channel 2 for Interrupt Generation at the Block Level</li> <li>To disable all Interrupts associated with Channel 2 within the XRT75R03D</li> <li>If the user enables Channel 2-related Interrupts at the Block Level, then this means that a given Channel 2-related interrupt (e.g., Change in LOS Defect Condition - Channel 2) will be enabled if the user has also enabled this particular interrupt at the Source Level.</li> <li>If the user disables Channel 2-related Interrupts at the Block Level, then this means that the XRT75R03D will NOT generate any Channel 2-Related Interrupts at all.</li> <li>O - Disables all Channel 2-related Interrupt.</li> <li>1 - Enables Channel 2-related Interrupts at the Block Level. The user must still enable individual Channel 2-related Interrupts at the source level, before they are enabled for interrupt generation.</li> </ul>
1	Channel 1 Interrupt Enable	R/W	0	Channel 1 Interrupt Enable Bit: Please see the description for Bit 2 Channel 2 Interrupt Enable.
0	Channel 0 Interrupt Enable	R/W	0	Channel 0 Interrupt Enable Bit: Please see the description for Bit 2 Channel 2 Interrupt Enable.



Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
		Reserved	Channel 2 Interrupt Status	Channel 1 Interrupt Status	Channel 0 Interrupt Status		
R/O	R/O	R/O	R/O	R/O	R/O	R/O	R/O
0	0	0	0	0	0	0	0

#### TABLE 20: BLOCK LEVEL INTERRUPT STATUS REGISTER - CR33 (ADDRESS LOCATION = 0x21)

BIT NUMBER	Nаме	Түре	DEFAULT VALUE	DESCRIPTION
7 - 3	Unused	R/O	0	
2	Channel 2 Interrupt Status	a R/O FO		<ul> <li>Channel 2 Interrupt Status Bit:</li> <li>This READ-ONLY bit-field indicates whether or not the XRT75R03D has a pending Channel 2-related interrupt that is awaiting service.</li> <li>0 - Indicates that there is NO Channel 2-related Interrupt awaiting service.</li> <li>1 - Indicates that there is at least one Channel 2-related Interrupt awaiting service. In this case, the user's Interrupt Service routine should be written such that the Microprocessor will now proceed to read out the contents of the Source Level Interrupt Status Register - Channel 2 (Address Location = 0x12) in order to determine the exact cause of the interrupt request.</li> <li>Note: Once this bit-field is set to "1", it will not be cleared back to "0" until the user has read out the contents of the Source-Level Interrupt Status Register bit, that corresponds with the interrupt request.</li> </ul>
				interrupt request

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

**XRT75R03D** 

BIT NUMBER	NAME	Түре	DEFAULT VALUE	DESCRIPTION
1	Channel 1 Interrupt Status	R/W	0	<ul> <li>Channel 1 Interrupt Enable Bit:</li> <li>This READ-ONLY bit-field indicates whether or not the XRT75R03D has a pending Channel 1-related interrupt that is awaiting service.</li> <li>0 - Indicates that there is NO Channel 1-related Interrupt awaiting service.</li> <li>1 - Indicates that there is at least one Channel 1-related Interrupt awaiting service. In this case, the user's Interrupt Service routine should be written such that the Microprocessor will now proceed to read out the contents of the Source Level Interrupt Status Register - Channel 1 (Address Location = 0x0A) in order to determine the exact cause of the interrupt request.</li> <li>Note: Once this bit-field is set to "1", it will not be cleared back to "0" until the user has read out the contents of the Source-Level</li> </ul>
0	Channel 0 Interrupt Status	R/W Sho	rody of aren nay no	Channel 0 Interrupt Enable Bit: This READ-ONLY bit-field indicates whether or not the XRT75R03D has a pending Channel 0-related interrupt that is awaiting service. 0 - Indicates that there is NO Channel 0-related Interrupt awaiting service. 1 - Indicates that there is at least one Channel 0-related Interrupt awaiting service. In this case, the user's Interrupt Service routine should be written such that the Microprocessor will now proceed to read out the contents of the Source Level Interrupt Status Register - Channel 0 (Address Location = 0x02) in order to determine the exact cause of the interrupt request. <b>Note:</b> Once this bit-field is set to "1", it will not be cleared back to "0" until the user has read out the contents of the Source-Level Interrupt Status Register bit, that corresponds with the interrupt request.

# TABLE 21: DEVICE/PART NUMBER REGISTER - CR62 (ADDRESS LOCATION = 0X3E)

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0			
Part Number ID Value										
R/O	R/O	R/O	R/O	R/O	R/O	R/O	R/O			
0	1	0	1	0	0	1	1			

BIT NUMBER	NAME	Түре	DEFAULT VALUE	DESCRIPTION
7 - 0	Part Number ID Value	R/O	0x53	Part Number ID Value: This READ-ONLY register contains a unique value that rep- resents the XRT75R03D. In the case of the XRT75R03D, this value will always be 0x53.



FXAR



TABLE 22: CHIP REVISION NUMBER REGISTER - CR63 (ADDRESS LOCATION = 0x3F)	
--	--

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0	
	Chip Revision Number Value							
R/O	R/O	R/O	R/O	R/O	R/O	R/O	R/O	
1	0	0	0	Х	Х	Х	Х	

BIT NUMBER	Nаме	Түре	DEFAULT VALUE	DESCRIPTION
7 - 0	Chip Revision	R/O	0x8#	Chip Revision Number Value:
	Number Value	oroduce er	-	This READ-ONLY register contains a value that represents the current revision of this XRT75R03D. This revision num- ber will always be in the form of "0x8#", where "#" is a hexa- decimal value that specifies the current revision of the chip. For example, the very first revision of this chip will contain the value "0x81".

#### THE PER-CHANNEL REGISTERS

The XRT75R03D consists of 21 per-Channel Registers, Table 23 presents the overall Register Map with the Per-Channel Registers shaded.

## TABLE 23: COMMAND REGISTER ADDRESS MAP, WITHIN THE XRT75R03D 3-CHANNEL DS3/E3/STS-1 LIU W/ JITTER ATTENUATOR IC

Address	COMMAND REGISTER	Түре					
0x00	CR0	R/W	APS/Redundancy Control Register				
	CHANNEL 0 CONTROL REGISTERS						
0x01	CR1	R/O	Source Level Interrupt Enable Register - Channel 0				
0x02	CR2	R/W	Source Level Interrupt Status Register Channel 0				
0x03	CR3	R/O	Alarm Status Register - Channel 0				
0x04	CR4	R/W	Transmit Control Register - Channel 0				
0x05	CR5	R/W	Receive Control Register - Channel 0				
0x06	CR6	R/W	Channel Control Register - Channel 0				
0x07	CR7	R/W	Jitter Attenuator Control Register - Channel 0				
		CHANNE	L 1 CONTROL REGISTERS				
0x08	CR8	R/O	Reserved				
0x09	CR9	R/W	Source Level Interrupt Enable Register - Channel 1				
0x0A	CR10	RUR	Source Level Interrupt Status Register - Channel 1				
0x0B	CR11	R/O	Alarm Status Register - Channel 1				



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### TABLE 23: COMMAND REGISTER ADDRESS MAP, WITHIN THE XRT75R03D 3-CHANNEL DS3/E3/STS-1 LIU W/ JITTER ATTENUATOR IC

Address	COMMAND REGISTER	Түре	REGISTER NAME
0x0C	CR12	R/W	Transmit Control Register - Channel 1
0x0D	CR13	R/W	Receive Control Register - Channel 1
0x0E	CR14	R/W	Channel Control Register - Channel 1
0x0F	CR15	R/W	Jitter Attenuator Control Register - Channel 1
		CHANNE	L 2 CONTROL REGISTERS
0x10	CR16	R/W	Reserved
0x11	CR17	R/W	Source Level Interrupt Enable Register - Channel 2
0x12	CR18	RUR	Source Level Interrupt Status Register - Channel 2
0x13	CR19	R/O	Alarm Status Register - Channel 2
0x14	CR20	R/W	Transmit Control Register - Channel 2
0x15	CR21	R/W	Receive Control Register - Channel 2
0x16	CR22	R/W Channel Control Register - Channel 2	
0x17	CR23	R/W Jitter Attenuator Control Register - Channel 2	
0x18 - 0x1F	Reserved	Y,	10 Yu
I_	BLOCK LEVEL IN		NABLE/STATUS REGISTERS (CHANNELS 0 - 2)
0x20	CR32	R/W	Block Level Interrupt Enable Register
0x21	CR33	R/O	Block Level Interrupt Status Register
0x22 - 0x3D	Reserved		Reserved
I_		DEVICE II	
0x3E	CR62	R/O	Device Part Number Register
0x3F	CR63	R/O	Chip Revision Number Register
<u> </u>		1	Device Part Number Register Chip Revision Number Register
			<b>V</b>



#### REV. 1.0.4

#### **REGISTER DESCRIPTION - PER CHANNEL REGISTERS**

### TABLE 24: SOURCE LEVEL INTERRUPT ENABLE REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x01

#### Channel 1 Address Location = 0x09

#### Channel 2 Address Location = 0x11)

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	BIT 1	Віт 0
Unused				Change of FL Condition	Change of LOL Condition	Change of LOS Condition	Change of DMO Condition
				Interrupt Enable Ch 0	Interrupt Enable Ch 0	Interrupt Enable Ch 0	Interrupt Enable Ch 0
R/O	R/O	R/O	R/O	R/W	R/W	R/W	R/W
0	0 🔥	0	0	0	0	0	0

BIT NUMBER	NAME	C TYPE	DEFAULT VALUE	DESCRIPTION
7 - 4	Reserved	R/O	0	
3	Change of FL Condition Interrupt Enable - Ch 0	R/W		<ul> <li>Change of FL (FIFO Limit Alarm) Condition Interrupt Enable</li> <li>Ch 0:</li> <li>This READ/WRITE bit-field is used to either enable or disable the Change of FL Condition Interrupt. If the user enables this interrupt, then the XRT75R03D will generate an interrupt any time any of the following events occur.</li> <li>Whenever the Jitter Attenuator (within Channel 0) declares the FL (FIFO Limit Alarm) condition.</li> <li>Whenever the Jitter Attenuator (within Channel 0) clears the FL (FIFO Limit Alarm) condition.</li> <li>Disables the Change in FL Condition Interrupt.</li> <li>Enables the Change in FL Condition Interrupt.</li> </ul>
2	Change of LOL Condition Interrupt Enable	R/W	0	<ul> <li>Change of Receive LOL (Loss of Lock) Condition Interrupt Enable - Channel 0:</li> <li>This READ/WRITE bit-field is used to either enable or dis- able the Change of Receive LOL Condition Interrupt. If the user enables this interrupt, then the XRT75R03D will gener- ate an interrupt any time any of the following events occur.</li> <li>Whenever the Receive Section (within Channel 0) declares the Loss of Lock Condition.</li> <li>Whenever the Receive Section (within Channel 0) clears the Loss of Lock Condition.</li> <li>O - Disables the Change in Receive LOL Condition Inter- rupt.</li> <li>1 - Enables the Change in Receive LOL Condition Interrupt.</li> </ul>

6		Or	
•	S		0,

#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

BIT NUMBER	Nаме	Түре	DEFAULT VALUE	DESCRIPTION
1	Change of LOS Condition Interrupt Enable	R/W	0	<ul> <li>Change of the Receive LOS (Loss of Signal) Defect Condition Interrupt Enable - Ch 0:</li> <li>This READ/WRITE bit-field is used to either enable or disable the Change of the Receive LOS Defect Condition Interrupt. If the user enables this interrupt, then the XRT75R03D will generate an interrupt any time any of the following events occur.</li> <li>Whenever the Receive Section (within Channel 0)</li> </ul>
				<ul><li>declares the LOS Defect Condition.</li><li>Whenever the Receive Section (within Channel 0) clears the LOS Defect condition.</li></ul>
	data.	Drodu CRW		<ul><li>0 - Disables the Change in the LOS Defect Condition Interrupt.</li><li>1 - Enables the Change in the LOS Defect Condition Interrupt.</li></ul>
0	Change of DMO Condition Interrupt Enable	RW Nor Ner O		<ul> <li>Change of Transmit DMO (Drive Monitor Output) Condition Interrupt Enable - Ch 0:</li> <li>This READ/WRITE bit-field is used to either enable or dis- able the Change of Transmit DMO Condition Interrupt. If the user enables this interrupt, then the XRT75R03D will generate an interrupt any time any of the following events occur.</li> <li>Whenever the Transmit Section toggles the DMO output pin (or bit-field) to "1".</li> <li>Whenever the Transmit Section toggles the DMO output pin (or bit-field) to "0".</li> <li>Disables the Change in the DMO Condition Interrupt.</li> <li>1 - Enables the Change in the DMO Condition Interrupt.</li> </ul>
				<ul> <li>0 Disables the Change in the DMO Condition Interrupt.</li> <li>1 - Enables the Change in the DMO Condition Interrupt.</li> </ul>







#### TABLE 25: SOURCE LEVEL INTERRUPT STATUS REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x02

# Channel 1 Address Location = 0x0A

# Channel 2 Address Location = 0x12

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
	Unused		Change of FL Condition Interrupt Status Ch_n	Change of LOL Condition Interrupt Status Ch_n	Change of LOS Condition nterrupt Status Ch_n	Change of DMO Condition Interrupt Status Ch_n	
R/O	R/O	R/O	R/O	RUR	RUR	RUR	RUR
0	0	0	0	0	0	0	0

0	0 0	0	0		0	0	U
	dat e L						
BIT NUMBER	NAME	Туре	Default Value		Γ	Description	
7 - 4	Unused	R/0	0				
3	Change of FL Con- dition Interrupt Sta- tus	RUB	Drod onger orde	- Ch 0: This R the Ch occurre 0 - Indi NOT o 1 Indi occurre	ESET-upon-REAL ange of FL Condit ed since the last re- cates that the Cha courred since the cates that the Cha ad since the last re- The user can det Alarm condition	D bit-field indicate tion Interrupt (for ead of this registe ange of FL Condii last read of this re ange of FL Condii ead of this registe ermine the current by reading out th	Channel 0) has r. tion Interrupt has egister. tion Interrupt has
2	Change of LOL Con- dition Interrupt Sta- tus	RUR	0	Status This R the Ch nel 0) I 0 - Indi Interru ter. 1 - Indi	- Ch 0: ESET-upon-REAL ange of Receive L has occurred since cates that the Cha pt has NOT occur cates that the Cha pt has occurred si The user can of Receive LOL D contents of Bit	ange of Receive L ince the last read determine the cu befect condition b	s whether or not errupt (for Chan- this register. _OL Condition read of this regis- _OL Condition

•	۰.		
r	٦.	L	

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

BIT NUMBER	NAME	Түре	DEFAULT VALUE	DESCRIPTION
1	Change of LOS Condition Interrupt Status	RUR	0	<ul> <li>Change of Receive LOS (Loss of Signal) Defect Condition Interrupt Status:</li> <li>This RESET-upon-READ bit-field indicates whether or not the Change of the Receive LOS Defect Condition Interrupt (for Channel 0) has occurred since the last read of this reg- ister.</li> <li>0 - Indicates that the Change of the Receive LOS Defect Condition Interrupt has NOT occurred since the last read of this register.</li> <li>1 - Indicates that the Change of the Receive LOS Defect Condition Interrupt has occurred since the last read of this register.</li> <li>1 - Indicates that the Change of the Receive LOS Defect Condition Interrupt has occurred since the last read of this register.</li> <li>Note: The user can determine the current state of the Receive LOS Defect condition by reading out the contents of Bit 1 (Receive LOS Defect Declared) within the Alarm Status Register.</li> </ul>
0	Change of DMO Condition Interrupt Status	RUR		Change of Transmit DMO (Drive Monitor Output) Condition Interrupt Status - Ch 0: This RESET-upon-READ bit-field indicates whether or not the Change of the Transmit DMO Condition Interrupt (for Channel 0) has occurred since the last read of this register. 0 - Indicates that the Change of the Transmit DMO Condi- tion Interrupt has NOT occurred since the last read of this register. 1 - Indicates that the Change of the Transmit DMO Condi- tion Interrupt has occurred since the last read of this regis- ter. <b>Nore:</b> The user can determine the current state of the Transmit DMO Condition by reading out the contents of Bit 0 (Transmit DMO Condition) within the Alarm Status Register.



REV. 1.0.4



# TABLE 26: ALARM STATUS REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x03

# Channel 1 Address Location = 0x0B

# Channel 2 Address Location = 0x13

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
Unused	Loss of PRBS Pattern Sync	Digital LOS Defect Declared	Analog LOS Defect Declared	FL (FIFO Limit) Alarm Declared	Receive LOL Defect Declared	Receive LOS Defect Declared	Transmit DMO Condition
R/O	R/O	R/O	R/O	R/O	R/O	R/O	R/O
0	0	0	0	0	0	0	0

	data k	5					
BIT NUMBER	NAME	Түре			DESC	RIPTION	
7	Unused	R/O	0				
6	Loss of PRBS Pat- tern Lock	R/Q		This READ-O PRBS Receiv declaring PRE If the PRBS R errors within in the Loss of PI Conversely, If determined P STS-1 data-st PRBS Receiv 0 - Indicates t the PRBS Loc STS-1 data-st 1 - Indicates t the Loss of PI E3 or STS-1 d NOTE: This re true. a. The PI Section b. The PR General Path (v	BS Lock within the Receiver detects to incoming data RBS Lock Concerns the PRBS Receiver and the PRBS Receiver will clear the PRBS of the PRBS of the PRBS for th	dicates whether eceive Section the incoming Pl s a very large n a-stream, then lition. eiver were to d th the incoming e or no bit error Loss of PRBS Receiver is curr hin the incomin Receiver is cur	of Channel 0) is RBS pattern. umber of bit- it will declare etect its pre- DS3, E3 or rs) then the Lock condition. ently declaring g DS3, E3 or ently declaring incoming DS3, the following are n the Transmit by the PRBS nto the Receive

#### Experience Our Connectivity. THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

**FXAR** 

REV. 1.0.4

BIT NUMBER	Nаме	Түре	Default Value	DESCRIPTION
5	Digital LOS Defect Declared	R/O		<ul> <li>Digital LOS Defect Declared:</li> <li>This READ-ONLY bit-field indicates whether or not the Digital LOS (Loss of Signal) detector is declaring the LOS Defect condition.</li> <li>For DS3 and STS-1 applications, the Digital LOS Detector will declare the LOS Defect condition whenever it detects an absence of pulses (within the incoming DS3 or STS-1 data-stream) for 160 consecutive bit-periods.</li> <li>Further, (again for DS3 and STS-1 applications) the Digital LOS Detector will clear the LOS Defect condition whenever it determines that the pulse density (within the incoming DS3 or STS-1 signal) is at least 33%.</li> <li>0 - Indicates that the Digital LOS Detector is NOT declaring the LOS Defect Condition.</li> <li>1 - Indicates that the Digital LOS Detector is currently declaring the LOS Defect condition.</li> <li>Notres: <ol> <li>LOS Detection (within each channel of the XRT75R03D) is performed by both an Analog LOS Detector and a Digital LOS Detector. The LOS state of a given Channel is simply a WIRED-OR of the LOS Defect Condition (for the channel) can be determined by reading out the contents of Bit 1 (Receive LOS Defect Declared) within this register.</li> </ol> </li> </ul>



# THREE CHANNEL E3/DS3/STS-1 LINE

BIT NUMBER	Nаме	Түре	DEFAULT VALUE	DESCRIPTION
4	Analog LOS Defect Declared	R/O		Analog LOS Defect Declared: This READ-ONLY bit-field indicates whether or not the Ana- log LOS (Loss of Signal) detector is declaring the LOS Defect condition. For DS3 and STS-1 applications, the Analog LOS Detector will declare the LOS Defect condition whenever it deter- mines that the amplitude of the pulses (within the incoming DS3/STS-1 line signal) drops below a certain Analog LOS Defect Declaration threshold level. Conversely, (again for DS3 and STS-1 applications) the Analog LOS Detector will clear the LOS Defect condition whenever it determines that the amplitude of the pulses (within the incoming DS3/STS-1 line signal) has risen above a certain Analog LOS Defect Clearance threshold level. It should be noted that, in order to prevent "chattering" within the Analog LOS Defect Clearance threshold levels. 0 - Indicates that the Analog LOS Defect Declaration and the Analog LOS Defect Clearance threshold levels. 0 - Indicates that the Analog LOS Detector is NOT declaring the LOS Defect Condition. 1 - Indicates that the Analog LOS Detector is currently declaring the LOS Defect condition. NOTES: 1 LOS Detection (within each channel of the XRT75R03D) is performed by both an Analog LOS Detector and a Digital LOS Detector. The LOS state of a given Channel is simply a WIRED-OR of the LOS Defect Declare states of these two detectors 2. The current LOS Defect Condition (for the channel) can be determined by reading out the contents of Bit 1 (Receive LOS Defect Declared) within this register.
				i eq

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

BIT NUMBER	NAME	Түре	Default Value	DESCRIPTION
2	FL Alarm Declared	R/O	0	<ul> <li>FL (FIFO Limit) Alarm Declared: This READ-ONLY bit-field indicates whether or not the Jitter Attenuator block (within Channel_n) is currently declaring the FIFO Limit Alarm.</li> <li>The Jitter Attenuator block will declare the FIFO Limit Alarm anytime the Jitter Attenuator FIFO comes within two bit- periods of either overflowing or under-running.</li> <li>Conversely, the Jitter Attenuator block will clear the FIFO Limit Alarm anytime the Jitter Attenuator FIFO is NO longer within two bit-periods of either overflowing or under-running.</li> <li>Typically, this Alarm will only be declared whenever there is a very serious problem with timing or jitter in the system.</li> <li>0 - Indicates that the Jitter Attenuator block (within Channel_n) is NOT currently declaring the FIFO Limit Alarm condition.</li> <li>1 - Indicates that the Jitter Attenuator block (within Channel_n) is currently declaring the FIFO Limit Alarm con- dition.</li> <li>NOTE: This bit-field is only active if the Jitter Attenuator (within Channel_n) has been enabled.</li> <li>Receive LOL (Loss of Lock) Condition Declared: This READ-ONLY bit-field indicates whether or not the Receive Section (within Channel_n) is currently declaring the LOL (Loss of Lock) condition.</li> <li>The Receive Section (of Channel_n) will declare the LOL Condition, if any one of the following conditions are met.</li> <li>If the frequency of the Recovered Clock signal differs from that of the signal provided to the E3CLK input (for E3 applications), the DS3CLK input (for DS3 applications) or the STS-1CLK input (for STS-1 applications) by 0.5% (or 5000ppm) or more.</li> <li>If the frequency of the Recovered Clock signal differs from the line-rate clock signal (for Channel_n) that has</li> </ul>
				<ul> <li>been generated by the SFM Clock Synthesizer PLL (for SFM Mode Operation) by 0.5% (or 5000ppm) or more.</li> <li>0 - Indicates that the Receive Section of Channel_n is NOT currently declaring the LOL Condition.</li> <li>1 - Indicates that the Receive Section of Channel_n is currently declaring the LOL Condition.</li> </ul>



REV. 1.0.4



THREE CHANNEL E3/DS3/STS-1 LINE

BIT NUMBER	NAME	Түре	Default Value	DESCRIPTION
1	Receive LOS Defect Condition Declared	R/O	0	Receive LOS (Loss of Signal) Defect Condition Declared: This READ-ONLY bit-field indicates whether or not the Receive Section (within Channel_n) is currently declaring the LOS defect condition. The Receive Section (of Channel_n) will declare the LOS
				<ul><li>defect condition, if any one of the following conditions is met.</li><li>If the Digital LOS Detector declares the LOS defect</li></ul>
				condition (for DS3 or STS-1 applications)
	N/S			<ul> <li>If the Analog LOS Detector declares the LOS defect condition (for DS3 or STS-1 applications)</li> </ul>
				<ul> <li>If the ITU-T G.775 LOS Detector declares the LOS defect condition (for E3 applications).</li> </ul>
	Sh	du		0 - Indicates that the Receive Section of Channel_n is NOT currently declaring the LOS Defect Condition.
	20	Q <sub>x</sub> C <sub>x</sub>	- D_	1 - Indicates that the Receive Section of Channel_n is cur- rently declaring the LOS Defect condition.
0	Transmit DMO Con- dition Declared	RIO	0°	Transmit DMO (Drive Monitor Output) Condition Declared: This READ-ONLY bit-field indicates whether or not the Transmit Section of Channel_n is currently declaring the DMO Alarm condition.
	Transmit DMO Condition Declared	0	be of de	alarm can be used to check for fault conditions on the Transmit Output Line Signal path.
				The Transmit Section will clear the Transmit DMO Alarm condition the instant that it detects some bipolar activity on the Transmit Output Line signal. 0 - Indicates that the Transmit Section of Channel_n is NOT currently declaring the Transmit DMO Alarm condition.
				1 - Indicates that the Transmit Section of Channel_n is cur- rently declaring the Transmit DMO Alarm condition.

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

TABLE 27: TRANSMIT CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x04

# Channel 1 Address Location = 0x0C

# Channel 2 Address Location = 0x14

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
Unı	Unused		Insert PRBS Error	Unused	TAOS	TxCLKINV	TxLEV
R/O	R/O	R/W	R/W	R/O	R/W	R/W	R/W
0	0	0	0	0	0	0	0
	Ø	h					

BIT NUMBER	NAME	Түре	DEFAULT VALUE	DESCRIPTION
7 - 6	Unused	R/O	0	
5	Internal Transmit Drive Monitor	RIVE		Internal Transmit Drive Monitor Enable - Channel_n: This READ/WRITE bit-field is used to configure the Trans- mit Section of Channel_n to either internally or externally monitor the TTIP_n and TRING_n output pins for bipolar pulses, in order to determine whether to declare the Trans- mit DMO Alarm condition. If the user configures the Transmit Section to externally monitor the TTIP_n and TRING_n output pins (for bipolar pulses) then the user must make sure that he/she has con- nected the MTIP_n and TRING_n output pins to their corre- sponding TTIP_n and TRING_n output pins (via a 274 ohm series resistor). If the user configures the Transmit Section to internally monitor the TTIP_n and TRING_n output pins (for bipolar pulses) then the user does NOT need to make sure that the MTIP_n and MRING_n input pins are connected to the TTIP_n and TRING_n output pins (via series resistors). This monitoring will be performed right at the TTIP_n and TRING_n output pads. 0 - Configures the Transmit Drive Monitor to externally mon- itor the TTIP_n and TRING_n output pins for bipolar pulses. 1 - Configures the Transmit Drive Monitor to internally mon- itor the TTIP_n and TRING_n output pins for bipolar pulses.





THREE CHANNEL E3/DS3/STS-1 LINE

BIT NUMBER	Nаме	Түре	DEFAULT VALUE	DESCRIPTION
4	Insert PRBS Error	R/W	0	Insert PRBS Error - Channel_n: A "0 to 1" transition within this bit-field configures the PRBS Generator (within the Transmit Section of Channel_n) to generate a single bit error within the outbound PRBS pat- tern-stream.
				Notes:
				<ol> <li>This bit-field is only active if the PRBS Generator and Receiver have been enabled within the corresponding Channel.</li> </ol>
	data	)		<ol> <li>After writing the "1" into this register, the user must execute a write operation to clear this particular register bit to "0" in order to facilitate the next "0 to 1" transition in this bit-field.</li> </ol>
3	Unused	R/O	0	
2	TAOS	R/O R/Wr Nay no		Transmit All OneS Pattern - Channel_n: This READ/WRITE bit-field is used to command the Trans- mit Section of Channel_n to generate and transmit an unframed, All Ones pattern via the DS3, E3 or STS-1 line signal (to the remote terminal equipment). Whenever the user implements this configuration setting then the Transmit Section will ignore the data that it is accepting from the System-side equipment and overwrite this data with the "All Ones" Pattern. 0 - Configures the Transmit Section to transmit the data that it accepts from the System-side Interface. 1 - Configures the Transmit Section to generate and trans- mit the Unframed, All Ones pattern.
				<sup>6</sup> CY

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

BIT NUMBER	NAME	Түре	Default Value	DESCRIPTION
1	TxCLKINV	R/W	0	<ul> <li>Transmit Clock Invert Select - Channel_n:</li> <li>This READ/WRITE bit-field is used to select the edge of the TxCLK_n input that the Transmit Section of Channel_n will use to sample the TPDATA_n and TNDATA_n input pins, as described below.</li> <li>O - Configures the Transmit Section (within the corresponding channel) to sample the TPDATA_n and TNDATA_n input pins upon the falling edge of TxCLK_n.</li> <li>1 - Configures the Transmit Section (within the corresponding channel) to sample the TPDATA_n and TNDATA_n input pins upon the falling edge of TxCLK_n.</li> <li>1 - Configures the Transmit Section (within the corresponding channel) to sample the TPDATA_n and TNDATA_n input pins upon the rising edge of TxCLK_n.</li> <li>Note: Whenever this configuration setting is accomplished via the Host Mode, it is done on a per-channel basis.</li> </ul>
0	TxLEV	h R/W/L		<ul> <li>Transmit Line Build-Out Select - Channel_n:</li> <li>This READ/WRITE bit-field is used to either enable or disable the Transmit Line Build-Out (e.g., pulse-shaping) circuit within the corresponding channel. The user should set this bit-field to either "0" or to "1" based upon the following guidelines.</li> <li>0 - If the cable length between the Transmit Output (of the corresponding Channel) and the DSX-3/STSX-1 location is 225 feet or less.</li> <li>1 - If the cable length between the Transmit Output (of the corresponding Channel) and the DSX-3/STSX-1 location is 225 feet or more.</li> <li>The user must follow these guidelines in order to insure that the Transmit Section (of Channel_n) will always generate a DS3 pulse that complies with the Isolated Pulse Template requirements per Bellcore GR-499-CORE, or an STS-1 pulse that complies with the Pulse Template requirements per Telcordia GR-253-CORE.</li> <li>Note: This bit-field is ignored if the channel has been configured to operate in the E3 Mode.</li> </ul>



78





#### TABLE 28: RECEIVE CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x05

# Channel 1 Address Location = 0x0D

# Channel 2 Address Location = 0x15

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
Unı	Unused		Disable ALOS Detector	RxCLKINV	LOSMUT Enable	Receive Monitor Mode Enable	Receive Equalizer Enable
R/O	R/O	R/W	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	0
	0	h					

BIT NUMBER	NAME	Түре	DEFAULT VALUE	DESCRIPTION
7 - 6	Unused	R/O	0	
5	Disable DLOS Detector	R/W May no		<ul> <li>Disable Digital LOS Detector - Channel_n:</li> <li>This READ/WRITE bit-field is used to either enable or disable the Digital LOS (Loss of Signal) Detector within Channel_n, as described below.</li> <li>0 - Enables the Digital LOS Detector within Channel_n.</li> <li>Note: This is the default condition.</li> <li>1 - Disables the Digital LOS Detector within Channel_n.</li> <li>Note: This bit-field is only active if Channel_n has been configured to operate in the DS3 or STS-1 Modes.</li> </ul>
4	Disable ALOS Detector	R/W	0	<ul> <li>Disable Analog LOS Detector - Channel_n:</li> <li>This READ/WRITE bit field is used to either enable or disable the Analog LOS (Loss of Signal) Detector within Channel_n, as described below.</li> <li>0 - Enables the Analog LOS Detector within Channel_n.</li> <li>Note: This is the default condition.</li> <li>1 - Disables the Analog LOS Detector within Channel_n.</li> <li>Note: This bit-field is only active if Channel_n has been configured to operate in the DS3 or STS-1 Modes.</li> </ul>
3	RxCLKINV	R/W	0	Receive Clock Invert Select - Channel_n: This READ/WRITE bit-field is used to select the edge of the RCLK_n output that the Receive Section of Channel_n will use to output the recovered data via the RPOS_n and RNEG_n output pins, as described below. 0 - Configures the Receive Section (within the correspond- ing channel) to output the recovered data via the RPOS_n and RNEG_n output pins upon the rising edge of RCLK_n. 1 - Configures the Receive Section (within the correspond- ing channel) to output the recovered data via the RPOS_n and RNEG_n output pins upon the rising edge of RCLK_n.

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

BIT NUMBER	NAME	Түре	DEFAULT VALUE	DESCRIPTION
2	LOSMUT Enable	R/W		Muting upon LOS Enable - Channel_n: This READ/WRITE bit-field is used to configure the Receive Section (within Channel_n) to automatically pull their corre- sponding Recovered Data Output pins (e.g., RPOS_n and RNEG_n) to GND anytime (and for the duration that) the Receive Section declares the LOS defect condition. In other words, this feature (if enabled) will cause the Receive Channel to automatically mute the Recovered data anytime (and for the duration that) the Receive Section declares the LOS defect condition. 0 - Disables the Muting upon LOS feature. In this setting the Receive Section will NOT automatically mute the Recovered Data whenever it is declaring the LOS defect condition. 1 - Enables the Muting upon LOS feature. In this setting the Receive Section will automatically mute the Recovered Data whenever it is declaring the LOS defect condition. 1 - Enables the Muting upon LOS feature. In this setting the Receive Monitor Mode Enable - Channel_n: This READ/WRITE bit-field is used to configure the Receive Section of Channel_n to operate in the Receive Monitor Mode. If the user configures the Receive Section to operate in the Receive Monitor Mode, then it will be able to receive a nom- inal DSX 3/STSX-1 signal that has been attenuated by 20dB of flat loss along with 6dB of cable loss, in an error- free manner. However, internal LOS circuitry is suppressed and LOS will never assert nor LOS be declared when oper- ating under this mode. 0 - Configures the corresponding channel to operate in the Normal Mode. 1 - Configure the corresponding channel to operate in the Receive Monitor Mode.
0	Receive Equalizer Enable	R/W	0	<ul> <li>Receive Equalizer Enable - Channel n: This READ/WRITE register bit is used to either enable or disable the Receive Equalizer block within the Receive Sec- tion of Channel_n, as listed below.</li> <li>0 - Disables the Receive Equalizer within the corresponding channel.</li> <li>1 - Enables the Receive Equalizer within the corresponding channel.</li> <li>Note: For virtually all applications, we recommend that the user set this bit-field to "1" (for all three channels) and enable the Receive Equalizer.</li> </ul>





#### TABLE 29: CHANNEL CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x06

# Channel 1 Address Location = 0x0E

# Channel 2 Address Location = 0x16

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
Unused		PRBS Enable Ch_n	RLB_n	LLB_n	E3_n	STS-1/DS3_n	SR/DR_n
R/O	R/O	R/W	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	0

	No.			
BIT NUMBER	NAME	Түре	DEFAULT VALUE	DESCRIPTION
7 - 6	Unused	R/O	0	
5	PRBS Enable			<ul> <li>PRBS Generator and Receiver Enable - Channel_n: This READ/WRITE bit-field is used to either enable or disable the PRBS Generator and Receiver within a given Channel of the XRT75R03D.</li> <li>If the user enables the PRBS Generator and Receiver, then the following will happen.</li> <li>1. The PRBS Generator (which resides within the Transmit Section of the Channel) will begin to generate an unframed, 2^15-1 PRBS Pattern (for DS3 and STS-1 applications) and an unframed, 2^23-1 PRBS Pattern (for E3 applications).</li> <li>2. The PRBS Receiver (which resides within the Receive Section of the Channel) will now be enabled and will begin to search the incoming data for the above-mentioned PRBS patterns.</li> <li>0 - Disables both the PRBS Generator and PRBS Receiver within the corresponding channel.</li> <li>1 - Enables both the PRBS Generator and PRBS Receiver within the corresponding channel.</li> <li>Notres:</li> <li>1. To check and monitor PRBS Bit Errors, Bit 0 (SR/DR_n) within this register Must be set to "0". This step will configure the RNEG_n/LCV_n output pin to function as the PRBS Error Indicator. In this case, external glue logic will be needed to monitor and count the number of PRBS Bit Errors that are detected by the PRBS Receiver.</li> <li>2. If the user enables the PRBS Generator and TNDATA_n input pins) and will overwrite this outbound data with the PRBS Pattern.</li> <li>3. Use of the PRBS Generator and Receiver is only available through the Host Mode.</li> </ul>

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

BIT NUMBER	Nаме	Түре	DEFAULT VALUE			DESCRIPTION
4	RLB_n	R/W	0	This READ, LLB_n bit-fi the XRT75F The relatior correspond	/WRITE bit-1 eld is used t R03D) into v nship betwee	B Bit - Channel_n: field along with the corresponding to configure a given channel (within various loop-back modes. en the settings for this input pin, the bit-field and the resulting Loop-back ow.
				LLB_n	RLB_n	Loop-back Mode
				0	0	Normal (No Loop-back) Mode
	94	No.		0	1	Remote Loop-back Mode
	.0,			1	0	Analog Local Loop-back Mode
		Drodu R/W		1	1	Digital Local Loop-back Mode
3	LLB_n	R/W	9. 0,			3 Bit-field - Channel_n: tion (above) for RLB_n.
2	E3_n	R/W		This READ, within this p channel (of STS-1 Mod 0 - Configu STS-1 Mod	particular reg the XRT75I es, as depic res Channel es, dependi	field, along with Bit 1 (STS-1/DS3_n) gister, is used to configure a given R03D) into either the DS3, E3 or cted below. I_n to operate in either the DS3 or ng upon the state of Bit 1 (STS-1/
					Constraints	e register. In to operate in the E3 Mode.





THREE CHANNEL E3/DS3/STS-1 LINE

BIT NUMBER	Nаме	Түре	DEFAULT VALUE	DESCRIPTION
1	STS-1/DS3_n	R/W	0	STS-1/DS3 Mode Select - Channel_n: This READ/WRITE bit-field, along with Bit 2 (E3_n) is used to configure a given channel (within the XRT75R03D) into either the DS3, E3 or STS-1 Modes. 0 - Configures Channel_n to operate in the DS3 Mode (pro- vided by Bit 2 [E3_n], within this same register) has been
				set to "0"). 1 - Configures Channel_n to operate in the STS-1 Mode (provided that Bit 2 [E3_n], within the same register) has been set to "0".
	day	D.		<b>Note:</b> This bit-field is ignored if Bit 2 (E3_n) has been set to "1". In this case, Channel_n will be configured to operate in the E3 Mode.
0	SR/DR_n			<ul> <li>Single-Rail/Dual-Rail Select - Channel_n: This READ/WRITE bit-field is used to configure Channel_n to operate in either the Single-Rail or Dual-Rail Mode.</li> <li>If the user configures the Channel to operate in the Single-Rail Mode, then all of the following will happen.</li> <li>The B3ZS/HDB3 Encoder and Decoder blocks (within Channel_n) will be enabled.</li> <li>The Transmit Section of Channel_n will accept all of the outbound data (from the System-side Equipment) via the TPDATA_n (or TxDATA_n) input pin.</li> <li>The Receive Section of each channel will output all of the recovered data (to the System-side Equipment) via the RPOS_n output pin.</li> <li>The corresponding RNEG_n/LCV_n output pin will now function as the LCV (Line Code Violation or Excessive Zero Event) indicator output pin for Channel_n.</li> <li>If the user configures Channel_n to operate in the Dual-Rail Mode, then all of the following will happen.</li> <li>The B3ZS/HDB3 Encoder and Decoder blocks of Channel_n will be disabled.</li> <li>The Receive Section of Channel_n will be configured to accept positive-polarity data via the TNDATA_n input pin and negative-polarity data via the TNDATA_n input pin.</li> <li>The Receive Section of Channel_n will pulse the RPOS_n output pin "High" (for one period of RCLK_n) for each time a positive-polarity pulse is received via the RTIP_n/RRING_n input pins. Likewise, the Receive Section of each channel will also pulse the RNEG_n output pin "High" (for one period of RCLK_n) for each time a negative-polarity pulse is received via the RTIP_n/RRING_n input pins.</li> <li>Configures Channel_n to operate in the Dual-Rail Mode.</li> <li>Configures Channel_n to operate in the Dual-Rail Mode.</li> </ul>

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

TABLE 30: JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0x07

# Channel 1 Address Location = 0x0F

# Channel 2 Address Location = 0x17

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
	Unused		SONET APS Recovery Time Disable Ch_n	JA RESET Ch_n	JA1 Ch_n	JA in Tx Path Ch_n	JA0 Ch_n
R/O	R/O	R/O	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	0

Bit Number	NAME	Түре	DEFAULT VALUE	DESCRIPTION
7 - 3	Unused 💍	R/O	0	
4	SONET APS Recov- ery Time Mode Dis- able Ch_n	C R/W		<ul> <li>SONET APS Recovery Time Mode Disable - Channel n: This READ/WRITE bit-field is used to either enable or disable the "SONET APS Recovery Time" Mode within the Jitter Attenuator, associated with Channel n.</li> <li>If this feature is enabled the Jitter Attenuator (associated with Channel n) will be configured such that the user's system will be able to comply with the APS Recovery Time requirements of 50ms (per Telcordia GR-253-CORE).</li> <li>If this feature is disabled the System using the XRT75R03D will NOT comply with the APS Recovery Time requirements of 50ms.</li> <li>Note: In this case, "APS Recovery Time" is defined as the amount of time that will elapse between (a) the instant that Automatic Protection Switching (APS) is employed (either "automatically" or upon Software Command), and (b) the instant that an entity (which is responsible for acquiring and maintaining DS3/E3 frame synchronization with the DS3/E3 datastream that has been de-mapped from SONET by the Mapper device) has re-acquired DS3/E3 frame synchronization, after the APS event.</li> <li>0 - Enables the "SONET APS Recovery Time" Mode.</li> </ul>





THREE CHANNEL E3/DS3/STS-1 LINE

BIT NUMBER	Nаме	Түре	Default Value	DESCRIPTION
3	JA RESET Ch_n	R/W	0	<ul> <li>Jitter Attenuator RESET - Channel_n: Writing a "0 to 1" transition within this bit-field will configure the Jitter Attenuator (within Channel_n) to execute a RESET operation.</li> <li>Whenever the user executes a RESET operation, then all of the following will occur.</li> <li>The READ and WRITE pointers (within the Jitter Attenuator FIFO) will be reset to their default values.</li> <li>The contents of the Jitter Attenuator FIFO will be flushed.</li> <li>Note: The user must follow up any "0 to 1" transition with the appropriate write operate to set this bit-field back to "0", in order to resume normal operation with the Jitter Attenuator.</li> </ul>
2	JA1 Ch_n	R/W R/R/Cr Nay Nor		Jitter Attenuator Configuration Select Input - Bit 1: This READ/WRITE bit-field, along with Bit 0 (JA0 Ch_n) is used to do any of the following. • To enable or disable the Jitter Attenuator corresponding to Channel_n. • To select the FIFO Depth for the Jitter Attenuator within Channel_n. The relationship between the settings of these two bit-fields and the Enable/Disable States, and FIFO Depths is pre- sented below. • JA0 JA1 Jitter Attenuator Mode 0 0 FIFO Depth = 16 bits 0 1 FIFO Depth = 32 bits 1 0 SONET/SDH De-Sync Mode 1 1 Jitter Attenuator Disabled
1	JA in Tx Path Ch_n	R/W	0	Jitter Attenuator in Transmit/Receive Path Select Bit: This input pin is used to configure the Jitter Attenuator (within Channel_n) to operate in either the Transmit or Receive path, as described below. 0 - Configures the Jitter Attenuator (within Channel_n) to operate in the Receive Path. 1 - Configures the Jitter Attenuator (within Channel_n) to operate in the Transmit Path.
0	JA0 Ch_n	R/W	0	Jitter Attenuator Configuration Select Input - Bit 0: Please see the description for Bit 2 (JA1 Ch_n).

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### 9.0 DIAGNOSTIC FEATURES:

#### 9.1 PRBS Generator and Detector:


The XRT75R03D contains an on-chip Pseudo Random Binary Sequence (PRBS) generator and detector for diagnostic purpose. This feature is only available in Host mode. With the PRBSEN\_n bit = "1", the transmitter will send out PRBS of  $2^{23}$ -1 in E3 rate or  $2^{15}$ -1 in STS-1/DS3 rate. At the same time, the receiver PRBS detector is also enabled. When the correct PRBS pattern is detected by the receiver, the RNEG/LCV pin will go "Low" to indicate PRBS synchronization has been achieved. When the PRBS detector is not in sync the PRBSLS bit will be set to "1" and RNEG/LCV pin will go "High".

With the PRBS mode enabled, the user can also insert a single bit error by toggling "INSPRBS" bit. This is done by writing a "1" to INSPRBS bit. The receiver at RNEG/LCV pin will pulse "High" for one RxClk cycle for every bit error detected. Any subsequent single bit error insertion must be done by first writing a "0" to INSPRBS bit and followed by a "1".

Figure 25 shows the status of RNEG/LCV pin when the XRT75R03D is configured in PRBS mode.

**NOTE:** In PRBS mode, the device is forced to operate in Single-Rail Mode.

# FIGURE 26. PRBS MODE

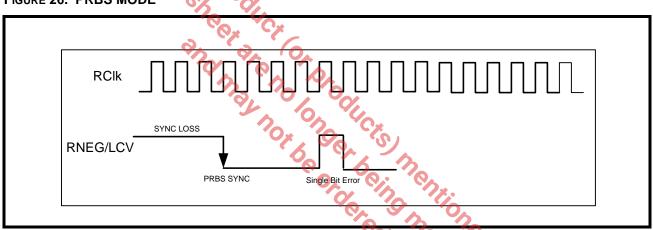

#### 9.2 LOOPBACKS:

The XRT75R03D offers three loopback modes for diagnostic purposes. In Hardware mode, the loopback modes are selected via the RLB\_n and LLB\_n pins. In Host mode, the RLB\_n and LLB\_n bits n the Channel control registers select the loopback modes.

#### 9.2.1 ANALOG LOOPBACK:

In this mode, the transmitter outputs (TTIP\_n and TRING\_n) are connected internally to the receiver inputs (RTIP\_n and RRING\_n) as shown in Figure 26. Data and clock are output at RCLK\_n, RPOS\_n and RNEG\_n pins for the corresponding transceiver. Analog loopback exercises most of the functional blocks of the device including the jitter attenuator which can be selected in either the transmit or receive path.

XRT75R03D can be configured in Analog Loopback either in Hardware mode via the LLB\_n and RLB\_n pins or in Host mode via LLB\_n and RLB\_n bits in the channel control registers.


#### NOTES:

- 1. In the Analog loopback mode, data is also output via TTIP\_n and TRING\_n pins.
- 2. Signals on the RTIP\_n and RRING\_n pins are ignored during analog loopback.





#### FIGURE 27. ANALOG LOOPBACK

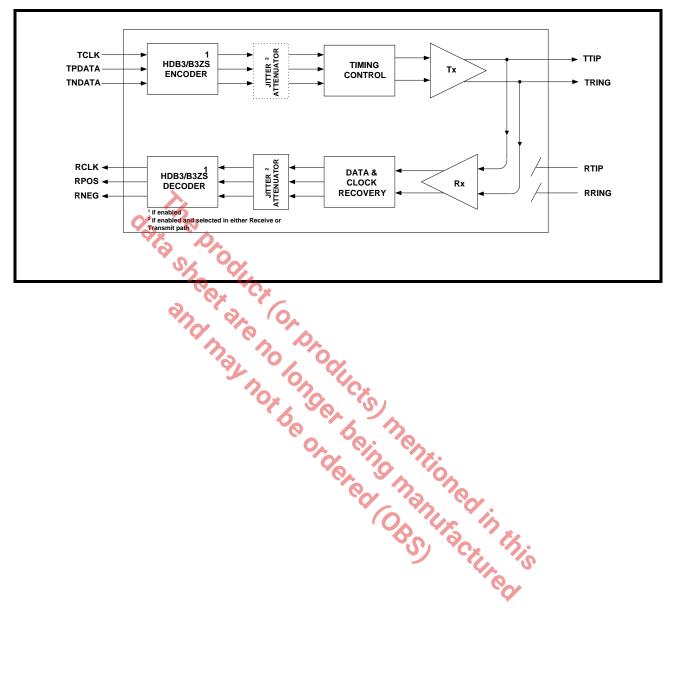




#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

#### 9.2.2 DIGITAL LOOPBACK:

The Digital Loopback function is available either in Hardware mode or Host mode. When the Digital Loopback is selected, the transmit clock (TxClk\_n) and transmit data inputs (TPDATA\_n & TNDATA\_n) are looped back and output onto the RxClk\_n, RPOS\_n and RNEG\_n pins as shown in Figure 27.

#### FIGURE 28. DIGITAL LOOPBACK

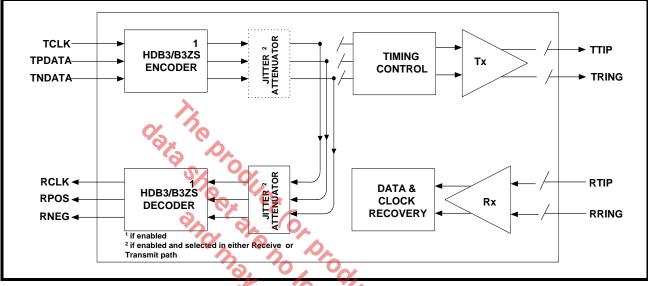


#### 9.2.3 REMOTE LOOPBACK:

With Remote loopback activated as shown in Figure 28, the receive data on RTIP and RRING is looped back after the jitter attenuator (if selected in receive or transmit path) to the transmit path using RxClk as transmit timing. The receive data is also output via the RPOS and RNEG pins.

During the remote loopback mode, if the jitter attenuator is selected in the transmit path, the receive data after the Clock and Data Recovery Block is looped back to the transmit path and passed through the jitter attenuator using RxClk as the transmit timing.

Note: Input signals on TxClk, TPDATA and TNDATA are ignored during Remote loopback.




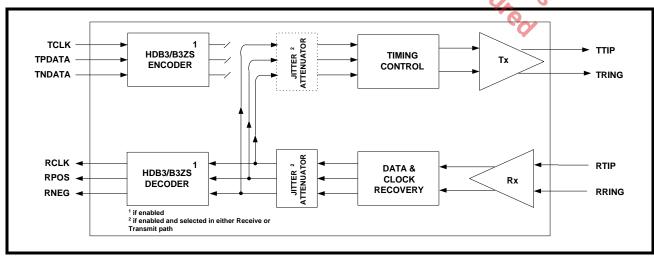



#### 9.3 TRANSMIT ALL ONES (TAOS):

Transmit All Ones (TAOS) can be set either in Hardware mode by pulling the TAOS\_n pins "High" or in Host mode by setting the TAOS\_n control bits to "1" in the Channel control registers. When the TAOS is set, the Transmit Section generates and transmits a continuous AMI all "1's" pattern on TTIP\_n and TRING\_n pins. The frequency of this "1's" pattern is determined by TClk\_n.TAOS data path is shown in Figure 29. TAOS does not operate in Analog loopback or Remote Digital loopback mode. It will function in Digital loopback mode.

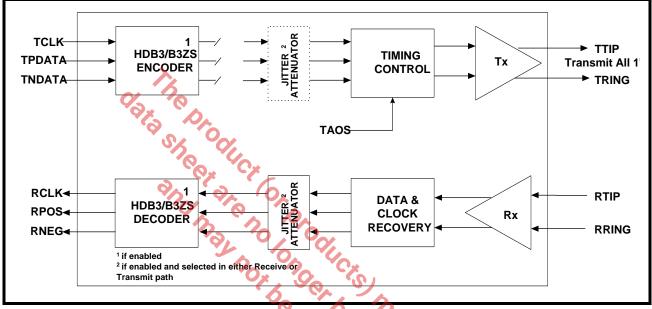

#### FIGURE 30. TRANSMIT ALL ONES (TAOS)



The XRT75R03D LIU IC is very similar to the XRT75R03 in that they are both 3-Channel DS3/E3/STS-1 LIU devices that also contain Jitter Attenuator blocks within each of the three channels. They are also pin to pin compatible with each other. However, the Jitter Attenuators within the XRT75R03D has some enhancements over and above those within the XRT75R03 (non-D) device. The Jitter Attenuator blocks within the XRT75R03D will support all of the modes and features that exist in the XRT75R03 (non-D) device and in addition they also support a SONET/SDH De-Sync Mode not available within the XRT75R03.

Note: The "D" suffix within the part number, XRT75R03D stands for "De-Sync".

The SONET/SDH De-Sync feature of the Jitter Attenuator blocks in the XRT75R03D permits the user to design a SONET/SDH PTE (Path Terminating Equipment) that will comply with all of the following Intrinsic Jitter and Wander requirements.

#### • For SONET Applications

- n Category I Intrinsic Jitter Requirements per Telcordia GR-253-CORE (for DS3 Applications)
- n ANSI T1.105.03b-1997 SONET Jitter at Network Interfaces DS3 Wander Supplement

#### • For SDH Applications

n Jitter and Wander Generation Requirements per ITU-T G.783 (for DS3 and E3 Applications)

Specifically, if the user designs in the XRT75R03D along with a SONET/SDH Mapper IC (which can be realized as either a standard product or as a custom logic solution, in an ASIC or FPGA), then the followind can be accomplished;

 The Mapper can receive an STS-N or an STM-M signal (which is carrying asynchronously-mapped DS3 and/ or E3 signals) and byte de-interleave this data into N STS-1 or 3\*M VC-3 signals



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

- The Mapper will then terminate these STS-1 or VC-3 signals and will de-map out this DS3 or E3 data from the incoming STS-1 SPEs or VC-3s, and output this DS3 or E3 to the DS3/E3 Facility-side towards the XRT75R03D
- This DS3 or E3 signal (as it is output from these Mapper devices) will contain a large amount intrinsic jitter and wander due to (1) the process of asynchronously mapping a DS3 or E3 signal into a SONET or SDH signal, (2) the occurrence of Pointer Adjustments within the SONET or SDH signal (transporting these DS3 or E3 signals) as it traverses the SONET/SDH network, and (3) clock gapping.
- When the XRT75R03D has been configured to operate in the "SONET/SDH De-Sync" Mode, then it will (1) accept this jittery DS3 or E3 clock and data signal from the Mapper device (via the Transmit System-side interface) and (2) through the Jitter Attenuator, the XRT75R03D will reduce the Jitter and Wander amplitude within these DS3 or E3 signals such that they (when output onto the line) will comply with the above-mentioned intrinsic jitter and wander specifications.

#### 10.1 BACKGROUND AND DETAILED INFORMATION - SONET DE-SYNC APPLICATIONS

This section provides an in-depth discussion on the mechanisms that will cause Jitter and Wander within a DS3 or E3 signal that is being transported across a SONET or SDH Network. A lot of this material is introductory, and can be skipped by the engineer that is already experienced in SONET/SDH designs. In this case, the user should proceed directly to <u>Section 10.8</u>, <u>Designing with the XRT75R03D</u>" on page 120, which describes how to configure the XRT75R03D in the appropriate set of modes in order to support this application.


In the wide-area network (WAN) in North America it is often necessary to transport a DS3 signal over a long distance (perhaps over a thousand miles) in order to support a particular service. Now rather than realizing this transport of DS3 data, by using over a thousand miles of coaxial cable (interspaced by a large number of DS3 repeaters) a common thing to do is to route this DS3 signal to a piece of equipment (such as a Terminal MUX, which in the "SONET Community" is known as a PTE or Path Terminating Equipment). This Terminal MUX will asynchronously map the DS3 signal into a SONET signal. At this point, the SONET network will now transport this asynchronously mapped DS3 signal from one PTE to another PTE (which is located at the other end of the SONET network). Once this SONET signal arrives at the remote PTE, this DS3 signal will then be extracted from the SONET signal, and will be output to some other DS3 Terminal Equipment for further processing.

Similar things are done outside of North America. In this case, this DS3 or E3 signal is routed to a PTE, where it is asynchronously mapped into an SDH signal. This asynchronously mapped DS3 or E3 signal is then transported across the SDH network (from one PTE to the PTE at the other end of the SDH network). Once this SDH signal arrives at the remote PTE, this DS3 or E3 signal will then be extracted from the SDH signal, and will be output to some other DS3/E3 Terminal Equipment for further processing.

Figure 31 presents an illustration of this approach to transporting DS3 data over a SONET Network



FIGURE 31. A SIMPLE ILLUSTRATION OF A DS3 SIGNAL BEING MAPPED INTO AND TRANSPORTED OVER THE SONET NETWORK

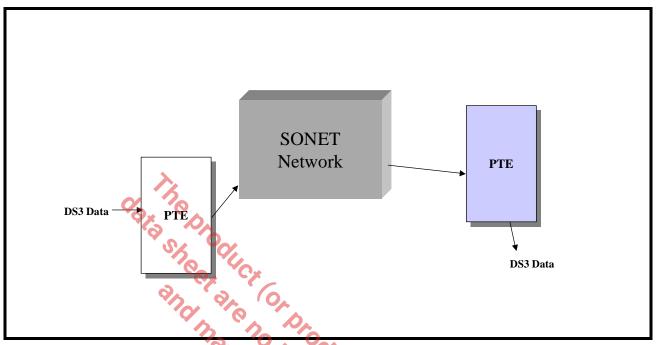

As mentioned above a DS3 or E3 signal will be asynchronously mapped into a SONET or SDH signal and then transported over the SONET or SDH network. At the remote PTE this DS3 or E3 signal will be extracted (or de-mapped) from this SONET or SDH signal, where it will then be routed to DS3 or E3 terminal equipment for further processing.

In order to insure that this "de-mapped" DS3 or E3 signal can be routed to any industry-standard DS3 or E3 terminal equipment, without any complications or adverse effect on the network, the Telcordia and ITU-T standard committees have specified some limits on both the Intrinsic Jitter and Wander that may exist within these DS3 or E3 signals as they are de-mapped from SONET/SDH. As a consequence, all PTEs that maps and de-mapped DS3/E3 signals into/from SONET/SDH must be designed such that the DS3 or E3 data that is de-mapped from SONET/SDH by these PTEs must meet these Intrinsic Jitter and Wander requirements.

As mentioned above, the XRT75R03D can assist the System Designer (of SONET/SDH PTE) by insuring that their design will meet these Intrinsic Jitter and Wander requirements.

This section of the data sheet will present the following information to the user.

- Some background information on Mapping DS3/E3 signals into SONET/SDH and de-mapping DS3/E3 signals from SONET/SDH.
- A brief discussion on the causes of jitter and wander within a DS3 or E3 signal that mapped into a SONET/ SDH signal, and is transported across the SONET/SDH Network.
- A brief review of these Intrinsic Jitter and Wander requirements in both SONET and SDH applications.
- A brief review on the Intrinsic Jitter and Wander measurement results (of a de-mapped DS3 or E3 signal) whenever the XRT75R03D device is used in a system design.
- A detailed discussion on how to design with and configure the XRT75R03D device such that the end-system will meet these Intrinsic Jitter and Wander requirements.

In a SONET system, the relevant specification requirements for Intrinsic Jitter and Wander (within a DS3 signal that is mapped into and then de-mapped from SONET) are listed below.

• Telcordia GR-253-CORE Category I Intrinsic Jitter Requirements for DS3 Applications (Section 5.6), and



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

• ANSI T1.105.03b-1997 - SONET Jitter at Network Interfaces - DS3 Wander Supplement

In general, there are three (3) sources of Jitter and Wander within an asynchronously-mapped DS3 signal that the system designer must be aware of. These sources are listed below.

- Mapping/De-Mapping Jitter
- Pointer Adjustments
- Clock Gapping

Each of these sources of jitter/wander will be defined and discussed in considerable detail within this Section. In order to accomplish all of this, this particular section will discuss all of the following topics in details.

- How DS3 data is mapped into SONET, and how this mapping operation contributes to Jitter and Wander within this "eventually de-mapped" DS3 signal.
- How this asynchronously-mapped DS3 data is transported throughout the SONET Network, and how occurrences on the SONET network (such as pointer adjustments) will further contributes to Jitter and Wander within the "eventually de-mapped" DS3 signal.
- A review of the Category I Intrinsic Jitter Requirements (per Telcordia GR-253-CORE) for DS3 applications
- A review of the DS3 Wander requirements per ANSI T1.105.03b-1997
- A review of the Intrinsic Jitter and Wander Capabilities of the XRT75R03D in a typical system application
- An in-depth discussion on how to design with and configure the XRT75R03D to permit the system to the meet the above-mentioned Intrinsic Jitter and Wander requirements

**NOTE:** An in-depth discussion on SDH De-Sync Applications will be presented in the next revision of this data sheet.

## 10.2 MAPPING/DE-MAPPING JITTER/WANDER

Mapping/De-Mapping Jitter (or Wander) is defined as that intrinsic jitter (or wander) that is induced into a DS3 signal by the "Asynchronous Mapping" process. This section will discuss all of the following aspects of Mapping/De-Mapping Jitter.

- How DS3 data is mapped into an STS-1 SPE
- How frequency offsets within either the DS3 signal (being mapped into SONET) or within the STS-1 signal itself contributes to intrinsic jitter/wander within the DS3 signal (being transported via the SONET network).

# 10.2.1 HOW DS3 DATA IS MAPPED INTO SONET

Whenever a DS3 signal is asynchronously mapped into SONET, this mapping is typically accomplished by a PTE accepting DS3 data (from some remote terminal) and then loading this data into certain bit-fields within a given STS-1 SPE (or Synchronous Payload Envelope). At this point, this DS3 signal has now been asynchronously mapped into an STS-1 signal. In most applications, the SONET Network will then take this particular STS-1 signal and will map it into "higher-speed" SONET signals (e.g., STS-3, STS-12, STS-48, etc.) and will then transport this asynchronously mapped DS3 signal across the SONET network, in this manner. As this "asynchronously-mapped" DS3 signal approaches its "destination" PTE, this STS-1 signal will eventually be de-mapped from this STS-N signal. Finally, once this STS-1 signal reaches the "destination" PTE, then this asynchronously-mapped DS3 signal will be extracted from this STS-1 signal.

#### 10.2.1.1 A Brief Description of an STS-1 Frame

In order to be able to describe how a DS3 signal is asynchronously mapped into an STS-1 SPE, it is important to define and understand all of the following.

- The STS-1 frame structure
- The STS-1 SPE (Synchronous Payload Envelope)
- Telcordia GR-253-CORE's recommendation on mapping DS3 data into an STS-1 SPE



#### THREE CHANNEL E3/DS3/STS-1 LINE

An STS-1 frame is a data-structure that consists of 810 bytes (or 6480 bits). A given STS-1 frame can be viewed as being a 9 row by 90 byte column array (making up the 810 bytes). The frame-repetition rate (for an STS-1 frame) is 8000 frames/second. Therefore, the bit-rate for an STS-1 signal is (6480 bits/frame \* 8000 frames/sec =) 51.84Mbps.

A simple illustration of this SONET STS-1 frame is presented below in Figure 32.

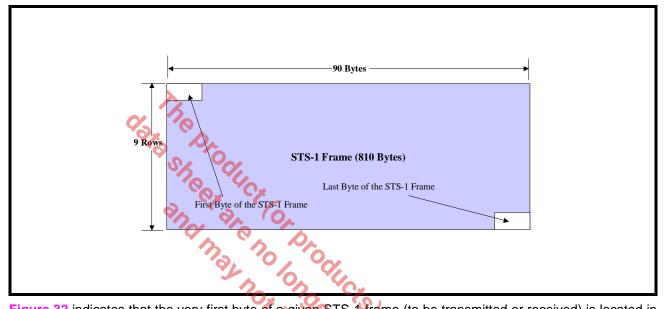


FIGURE 32. A SIMPLE ILLUSTRATION OF THE SONET STS-1 FRAME

**Figure 32** indicates that the very first byte of a given STS-1 frame (to be transmitted or received) is located in the extreme upper left hand corner of the 90 column by 9 row array, and that the very last byte of a given STS-1 frame is located in the extreme lower right-hand corner of the frame structure. Whenever a Network Element transmits a SONET STS-1 frame, it starts by transmitting all of the data, residing within the top row of the STS-1 frame structure (beginning with the left-most byte, and then transmitting the very next byte, to the right). After the Network Equipment has completed its transmission of the top or first row, it will then proceed to transmit the second row of data (again starting with the left-most byte, first). Once the Network Equipment has transmitted the last byte of a given STS-1 frame, it will proceed to start transmitting the very next STS-1 frame.

The illustration of the STS-1 frame (in Figure 32) is very simplistic, for multiple reasons. One major reason is that the STS-1 frame consists of numerous types of bytes. For the sake of discussion within this data sheet, the STS-1 frame will be described as consisting of the following types (or groups) of bytes.

- The Transport Overheads (or TOH) Bytes
- The Envelope Capacity Bytes


**10.2.1.1.1** The Transport Overhead (TOH) Bytes

The Transport Overhead or TOH bytes occupy the very first three (3) byte columns within each STS-1 frame. **Figure 33** presents another simple illustration of an STS-1 frame structure. However, in this case, both the TOH and the Envelope Capacity bytes are designated in this Figure.




# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER


FIGURE 33. A SIMPLE ILLUSTRATION OF THE STS-1 FRAME STRUCTURE WITH THE TOH AND THE ENVELOPE CAPACITY BYTES DESIGNATED

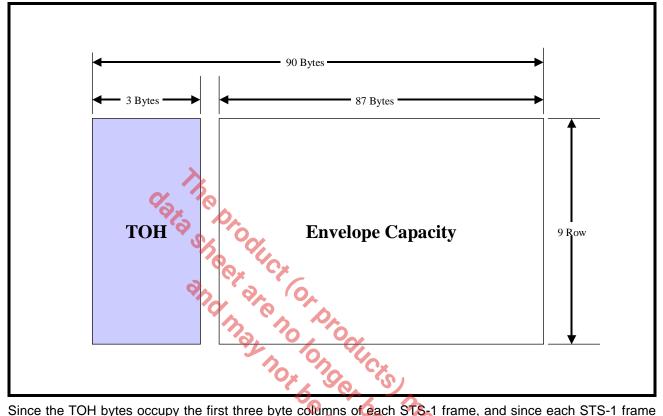

Since the TOH bytes occupy the first three byte columns of each STS-1 frame, and since each STS-1 frame consists of nine (9) rows, then we can state that the TOH (within each STS-1 frame) consists of 3 byte columns x 9 rows = 27 bytes. The byte format of the TOH is presented below in Figure 34.

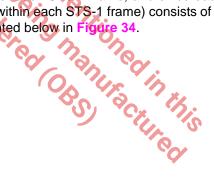



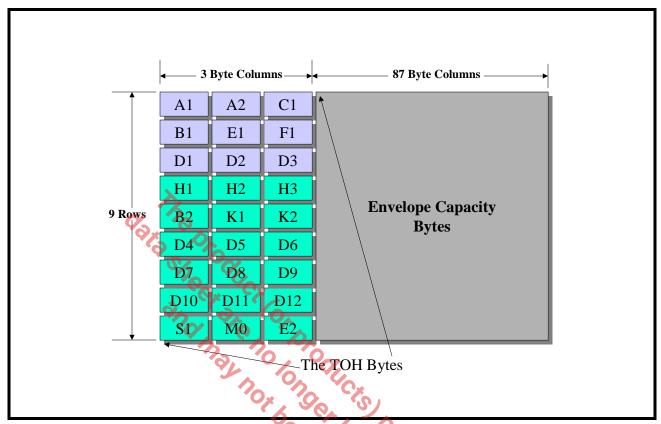

#### FIGURE 34. THE BYTE-FORMAT OF THE TOH WITHIN AN STS-1 FRAME


In general, the role/purpose of the TOH bytes is to fulfill the following functions.

- To support STS-1 Frame Synchronization
- To support Error Detection within the STS-1 frame
- To support the transmission of various alarm conditions such as RDI-L (Line Remote Defect Indicator) and REI-L (Line Remote Error Indicator)
- To support the Transmission and Reception of "Section Trace" Messages
- To support the Transmission and Reception of OAM&P Messages via the DCC Bytes (Data Communication Channel bytes D1 through D12 byte)

The roles of most of the TOH bytes is beyond the scope of this Data Sheet and will not be discussed any further. However, there are a three TOH bytes that are important from the stand-point of this data sheet, and will discussed in considerable detail throughout this document. These are the H1 and H2 (e.g., the SPE Pointer) bytes and the H3 (e.g., the Pointer Action) byte.

Figure 35 presents an illustration of the Byte-Format of the TOH within an STS-1 Frame, with the H1, H2 and H3 bytes highlighted.

# THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

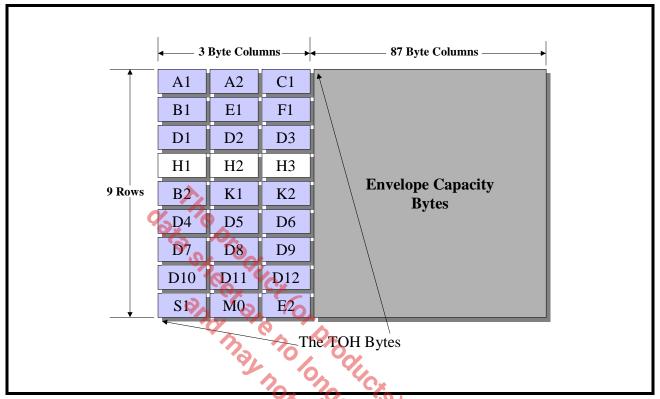

#### FIGURE 35. THE BYTE-FORMAT OF THE TOH WITHIN AN STS-1 FRAME

Although the role of the H1, H2 and H3 bytes will be discussed in much greater detail in "Section 10.3, Jitter/ Wander due to Pointer Adjustments" on page 103. For now, we will simply state that the role of these bytes is two-fold.

- To permit a given PTE (Path Terminating Equipment) that is receiving an STS-1 data to be able to locate the STS-1 SPE (Synchronous Payload Envelope) within the Envelope Capacity of this incoming STS-1 data stream and,
- To inform a given PTE whenever Pointer Adjustment and NDF (New Data Flag) events occur within the incoming STS-1 data-stream.
- **10.2.1.1.2** The Envelope Capacity Bytes within an STS-1 Frame

In general, the Envelope Capacity Bytes are any bytes (within an STS-1 frame) that exist outside of the TOH bytes. In short, the Envelope Capacity contains the STS-1 SPE (Synchronous Payload Envelope). In fact, every single byte that exists within the Envelope Capacity also exists within the STS-1 SPE. The only difference that exists between the "Envelope Capacity" as defined in Figure 34 and Figure 35 above and the STS-1 SPE is that the Envelope Capacity is aligned with the STS-1 framing boundaries and the TOH bytes; whereas the STS-1 SPE is NOT aligned with the STS-1 framing boundaries, nor the TOH bytes.


The STS-1 SPE is an "87 byte column x 9 row" data-structure (which is the exact same size as is the Envelope Capacity) that is permitted to "float" within the "Envelope Capacity". As a consequence, the STS-1 SPE (within an STS-1 data-stream) will typically straddle across an STS-1 frame boundary.

#### 10.2.1.1.3 The Byte Structure of the STS-1 SPE

As mentioned above, the STS-1 SPE is an 87 byte column x 9 row structure. The very first column within the STS-1 SPE consists of some overhead bytes which are known as the "Path Overhead" (or POH) bytes. The remaining portions of the STS-1 SPE is available for "user" data. The Byte Structure of the STS-1 SPE is presented below in Figure 36.





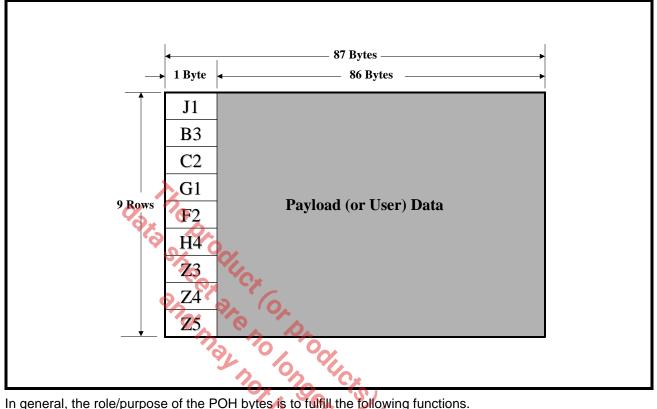

In general, the role/purpose of the POH bytes is to fulfill the following functions.

- To support error detection within the STS-1 SPE
- To support the transmission of various alarm conditions such as RDI-P (Path Remote Defect Indicator) and REI-P (Path - Remote Error Indicator)
- To support the transmission and reception of "Path Trace" Messages

The role of the POH bytes is beyond the scope of this data sheet and will not be discussed any further.

#### 10.2.1.2 Mapping DS3 data into an STS-1 SPE

Now that we have defined the STS-1 SPE, we can now describe how a DS3 signal is mapped into an STS-1 SPE. As mentioned above, the STS-1 SPE is basically an 87 byte column x 9 row structure of data. The very first byte column (e.g., in all 9 bytes) consists of the POH (Path Overhead) bytes. All of the remaining bytes within the STS-1 SPE is simply referred to as "user" or "payload" data because this is the portion of the STS-1 signal that is used to transport "user data" from one end of the SONET network to the other. Telcordia GR-253-CORE specifies the approach that one must use to asynchronously map DS3 data into an STS-1 SPE. In short, this approach is presented below in Figure 37.



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

# FIGURE 37. AN ILLUSTRATION OF TELCORDIA GR-253-CORE'S RECOMMENDATION ON HOW MAP DS3 DATA INTO AN STS-1 SPE

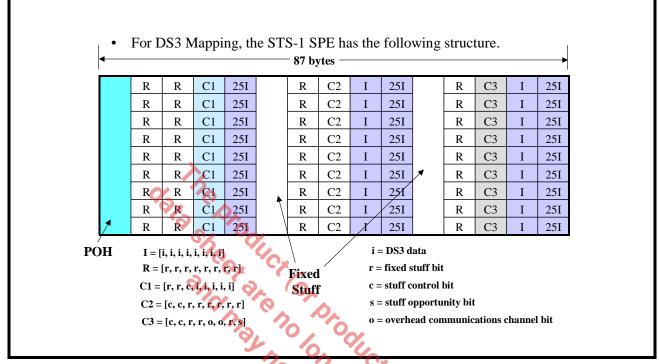


Figure 37 was copied directly out of Telcordia GR-253-CORE, However, this figure can be simplified and redrawn as depicted below in Figure 38.



								G	9 (C	3	Ny s	9	<u>.</u>	
	18r	с	205i	16r	2c	бr	208i	16r	2c	2r	20	lr	S	208i
	18r	с	205i	16r	2c	6r	208i	16r	2c	2r	20	lr.	s	208i
	18r	с	205i	16r	2c	6r	208i	16r	2c	2r	20	1r	8	208i
	18r	с	205i	16r	2c	6r	208i	16r	2c	2r	20	1r	s	208i
	18r	с	205i	16r	2c	6r	208i	16r	2c	2r	20	1r	s	208i
	18r	c	205i	16r	2c	6r	208i	16r	2c	2r	20	1r	S	208i
	18r	с	205i	16r	2c	6r	208i	16r	2c	2r	20	1r	S	208i
	18r	с	205i	16r	2c	6r	208i	16r	2c	2r	20	1r	S	208i
Ľ.	18r	c	205i	16r	2c	6r	208i	16r	2c	2r	20	1r	S	208i
/ POH	H r - Fixed Stuff Bits							O - Overhead Communication Bits						
	c - Stuff Control/Indicator Bits													
	i - DS3 Data Bits													
	<b>S</b> - Stuff Opportunity Bits													



#### THREE CHANNEL E3/DS3/STS-1 LINE

**Figure 38** presents an alternative illustration of Telcordia GR-253-CORE's recommendation on how to asynchronously map DS3 data into an STS-1 SPE. In this case, the STS-1 SPE bit-format is expressed purely in the form of "bit-types" and "numbers of bits within each of these types of bits". If one studies this figure closely he/she will notice that this is the same "87 byte column x 9 row" structure that we have been talking about when defining the STS-1 SPE. However, in this figure, the "user-data" field is now defined and is said to consist of five (5) different types of bits. Each of these bit-types play a role when asynchronously mapping a DS3 signal into an STS-1 SPE. Each of these types of bits are listed and described below.

#### Fixed Stuff Bits

Fixed Stuff bits are simply "space-filler" bits that simply occupy space within the STS-1 SPE. These bit-fields have no functional role other than "space occupation". Telcordia GR-253-CORE does not define any particular value that these bits should be set to. Each of the 9 rows, within the STS-1 SPE will contain 59 of these "fixed stuff" bits.

#### DS3 Data Bits

The DS3 Data-Bits are (as its name implies) used to transport the DS3 data-bits within the STS-1 SPE. If the STS-1 SPE is transporting a framed DS3 data-stream, then these DS3 Data bits will carry both the "DS3 payload data" and the "DS3 overhead bits". Each of the 9 rows, within the STS-1 SPE will contain 621 of these "DS3 Data bits". This means that each STS-1 SPE contains 5,589 of these DS3 Data bit-fields.

#### **Stuff Opportunity Bits**

The "Stuff" Opportunity bits will function as either a "stuff" (or junk) bit, or it will carry a DS3 data-bit. The decision as to whether to have a "Stuff Opportunity" bit transport a "DS3 data-bit" or a "stuff" bit depends upon the "timing differences" between the DS3 data that is being mapped into the STS-1 SPE and the timing source that is driving the STS-1 circuitry within the PTE.

As will be described later on, these "Stuff Opportunity" Bits play a very important role in "frequency-justifying" the DS3 data that is being mapped into the STS-1 SPE. These "Stuff Opportunity" bits also play a critical role in inducing Intrinsic Jitter and Wander within the DS3 signal (as it is de-mapped by the remote PTE).

Each of the 9 rows, within the STS-1 SPE consists of one (1) Stuff Opportunity bit. Hence, there are a total of nine Stuff Opportunity" bits within each STS-1 SPE.

#### Stuff Control/Indicator Bits

Each of the nine (9) rows within the STS-1 SPE contains five (5) Stuff Control/Indicator bits. The purpose of these "Stuff Control/Indicator" bits is to indicate (to the de-mapping PTE) whether the "Stuff Opportunity" bits (that resides in the same row) is a "Stuff" bit or is carrying a DS3 data bit.

If all five of these "Stuff Control/Indicator" bits, within a given row are set to "0", then this means that the corresponding "Stuff Opportunity" bit (e.g., the "Stuff Opportunity" bit within the same row) is carrying a DS3 data bit.

Conversely, if all five of these "Stuff Control/Indicator" bits, within a given row are set to "1" then this means that the corresponding "Stuff Opportunity" bit is carrying a "stuff" bit.

#### **Overhead Communication Bits**

Telcordia GR-253-CORE permits the user to use these two bits (for each row) as some sort of "Communications" bit. Some Mapper devices, such as the XRT94L43 12-Channel DS3/E3/STS-1 to STS-12/STM-1 Mapper and the XRT94L33 3-Channel DS3/E3/STS-1 to STS-3/STM-1 Mapper IC (both from Exar Corporation) do permit the user to have access to these bit-fields.

However, in general, these particular bits can also be thought of as "Fixed Stuff" bits, that mostly have a "space occupation" function.

#### 10.2.2 DS3 Frequency Offsets and the Use of the "Stuff Opportunity" Bits

In order to fully convey the role that the "stuff-opportunity" bits play, when mapping DS3 data into SONET, we will present a detailed discussion of each of the following "Mapping DS3 into STS-1" scenarios.



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

- The Ideal Case (e.g., with no frequency offsets)
- The 44.736Mbps + 1 ppm Case
- The 44.736MHz 1ppm Case

Throughout each of these cases, we will discuss how the resulting "bit-stuffing" (that was done when mapping the DS3 signal into SONET) affects the amount of intrinsic jitter and wander that will be present in the DS3 signal, once it is ultimately de-mapped from SONET.

# 10.2.2.1 The Ideal Case for Mapping DS3 data into an STS-1 Signal (e.g., with no Frequency Offsets)

Let us assume that we are mapping a DS3 signal, which has a bit rate of exactly 44.736Mbps (with no frequency offset) into SONET. Further, let us assume that the SONET circuitry within the PTE is clocked at exactly 51.84MHz (also with no frequency offset), as depicted below.

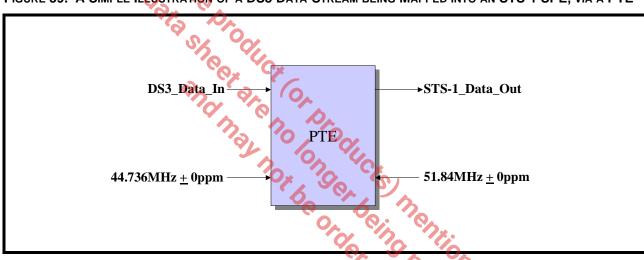


FIGURE 39. A SIMPLE ILLUSTRATION OF A DS3 DATA-STREAM BEING MAPPED INTO AN STS-1 SPE, VIA A PTE

Given the above-mentioned assumptions, we can state the following

- The DS3 data-stream has a bit-rate of exactly 44.736Mbps
- The PTE will create 8000 STS-1 SPE's per second
- In order to properly map a DS3 data-stream into an STS-1 data-stream, then each STS-1 SPE must carry (44.736Mbps/8000 =) 5592 DS3 data bits.

#### Is there a Problem?

According to Figure 38, each STS-1 SPE only contains 5589 bits that are specifically designated for "DS3 data bits". In this case, each STS-1 SPE appears to be three bits "short".

#### No there is a Simple Solution

No, earlier we mentioned that each STS-1 SPE consists of nine (9) "Stuff Opportunity" bits. Therefore, these three additional bits (for DS3 data) are obtained by using three of these "Stuff Opportunity" bits. As a consequence, three (3) of these nine (9) "Stuff Opportunity" bits, within each STS-1 SPE, will carry DS3 databits. The remaining six (6) "Stuff Opportunity" bits will typically function as "stuff" bits.

In summary, for the "Ideal Case"; where there is no frequency offset between the DS3 and the STS-1 bit-rates, once this DS3 data-stream has been mapped into the STS-1 data-stream, then each and every STS-1 SPE will have the following "Stuff Opportunity" bit utilization.

#### 3 "Stuff Opportunity" bits will carry DS3 data bits.

6 "Stuff Opportunity" bits will function as "stuff" bits



#### THREE CHANNEL E3/DS3/STS-1 LINE

In this case, this DS3 signal (which has now been mapped into STS-1) will be transported across the SONET network. As this STS-1 signal arrives at the "Destination PTE", this PTE will extract (or de-map) this DS3 datastream from each incoming STS-1 SPE. Now since each and every STS-1 SPE contains exactly 5592 DS3 data bits; then the bit rate of this DS3 signal will be exactly 44.736Mbps (such as it was when it was mapped into SONET, at the "Source" PTE).

As a consequence, no "Mapping/De-Mapping" Jitter or Wander is induced in the "Ideal Case".

#### 10.2.2.2 The 44.736Mbps + 1ppm Case

The "above example" was a very ideal case. In reality, there are going to be frequency offsets in both the DS3 and STS-1 signals. For instance Bellcore GR-499-CORE mandates that a DS3 signal have a bit rate of 44.736Mbps  $\pm$  20ppm. Hence, the bit-rate of a "Bellcore" compliant DS3 signal can vary from the exact correct frequency for DS3 by as much of 20ppm in either direction. Similarly, many SONET applications mandate that SONET equipment use at least a "Stratum 3" level clock as its timing source. This requirement mandates that an STS-1 signal must have a bit rate that is in the range of  $51.84 \pm 4.6$ ppm. To make matters worse, there are also provisions for SONET equipment to use (what is referred to as) a "SONET Minimum Clock" (SMC) as its timing source. In this case, an STS-1 signal can have a bit-rate in the range of 51.84 Mbps  $\pm$  20ppm.

In order to convey the impact that trequency offsets (in either the DS3 or STS-1 signal) will impose on the bitstuffing behavior, and the resulting bit-rate, intrinsic jitter and wander within the DS3 signal that is being transported across the SONET network; let us assume that a DS3 signal, with a bit-rate of 44.736Mbps + 1ppm is being mapped into an STS-1 signal with a bit-rate of 51.84Mbps + 0ppm. In this case, the following things will occur.

- In general, most of the STS-1 SPE's will each transport 5592 DS3 data bits.
- However, within a "one-second" period, a DS3 signal that has a bit-rate of 44.736Mbps + 1 ppm will deliver approximately 44.7 additional bits (over and above that of a DS3 signal with a bit-rate of 44.736Mbps + 0 ppm). This means that this particular signal will need to "negative-stuff" or map in an additional DS3 data bit every (1/44.736 =) 22.35ms. In other words, this additional DS3 data bit will need to be mapped into about one in every (22.35ms · 8000 =) 178.8 STS-1 SPEs in order to avoid dropping any DS3 data-bits.


#### What does this mean at the "Source" PTE?

All of this means that as the "Source" PTE maps this DS3 signal, with a data rate of 44.736Mbps + 1ppm into an STS-1 signal, most of the resulting "outbound" STS-1 SPEs will transport 5592 DS3 data bits (e.g., 3 Stuff Opportunity bits will be carrying DS3 data bits, the remaining 6 Stuff Opportunity bits are "stuff" bits, as in the "Ideal" case). However, in approximately one out of 178.8 "outbound" STS-1 SPEs, there will be a need to insert an additional DS3 data bit within this STS-1 SPE. Whenever this occurs, then (for these particular STS-1 SPEs) the SPE will be carrying 5593 DS3 data bits (e.g., 4 Stuff Opportunity bits will be carrying DS3 data bits, the remaining 5 Stuff Opportunity bits are "stuff" bits).

Figure 40 presents an illustration of the STS-1 SPE traffic that will be generated by the "Source" PTE, during this condition.

#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

FIGURE 40. AN ILLUSTRATION OF THE STS-1 SPE TRAFFIC THAT WILL BE GENERATED BY THE "SOURCE" PTE, WHEN MAPPING IN A DS3 SIGNAL THAT HAS A BIT RATE OF 44.736MBPS + 1PPM, INTO AN STS-1 SIGNAL

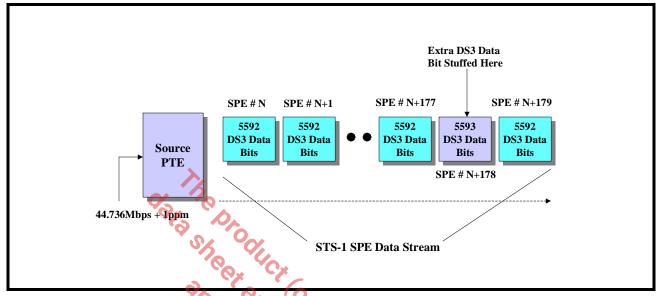

#### What does this mean at the "Destination" PTE?

In this case, this DS3 signal (which has now been mapped into an STS-1 data-stream) will be transported across the SONET network. As this STS-1 signal arrives at the "Destination" PTE, this PTE will extract (or demap) this DS3 data from each incoming STS-1 SPE. Now, in this case most (e.g., 177/178.8) of the incoming STS-1 SPEs will contain 5592 DS3 data-bits. Therefore, the nominal data rate of the DS3 signal being demapped from SONET will be 44.736Mbps. However, in approximately 1 out of every 178 incoming STS-1 SPEs, the SPE will carry 5593 DS3 data-bits. This means that (during these times) the data rate of the demapped DS3 signal will have an instantaneous frequency that is greater than 44.736Mbps. These "excursion" of the de-mapped DS3 data-rate, from the nominal DS3 frequency can be viewed as occurrences of "mapping/ de-mapping" jitter. Since each of these "bit-stuffing" events involve the insertion of one DS3 data bit, we can say that the amplitude of this "mapping/de-mapping" jitter is approximately 1UI-pp. From this point on, we will be referring to this type of jitter (e.g., that which is induced by the mapping and de-mapping process) as "demapping" jitter.

Since this occurrence of "de-mapping" jitter is periodic and occurs once every 22.35ms, we can state that this jitter has a frequency of 44.7Hz.

#### 10.2.2.3 The 44.736Mbps - 1ppm Case

In this case, let us assume that a DS3 signal, with a bit-rate of 44.736Mbps - 1ppm is being mapped into an STS-1 signal with a bit-rate of 51.84Mbps + 0ppm. In this case, the following this will occur.

- In general, most of the STS-1 SPEs will each transport 5592 DS3 data bits.
- However, within a "one-second" period a DS3 signal that has a bit-rate of 44.736Mbps 1ppm will deliver approximately 45 too few bits below that of a DS3 signal with a bit-rate of 44.736Mbps + 0ppm. This means that this particular signal will need to "positive-stuff" or exclude a DS3 data bit from mapping every (1/44.736) = 22.35ms. In other words, we will need to avoid mapping this DS3 data-bit about one in every (22.35ms\*8000) = 178.8 STS-1 SPEs.

#### What does this mean at the "Source" PTE?

All of this means that as the "Source" PTE maps this DS3 signal, with a data rate of 44.736Mbps - 1ppm into an STS-1 signal, most of the resulting "outbound" STS-1 SPEs will transport 5592 DS3 data bits (e.g., 3 Stuff Opportunity bits will be carrying DS3 data bits, the remaining 6 Stuff Opportunity bits are "stuff" bits). However, in approximately one out of 178.8 "outbound" STS-1 SPEs, there will be a need for a "positive-stuffing" event.




#### THREE CHANNEL E3/DS3/STS-1 LINE

Whenever these "positive-stuffing" events occur then (for these particular STS-1 SPEs) the SPE will carry only 5591 DS3 data bits (e.g., in this case, only 2 Stuff Opportunity bits will be carrying DS3 data-bits, and the remaining 7 Stuff Opportunity bits are "stuff" bits).

Figure 41 presents an illustration of the STS-1 SPE traffic that will be generated by the "Source" PTE, during this condition.

FIGURE 41. AN ILLUSTRATION OF THE STS-1 SPE TRAFFIC THAT WILL BE GENERATED BY THE SOURCE PTE, WHEN MAPPING A DS3 SIGNAL THAT HAS A BIT RATE OF 44.736MBPS - 1PPM, INTO AN STS-1 SIGNAL

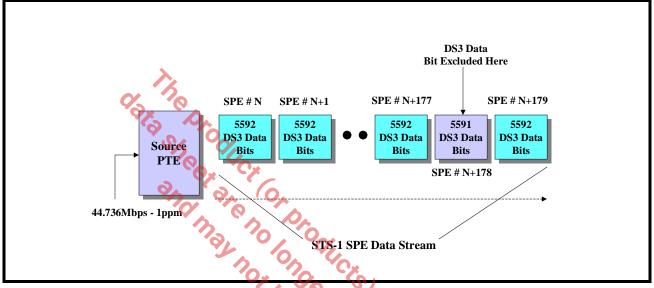

#### What does this mean at the Destination PTE?

In this case, this DS3 signal (which has now been mapped into an STS-1 data-stream) will be transported across the SONET network. As this STS-1 signal arrives at the "Destination" PTE, this PTE will extract (or demap) this DS3 data from each incoming STS-1 SPE. Now, in this case, most (e.g., 177/178.8) of the incoming STS-1 SPEs will contain 5592 DS3 data-bits. Therefore, the nominal data rate of the DS3 signal being demapped from SONET will be 44.736Mbps. However, in approximately 1 out of every 178 incoming STS-1 SPEs, the SPE will carry only 5591 DS3 data bits. This means that (during these times) the data rate of the demapped DS3 signal will have an instantaneous frequency that is less than 44.736Mbps. These "excursions" of the de-mapped DS3 data-rate, from the nominal DS3 frequency can be viewed as occurrences of mapping/demapping jitter with an amplitude of approximately 1UI-pp.

Since this occurrence of "de-mapping" jitter is periodic and occurs once every 22.35ms, we can state that this jitter has a frequency of 44.7Hz.

#### We talked about De-Mapping Jitter, What about De-Mapping Wander?

The Telcordia and Bellcore specifications define "Wander" as "Jitter with a frequency of less than 10Hz". Based upon this definition, the DS3 signal (that is being transported by SONET) will cease to contain jitter and will now contain "Wander", whenever the frequency offset of the DS3 signal being mapped into SONET is less than 0.2ppm.

#### 10.3 Jitter/Wander due to Pointer Adjustments

In the previous section, we described how a DS3 signal is asynchronously-mapped into SONET, and we also defined "Mapping/De-mapping" jitter. In this section, we will describe how occurrences within the SONET network will induce jitter/wander within the DS3 signal that is being transported across the SONET network.

In order to accomplish this, we will discuss the following topics in detail.

• The concept of an STS-1 SPE pointer




### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

- The concept of Pointer Adjustments
- The causes of Pointer Adjustments
- How Pointer Adjustments induce jitter/wander within a DS3 signal being transported by that SONET network.

#### 10.3.1 The Concept of an STS-1 SPE Pointer

As mentioned earlier, the STS-1 SPE is not aligned to the STS-1 frame boundaries and is permitted to "float" within the Envelope Capacity. As a consequence, the STS-1 SPE will often times "straddle" across two consecutive STS-1 frames. Figure 42 presents an illustration of an STS-1 SPE straddling across two consecutive STS-1 frames.

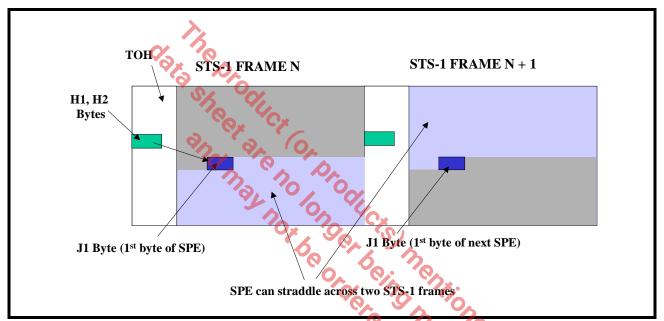

#### FIGURE 42. AN ILLUSTRATION OF AN STS-1 SPE STRADDLING ACROSS TWO CONSECUTIVE STS-1 FRAMES

A PTE that is receiving and terminating an STS-1 data-stream will perform the following tasks.

- It will acquire and maintain STS-1 frame synchronization with the incoming STS-1 data-stream.
- Once the PTE has acquired STS-1 frame synchronization, then it will locate the J1 byte (e.g., the very byte within the very next STS-1 SPE) within the Envelope Capacity by reading out the contents of the H1 and H2 bytes.

The H1 and H2 bytes are referred to (in the SONET standards) as the SPE Pointer Bytes. When these two bytes are concatenated together in order to form a 16-bit word (with the H1 byte functioning as the "Most Significant Byte") then the contents of the "lower" 10 bit-fields (within this 16-bit word) reflects the location of the J1 byte within the Envelope Capacity of the incoming STS-1 data-stream. Figure 43 presents an illustration of the bit format of the H1 and H2 bytes, and indicates which bit-fields are used to reflect the location of the J1 byte.



FIGURE 43. THE BIT-FORMAT OF THE 16-BIT WORD (CONSISTING OF THE H1 AND H2 BYTES) WITH THE 10 BITS, REFLECTING THE LOCATION OF THE J1 BYTE, DESIGNATED

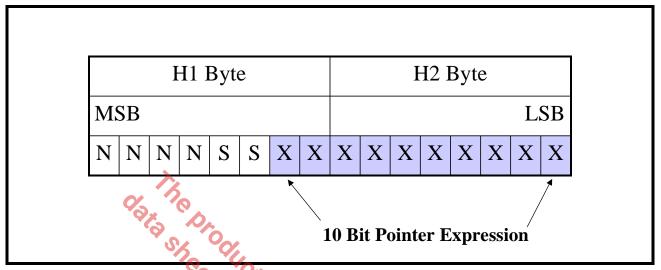


Figure 44 relates the contents within these 10 bits (within the H1 and H2 bytes) to the location of the J1 byte (e.g., the very first byte of the STS-1 SPE) within the Envelope Capacity.

FIGURE 44. THE RELATIONSHIP BETWEEN THE CONTENTS OF THE "POINTER BITS" (E.G., THE 10-BIT EXPRESSION WITHIN THE H1 AND H2 BYTES) AND THE LOCATION OF THE J1 BYTE WITHIN THE ENVELOPE CAPACITY OF AN STS-1 FRAME

	ТОН		600	The	Pointer Value "0" i After the H3		ately
A1	A2	C1/J0	522	523	* * * * * * * *	607	608
B1	E1	F1	609	610	* * * * * * * *	694	695
D1	D2	D3	696	697	* * * * * * * *	781	782
H1	H2	H3	0	1	* * * * * * * *	85	86
B2	K1	K2	87	88	* * * * * * * *	172	173
D4	D5	D6	174	175	* * * * * * * *	259	260
D7	D8	D9	261	262	* * * * * * * *	346	347
D10	D11	D12	348	349	* * * * * * * *	433	434
<b>S</b> 1	M0	E2	435	436	* * * * * * * *	520	521

Notes:

- 1. If the content of the "Pointer Bits" is "0x00" then the J1 byte is located immediately after the H3 byte, within the Envelope Capacity.
- 2. If the contents of the 10-bit expression exceed the value of 0x30F (or 782, in decimal format) then it does not contain a valid pointer value.

## **10.3.2 Pointer Adjustments within the SONET Network**

The word SONET stands for "Synchronous Optical NETwork. This name implies that the entire SONET network is synchronized to a single clock source. However, because the SONET (and SDH) Networks can



### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

span thousands of miles, traverse many different pieces of equipments, and even cross International boundaries; in practice, the SONET/SDH network is NOT synchronized to a single clock source.

In practice, the SONET/SDH network can be thought of as being divided into numerous "Synchronization Islands". Each of these "Synchronization Islands" will consist of numerous pieces of SONET Terminal Equipment. Each of these pieces of SONET Terminal Equipment will all be synchronized to a single Stratum-1 clock source which is the most accurate clock source within the Synchronization Island. Typically a "Synchronization Island" will consist of a single "Timing Master" equipment along with multiple "Timing Slave" pieces of equipment. This "Timing Master" equipment will be directly connected to the Stratum-1 clock source and will have the responsibility of distributing a very accurate clock signal (that has been derived from the Stratum 1 clock source) to each of the "Timing Slave" pieces of equipment to be "synchronization Island". The purpose of this is to permit each of the "Timing Slave" pieces of equipment to be "synchronized" with the "Timing Master" equipment, as well as the Stratum 1 Clock source. Typically this "clock distribution" is performed in the form of a BITS (Building Integrated Timing Supply) clock, in which a very precise clock signal is provided to the other pieces of equipment via a T1 or E1 line signal.

Many of these "Synchronization Islands" will use a Stratum-1" clock source that is derived from GPS pulses that are received from Satellites that operate at Geo-synchronous orbit. Other "Synchronization Islands" will use a Stratum-1" clock source that is derived from a very precise local atomic clock. As a consequence, different "Synchronization Islands" will use different Stratum 1 clock sources. The up-shot of having these "Synchronization Islands" that use different "Stratum-1 clock" sources, is that the Stratum 1 Clock frequencies, between these "Synchronization Islands" are likely to be slightly different from each other. These "frequency-differences" within Stratum 1 clock sources will result in "clock-domain changes" as a SONET signal (that is traversing the SONET network) passes from one "Synchronization Island" to another.

The following section will describe how these "frequency differences" will cause a phenomenon called "pointer adjustments" to occur in the SONET Network.


## 10.3.3 Causes of Pointer Adjustments


The best way to discuss how pointer adjustment events occur is to consider an STS-1 signal, which is driven by a timing reference of frequency f1; and that this STS-1 signal is being routed to a network equipment (that resides within a different "Synchronization Island") and processes STS-1 data at a frequency of f2.

**Note:** Clearly, both frequencies f1 and f2 are at the STS-1 rate (e.g., 51.84MHz). However, these two frequencies are likely to be slightly different from each other.

Now, since the STS-1 signal (which is of frequency f1) is being routed to the network element (which is operating at frequency f2), the typical design approach for handling "clock-domain" differences is to route this STS-1 signal through a "Slip Buffer" as illustrated below.





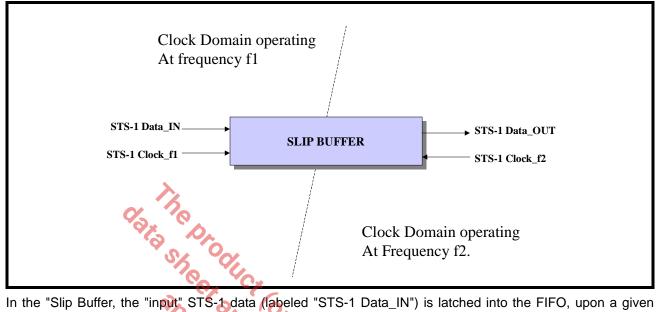

In the "Slip Buffer, the "input" STS-1 data (labeled "STS-1 Data\_IN") is latched into the FIFO, upon a given edge of the corresponding "STS-1 Clock\_f1" input clock signal. The STS-1 Data (labeled "STS-1 Data\_OUT") is clocked out of the Slip Buffer upon a given edge of the "STS-1 Clock\_f2" input clock signal.

The behavior of the data, passing through the "Slip Buffer" is now described for each possible relationship between frequencies f1 and f2.

## If f1 = f2

If both frequencies, f1 and f2 are exactly equal, then the STS-1 data will be "clocked" into the "Slip Buffer" at exactly the same rate that it is "clocked out". In this case, the "Slip Buffer" will neither fill-up nor become depleted. As a consequence, no pointer-adjustments will occur in this STS-1 data stream. In other words, the STS-1 SPE will remain at a constant location (or offset) within each STS-1 envelope capacity for the duration that this STS-1 signal is supporting this particular service.

## If f1 < f2

If frequency f1 is less than f2, then this means that the STS-1 data is being "clocked out" of the "Slip Buffer" at a faster rate than it is being clocked in. In this case, the "Slip Buffer" will eventually become depleted. Whenever this occurs, a typical strategy is to "stuff" (or insert) a "dummy byte" into the data stream. The purpose of stuffing this "dummy byte" is to compensate for the frequency differences between f1 and f2, and attempt to keep the "Slip Buffer, at a somewhat constant fill level.

Note: This "dummy byte" does not carry any valuable information (not for the user, nor for the system).

Since this "dummy byte" carries no useful information, it is important that the "Receiving PTE" be notified anytime this "dummy byte" stuffing occurs. This way, the Receiving Terminal can "know" not to treat this "dummy byte" as user data.

## Byte-Stuffing and Pointer Incrementing in a SONET Network

Whenever this "byte-stuffing" occurs then the following other things occur within the STS-1 data stream.

#### During the STS-1 frame that contains the "Byte-Stuffing" event

**a.** The "stuff-byte" will be inserted into the byte position immediately after the H3 byte. This insertion of the "dummy byte" immediately after the H3 byte position will cause the J1 byte (and in-turn, the rest of the SPE) to be "byte-shifted" away from the H3 byte. As a consequence, the offset between the H3 byte position and the STS-1 SPE will now have been increased by 1 byte.




## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

**b.** The "Transmitting" Network Equipment will notify the remote terminal of this byte-stuffing event, by inverting certain bits within the "pointer word" (within the H1 and H2 bytes) that are referred to as "I" bits.

Figure 46 presents an illustration of the bit-format within the 16-bit word (consist of the H1 and H2 bytes) with the "I" bits designated.

## FIGURE 46. AN ILLUSTRATION OF THE BIT FORMAT WITHIN THE 16-BIT WORD (CONSISTING OF THE H1 AND H2 BYTES) WITH THE "I" BITS DESIGNATED

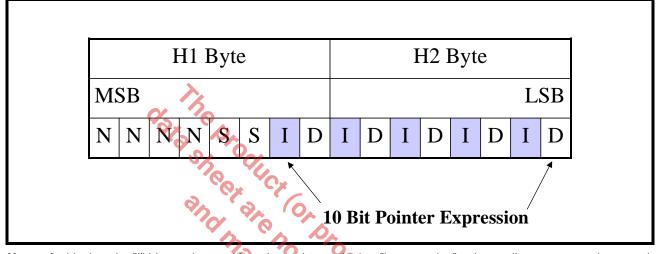

**NOTE:** At this time the "I" bits are inverted in order to denote that an "incrementing" pointer adjustment event is currently occurring.

## During the STS-1 frame that follows the "Byte-Stuffing" event

The "I" bits (within the "pointer-word") will be set back to their normal value; and the contents of the H1 and H2 bytes will be incremented by "1".

## *If f1 > f2*

If frequency f1 is greater than f2, then this means that the STS-1 data is being clocked into the "Slip Buffer" at a faster rate than is being clocked out. In this case, the "Slip Buffer" will start to fill up. Whenever this occurs, a typical strategy is to delete (e.g., negative-stuff) a byte from the Slip Buffer. The purpose of this "negative-stuffing" is to compensate for the frequency differences between f1 and f2; and to attempt to keep the "Slip Buffer" at a somewhat constant fill-level.

- **Note:** This byte, which is being "un-stuffed" does carry valuable information for the user (e.g., this byte is typically a payload byte). Therefore, whenever this negative stuffing occurs, two things must happen.
  - **a.** The "negative-stuffed" byte must not be simply discarded. In other words, it must somehow also be transmitted to the remote PTE with the remainder of the SPE data.
  - **b.** The remote PTE must be notified of the occurrence of these "negative-stuffing" events. Further, the remote PTE must know where to obtain this "negative-stuffed" byte.

#### Negative-Stuffing and Pointer-Decrementing in a SONET Network

Whenever this "byte negative-stuffing" occurs then the following other things occur within the STS-1 datastream.

## During the STS-1 frame that contains the "Negative Byte-Stuffing" Event

a. The "Negative-Stuffed" byte will be inserted into the H3 byte position. Whenever an SPE data byte is inserted into the H3 byte position (which is ordinarily an unused byte), the number of bytes that will exist between the H3 byte and the J1 byte within the very next SPE will be reduced by 1 byte. As a consequence, in this case, the J1 byte (and in-turn, the rest of the SPE) will now be "byte-shifted" towards the H3 byte position.




### THREE CHANNEL E3/DS3/STS-1 LINE

b. The "Transmitting" Network Element will notify the remote terminal of this "negative-stuff" event by inverting certain bits within the "pointer word" (within the H1 and H2 bytes) that are referred to as "D" bits.

Figure 47 presents an illustration of the bit format within the 16-bit word (consisting of the H1 and H2 bytes) with the "D" bits designated.

### FIGURE 47. AN ILLUSTRATION OF THE BIT-FORMAT WITHIN THE 16-BIT WORD (CONSISTING OF THE H1 AND H2 BYTES) WITH THE "D" BITS DESIGNATED

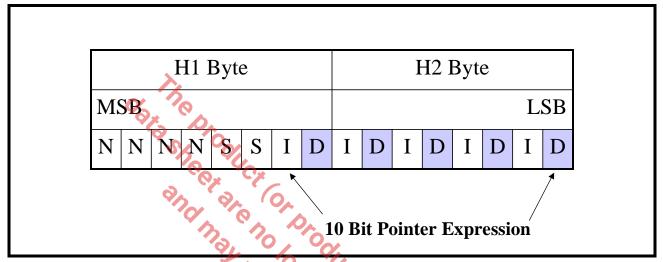

Note: At this time the "D" bits are inverted in order to denote that a "decrementing" pointer adjustment event is currently occurring.

## During the STS-1 frame that follows the "Negative Byte-Stuffing" Event

3y-to their norma. Read in anura in this BS BC tured The "D" bits (within the pointer-word) will be set back to their normal value; and the contents of the H1 and H2 bytes will be decremented by one.



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

## 10.3.4 Why are we talking about Pointer Adjustments?

The overall SONET network consists of numerous "Synchronization Islands". As a consequence, whenever a SONET signal is being transmitted from one "Synchronization Island" to another; that SONET signal will undergo a "clock domain" change as it traverses the network. This clock domain change will result in periodic pointer-adjustments occurring within this SONET signal. Depending upon the direction of this "clock-domain" shift that the SONET signal experiences, there will either be periodic "incrementing" pointer-adjustment events or periodic "decrementing" pointer-adjustment events within this SONET signal.


Regardless of whether a given SONET signal is experiencing incrementing or decrementing pointer adjustment events, each pointer adjustment event will result in an abrupt 8-bit shift in the position of the SPE within the STS-1 data-stream. If this STS-1 signal is transporting an "asynchronously-mapped" DS3 signal; then this 8-bit shift in the location of the SPE (within the STS-1 signal) will result in approximately 8Ulpp of jitter within the asynchronously-mapped DS3 signal, as it is de-mapped from SONET. In "Section 10.5, A Review of the Category I Intrinsic Jitter Requirements (per Telcordia GR-253-CORE) for DS3 applications" on page 111 we will discuss the "Category I Intrinsic Jitter Requirements (for DS3 Applications) per Telcordia GR-253-CORE. However, for now we will simply state that this 8Ulpp of intrinsic jitter far exceeds these "intrinsic jitter" requirements.

In summary, pointer-adjustments events are a "fact of life" within the SONET/SDH network. Further, pointeradjustment events, within a SONET signal that is transporting an asynchronously-mapped DS3 signal, will impose a significant impact on the Intrinsic ditter and Wander within that DS3 signal as it is de-mapped from SONET.

## 10.4 Clock Gapping Jitter

In most applications (in which the XRT75R03D will be used in a SONET De-Sync Application) the user will typically interface the XRT75R03D to a Mapper Device in the manner as presented below in Figure 48.

FIGURE 48. ILLUSTRATION OF THE TYPICAL APPLICATIONS FOR THE XRT75R03D IN A SONET DE-SYNC APPLICA-TION

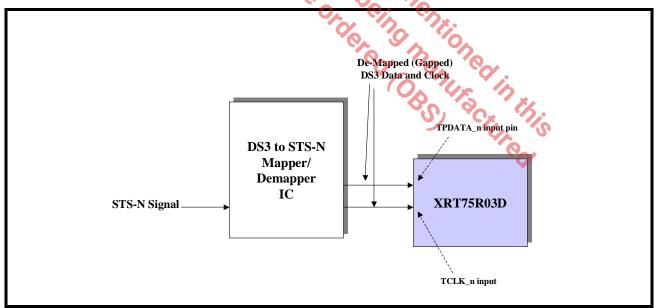

In this application, the Mapper IC will have the responsibility of receiving an STS-N signal (from the SONET Network) and performing all of the following operations on this STS-N signal.

- Byte-de-interleaving this incoming STS-N signal into N STS-1 signals
- Terminating each of these STS-1 signals
- Extracting (or de-mapping) the DS3 signal(s) from the SPEs within each of these terminated STS-1 signals.



#### THREE CHANNEL E3/DS3/STS-1 LINE

In this application, these Mapper devices can be thought of as multi-channel devices. For example, an STS-3 Mapper can be viewed as a 3-Channel DS3/STS-1 to STS-3 Mapper IC. Similarly, an STS-12 Mapper can be viewed as a 12-Channel DS3/STS-1 to STS-12 Mapper IC. Continuing on with this line of thought, if a Mapper IC is configured to receive an STS-N signal, and (from this STS-N signal) de-map and output N DS3 signals (towards the DS3 facility), then it will typically do so in the following manner.

- In many cases, the Mapper IC will output this DS3 signal, using both a "Data-Signal" and a "Clock-Signal". In many cases, the Mapper IC will output the contents of an entire STS-1 data-stream via the Data-Signal.
- However, as the Mapper IC output this STS-1 data-stream, it will typically supply clock pulses (via the Clock-Signal output) coincident to whenever a DS3 bit is being output via the Data-Signal. In this case, the Mapper IC will NOT supply a clock pulse coincident to when a TOH, POH, or any "non-DS3 data-bit" is being output via the "Data-Signal".

Now, since the Mapper IC will output the entire STS-1 data stream (via the Data-Signal), the output Clock-Signal will be of the form such that it has a period of 19.3ns (e.g., a 51.84MHz clock signal). However, the Mapper IC will still generate approximately 44,736,000 clock pulses during any given one second period. Hence, the clock signal that is output from the Mapper IC will be a horribly gapped 44.736MHz clock signal. One can view such a clock signal as being a very-jittery 44.736MHz clock signal. This jitter that exists within the "Clock-Signal" is referred to as "Clock-Gapping" Jitter. A more detailed discussion on how the user must handle this type of jitter is presented in "Section 10.8.2, Recommendations on Pre-Processing the Gapped Clocks (from the Mapper/ASIC Oevice) prior to routing this DS3 Clock and Data-Signals to the Transmit Inputs of the XRT75R03D on page 123.

## 10.5 A Review of the Category I Intrinsic Jitter Requirements (per Telcordia GR-253-CORE) for DS3 applications

The "Category I Intrinsic Jitter Requirements" per Telcordia GR-253-CORE (for DS3 applications) mandates that the user perform a large series of tests against certain specified "Scenarios". These "Scenarios" and their corresponding requirements is summarized in Table 31, below.

## TABLE 31: SUMMARY OF "CATEGORY I INTRINSIC JITTER REQUIREMENT PER TELCORDIA GR-253-CORE, FOR DS3 APPLICATIONS

SCENARIO DESCRIPTION	Scenario Number	TELCORDIA GR-253-CORE CATEGORY I INTRINSIC JITTER REQUIREMENTS	COMMENTS		
DS3 De-Mapping Jitter		0.4UI-pp	Includes effects of De-Mapping and Clock Gapping Jit- ter		
Single Pointer Adjustment	A1	0.3UI-pp + Ao	Includes effects of Jitter from Clock-Gapping, De-Map- ping and Pointer Adjustments.NOTE: Ao is the amount of intrinsic jitter that was measured during the "DS3 De- Mapping Jitter" phase of the Test.		
Pointer Bursts	A2	1.3UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.		
Phase Transients	A3	1.2UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.		
87-3 Pattern	A4	1.0UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.		
87-3 Add	A5	1.3UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.		
87-3 Cancel	A5	1.3UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.		

## EXAR Experience Our Connectivity.

#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

TABLE 31: SUMMARY OF "CATEGORY I INTRINSIC JITTER REQUIREMENT PER TELCORDIA GR-253-CORE, FOR DS3 APPLICATIONS

SCENARIO DESCRIPTION	Scenario Number	Telcordia GR-253-CORE Category I Intrinsic Jitter Requirements	Comments
Continuous Pattern	A4	1.0UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.
Continuous Add	A5	1.3UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.
Continuous Cancel	A5	1.3UI-pp	Includes effects of Jitter from Clock-Gapping, De-Mapping and Pointer Adjustments.

NOTE: All of these intrinsic jitter measurements are to be performed using a band-pass filter of 10Hz to 400kHz.

Each of the scenarios presented in Table 31, are briefly described below.

## 10.5.1 DS3 De-Mapping Jitter

DS3 De-Mapping Jitter is the amount of Intrinsic Jitter that will be measured within the "Line" or "Facility-side" DS3 signal, (after it has been de-mapped from a SONET signal) without the occurrence of "Pointer Adjustments" within the SONET signal.


Telcordia GR-253-CORE requires that the "DS3 De-Mapping" Jitter be less than 0.4UI-pp, when measured over all possible combinations of DS3 and STS-1 frequency offsets.

## 10.5.2 Single Pointer Adjustment

Telcordia GR-253-CORE states that if each pointer adjustment (within a continuous stream of pointer adjustments) is separated from each other by a period of 30 seconds, or more; then they are sufficiently isolated to be considered "Single-Pointer Adjustments".

Figure 49 presents an illustration of the "Single Pointer Adjustment" Scenario.

#### FIGURE 49. ILLUSTRATION OF SINGLE POINTER ADJUSTMENT SCENARIO

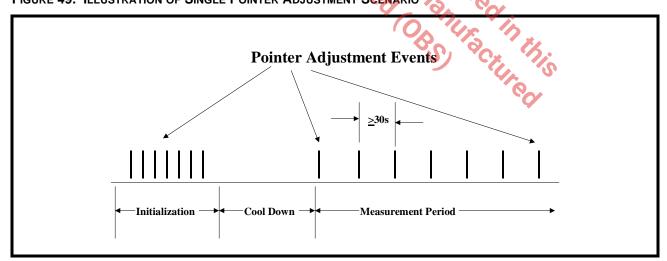

Telcordia GR-253-CORE states that the Intrinsic Jitter that is measured (within the DS3 signal) that is ultimately de-mapped from a SONET signal that is experiencing "Single-Pointer Adjustment" events, must NOT exceed the value 0.3UI-pp + Ao.

#### Notes:

1. Ao is the amount of Intrinsic Jitter that was measured during the "De-Mapping" Jitter portion of this test.




2. Testing must be performed for both Incrementing and Decrementing Pointer Adjustments.

#### 10.5.3 **Pointer Burst**

Figure 50 presents an illustration of the "Pointer Burst" Pointer Adjustment Scenario per Telcordia GR-253-CORE.



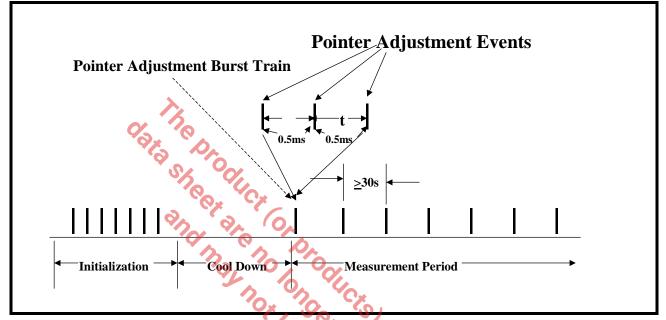


Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "Burst of Pointer Adjustment" scenario, must NOT exceed 1.3UI-pp.

#### 10.5.4 **Phase Transients**

Figure 51 presents an illustration of the "Phase Transients" Pointer Adjustment Scenario per Telcordia GR-253-CORE.



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

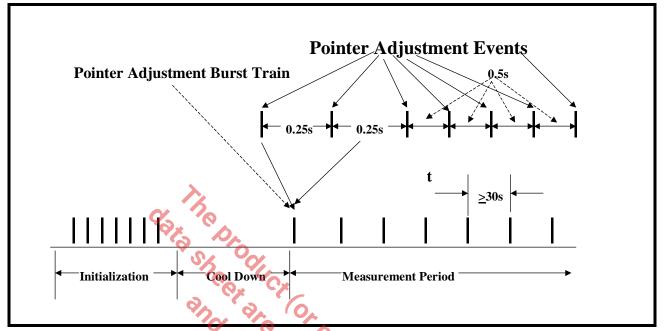


#### FIGURE 51. ILLUSTRATION OF "PHASE-TRANSIENT" POINTER ADJUSTMENT SCENARIO

Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "Phase Transient - Pointer Adjustment" scenario must NOT exceed 1.2UI-pp.

#### 10.5.5 87-3 Pattern

Figure 52 presents an illustration of the "87-3 Continuous Pattern" Pointer Adjustment Scenario per Telcordia GR-253-CORE.



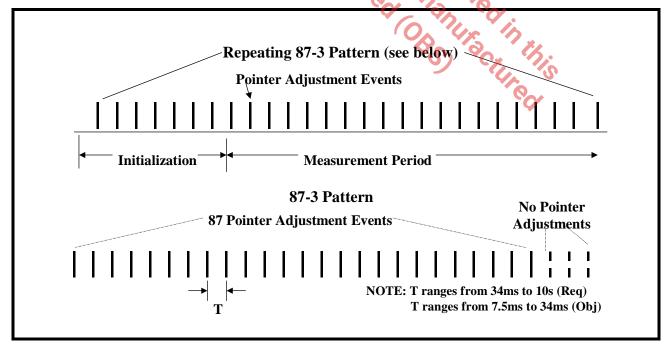



### THREE CHANNEL E3/DS3/STS-1 LINE

Telcordia GR-253-CORE defines an "87-3 Continuous" Pointer Adjustment pattern, as a repeating sequence of 90 pointer adjustment events. Within this 90 pointer adjustment event, 87 pointer adjustments are actually executed. The remaining 3 pointer adjustments are never executed. The spacing between individual pointer adjustment events (within this scenario) can range from 7.5ms to 10seconds.

Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "87-3 Continuous" pattern of Pointer Adjustments, must not exceed 1.0UI-pp.

## 10.5.6 87-3 Add

Figure 53 presents an illustration of the "87-3 Add Pattern" Pointer Adjustment Scenario per Telcordia GR-253-CORE.

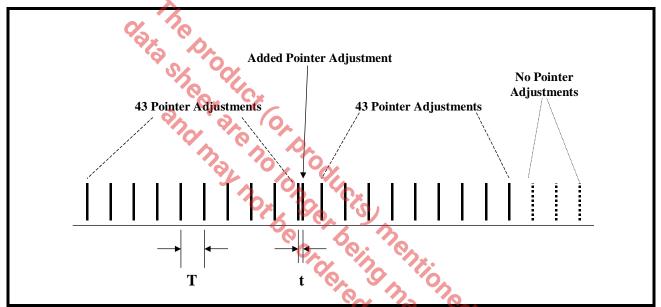


FIGURE 53. ILLUSTRATION OF THE 87-3 ADD POINTER ADJUSTMENT PATTERN

Telcordia GR-253-CORE defines an "87-3 Add" Pointer Adjustment, as the "87-3 Continuous" Pointer Adjustment pattern, with an additional pointer adjustment inserted, as shown above in Figure 53.

Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "87-3 Add" pattern of Pointer Adjustments, must not exceed 1.3UI-pp.

## 10.5.7 87-3 Cancel

Figure 54 presents an illustration of the 87-3 Cancel Pattern Pointer Adjustment Scenario per Telcordia GR-253-CORE.



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

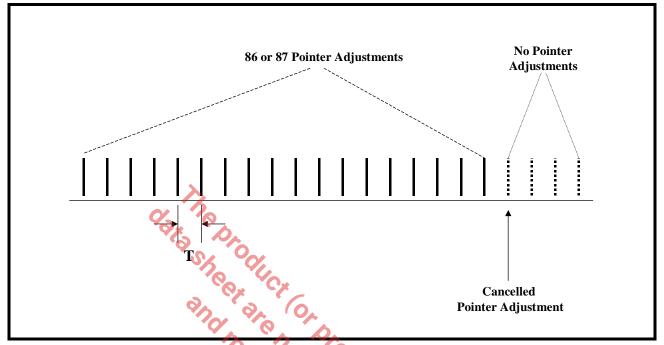


FIGURE 54. ILLUSTRATION OF 87-3 CANCEL POINTER ADJUSTMENT SCENARIO


Telcordia GR-253-CORE defines an "87-3 Cancel" Pointer Adjustment, as the "87-3 Continuous" Pointer Adjustment pattern, with an additional pointer adjustment cancelled (or not executed), as shown above in Figure 54.

Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "87-3 Cancel" pattern of Pointer Adjustments, must not exceed 1.3UI-pp.

#### 10.5.8 Continuous Pattern

Figure 55 presents an illustration of the "Continuous" Pointer Adjustment Scenario per Telcordia GR-253-CORE.



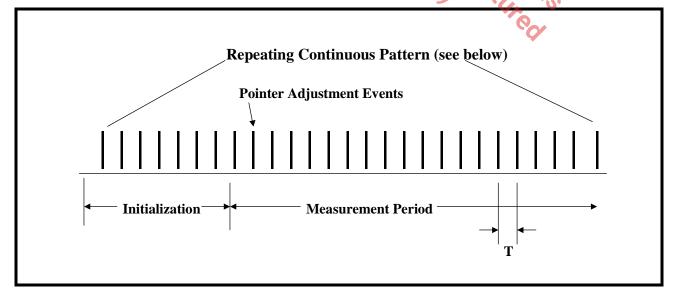





Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "Continuous" pattern of Pointer Adjustments, must not exceed 1.0UI-pp. The spacing between individual pointer adjustments (within this scenario) can range from 7.5ms to 10s.

## 10.5.9 Continuous Add

Figure 56 presents an illustration of the "Continuous Add Pattern" Pointer Adjustment Scenario per Telcordia GR-253-CORE.



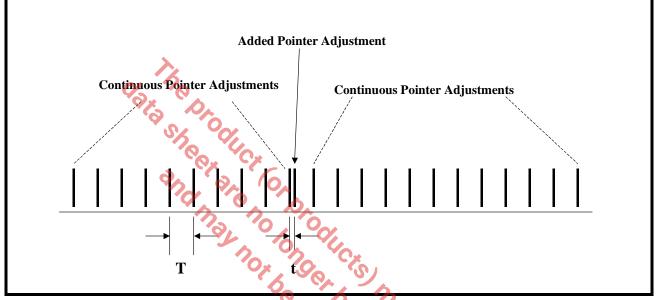

Telcordia GR-253-CORE defines an "Continuous Add" Pointer Adjustment, as the "Continuous" Pointer Adjustment pattern, with an additional pointer adjustment inserted, as shown above in Figure 56.


Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "Continuous Add" pattern of Pointer Adjustments, must not exceed 1.3UI-pp.

#### 10.5.10 Continuous Cancel

Figure 57 presents an illustration of the "Continuous Cancel Pattern" Pointer Adjustment Scenario per Telcordia GR-253-CORE.



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

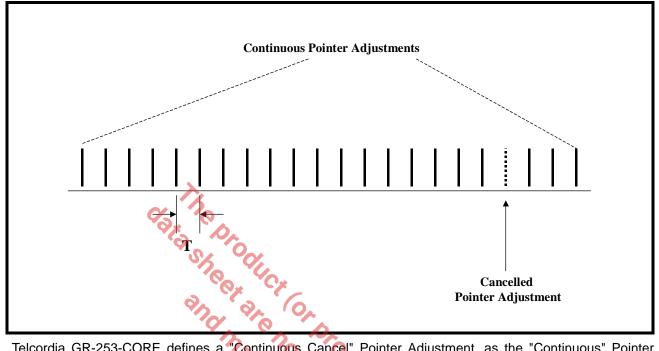

#### FIGURE 57. ILLUSTRATION OF CONTINUOUS-CANCEL POINTER ADJUSTMENT SCENARIO

Telcordia GR-253-CORE defines a "Continuous Cancel" Pointer Adjustment, as the "Continuous" Pointer Adjustment pattern, with an additional pointer adjustment cancelled (or not executed), as shown above in Figure 57.

Telcordia GR-253-CORE mandates that the Intrinsic Jitter, within the DS3 signal that is de-mapped from a SONET signal, which is experiencing the "Continuous Cancel" pattern of Pointer Adjustments, must not exceed 1.3UI-pp.

## 10.6 A Review of the DS3 Wander Requirements per ANSI 1.105.03b-1997.

To be provided in the next revision of this data sheet.

10.7 A Review of the Intrinsic Jitter and Wander Capabilities of the XRT75R03D in a typical system application

The Intrinsic Jitter and Wander Test results are summarized in this section.

#### 10.7.1 Intrinsic Jitter Test results

The Intrinsic Jitter Test results for the XRT75R03D in DS3 being de-mapped from SONET is summarized below in Table 2.

SCENARIO DESCRIPTION	Scenario Number	XRT75R03D Intrinsic Jitter Test Results	TELCORDIA GR-253-CORE CATEGORY I INTRINSIC JITTER REQUIREMENTS
DS3 De-Mapping Jitter		0.13UI-pp	0.4UI-pp
Single Pointer Adjustment	A1	0.201UI-pp	0.43UI-pp (e.g. 0.13UI-pp + 0.3UI-pp)
Pointer Bursts	A2	0.582UI-pp	1.3UI-pp
Phase Transients	A3	0.526UI-pp	1.2UI-pp

TABLE 32: SUMMARY OF	"CATEGORY I INTRINSIC JITTE	R TEST RESULTS" FOR	SONET/DS3 APPLICATIONS
----------------------	-----------------------------	---------------------	------------------------



THREE CHANNEL E3/DS3/STS-1 LINE

#### TABLE 32: SUMMARY OF "CATEGORY I INTRINSIC JITTER TEST RESULTS" FOR SONET/DS3 APPLICATIONS

SCENARIO DESCRIPTION	Scenario Number	XRT75R03D Intrinsic Jitter Test Results	TELCORDIA GR-253-CORE CATEGORY I INTRINSIC JITTER REQUIREMENTS
87-3 Pattern	A4	0.790UI-pp	1.0UI-pp
87-3 Add	A5	0.926UI-pp	1.3UI-pp
87-3 Cancel	A5	0.885UI-pp	1.3UI-pp
Continuous Pattern	A4	0.497UI-pp	1.0UI-pp
Continuous Add	A5	0.598UI-pp	1.3UI-pp
Continuous Cancel	A5	0.589UI-pp	1.3UI-pp
<ol> <li>A detailed your Exar</li> <li>These tes Mapper E</li> <li>These sar</li> </ol>	I test report on Sales Represei st results were o valuation Board me results apply	ntative.	is available and can be obtained by contacting t on our XRT94L43 12-Channel DS3/E3/STS-1

#### NOTES:

- 1. A detailed test report on our Test Procedures and Test Results is available and can be obtained by contacting
- 2. These test results were obtained via the XRT75R03Ds mounted on our XRT94L43 12-Channel DS3/E3/STS-1



## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

### 10.7.2 Wander Measurement Test Results

Wander Measurement test results will be provided in the next revision of the XRT75R03D Data Sheet.

## 10.8 Designing with the XRT75R03D


In this section, we will discuss the following topics.

- How to design with and configure the XRT75R03D to permit a system to meet the above-mentioned Intrinsic Jitter and Wander requirements.
- How is the XRT75R03D able to meet the above-mentioned requirements?
- How does the XRT75R03D permits the user to comply with the SONET APS Recovery Time requirements of 50ms (per Telcordia GR-253-CORE)?
- How should one configure the XRT75R03D, if one needs to support "Daisy-Chain" Testing at the end Customer's site?
- 10.8.1 How to design and configure the XRT75R03D to permit a system to meet the abovementioned Intrinsic Jitter and Wander requirements

As mentioned earlier, in most application (in which the XRT75R03D will be used in a SONET De-Sync Application) the user will typically interface the XRT75R03D to a Mapper device in the manner as presented below in Figure 58.

In this application, the Mapper has the responsibility of receiving a SONET STS-N/OC-N signal and extracting as many as N DS3 signals from this signal. As a given channel within the Mapper IC extracts out a given DS3 signal (from SONET) it will typically be applying a Clock and Data signal to the "Transmit Input" of the LIU IC. Figure 58 presents a simple illustration as to how one channel, within the XRT75R03D should be connected to the Mapper IC.

# FIGURE 58. ILLUSTRATION OF THE XRT75R03D BEING CONNECTED TO A MAPPER IC FOR SONET DE-SYNC APPLICATIONS

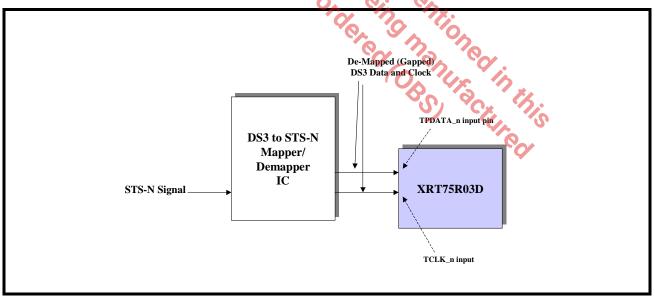

As mentioned above, the Mapper IC will typically output a Clock and Data signal to the XRT75R03D. In many cases, the Mapper IC will output the contents of an entire STS-1 data-stream via the Data Signal to the XRT75R03D. However, the Mapper IC typically only supplies a clock pulse via the Clock Signal to the XRT75R03D coincident to whenever a DS3 bit is being output via the Data Signal. In this case, the Mapper IC would not supply a clock edge coincident to when a TOH, POH or any non-DS3 data-bit is being output via the Data-Signal.



#### THREE CHANNEL E3/DS3/STS-1 LINE

Figure 58 indicates that the Data Signal from the Mapper device should be connected to the TPDATA\_n input pin of the LIU IC and that the Clock Signal from the Mapper device should be connected to the TCLK\_n input pin of the LIU IC.

In this application, the XRT75R03D has the following responsibilities.

- Using a particular clock edge within the "gapped" clock signal (from the Mapper IC) to sample and latch the value of each DS3 data-bit that is output from the Mapper IC.
- To (through the user of the Jitter Attenuator block) attenuate the jitter within this "DS3 data" and "clock signal" that is output from the Mapper IC.
- To convert this "smoothed" DS3 data and clock into industry-compliant DS3 pulses, and to output these pulses onto the line.

To configure the XRT75R03D to operate in the correct mode for this application, the user must execute the following configuration steps.

**a.** Configure the XRT75R03D to operate in the DS3 Mode

The user can configure a given channel (within the XRT75R03D) to operate in the DS3 Mode, by executing either of the following steps.

## • If the XRT75R03D has been configured to operate in the Host Mode

The user can accomplish this by setting both Bits 2 (E3\_n) and Bits 1 (STS-1/DS3\*\_n), within each of the "Channel Control Registers" to "0" as depicted below.

## CHANNEL CONTROL REGISTER CHANNEL 0 ADDRESS LOCATION = 0X06

CHANNEL 1 ADDRESS LOCATION = 0X0E CHANNEL 2 ADDRESS LOCATION = 0X16

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
Unu	ised	PRBS Enable Ch_n	RLB_n	LLB	E3_n	STS-1/DS3_n	SR/DR_n
R/O	R/O	R/W	R/W	R/₩	R/W	R/W	R/W
0	0	0	0	0	0	0	0

## • If the XRT75R03D has been configured to operate in the Hardware Mode

The user can accomplish this by pulling all of the following input pins "Low".

Pin 76 - E3\_0

Pin 94 - E3\_1

- Pin 85 E3\_2
- Pin 72 STS-1/DS3\_0
- Pin 98 STS-1/DS3\_1
- Pin 81 STS-1/DS3\_2

**b.** Configure the XRT75R03D to operate in the Single-Rail Mode

Since the Mapper IC will typically output a single "Data Line" and a "Clock Line" for each DS3 signal that it demaps from the incoming STS-N signal, it is imperative to configure each channel within the XRT75R03D to operate in the Single Rail Mode.

The user can accomplish this by executing either of the following steps.

## EXAR Experience Our Connectivity. ER REV. 1.0.4

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

## • If the XRT75R03D has been configured to operate in the Host Mode

The user can accomplish this by setting Bit 0 (SR/DR\*), within the each of the "Channel Control" Registers to 1, as illustrated below.

## CHANNEL CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0X06

## CHANNEL 1 ADDRESS LOCATION = 0X0E

### CHANNEL 2 ADDRESS LOCATION = 0X16

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
Unu	ised	PRBS Enable Ch_n	RLB_n	LLB_n	E3_n	<u>STS</u> -1/ DS3_n	SR/DR_n
R/O	R/O	R/W	R/W	R/W	R/W	R/W	R/W
0	0 🔏	0	0	0	0	0	1

## • If the XRT75R03D has been configured to operate in the Hardware Mode

Then the user should tie pin 65 (SR/DR\*) to "High".

c. Configure each of the three channels within the XRT75R03D to operate in the SONET De-Sync Mode

The user can accomplish this by executing either of the following steps.

## • If the XRT75R03D has been configured to operate in the Host Mode.

Then the user should set Bit D2 (JA1) to "0" and Bit D0 (JA0) to "1", within the Jitter Attenuator Control Register, as depicted below.

## JITTER ATTENUATOR CONTROL REGISTER - (CHANNEL 0 ADDRESS LOCATION = 0X07

CHANNEL 1 ADDRESS LOCATION = 0X0F

## CHANNEL 2 ADDRESS LOCATION = 0X17

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
	Unused		SONET APS Recovery Time DisableCh_n	JA RESET <sup>4</sup> Ch_n	JA1 Chon	JA in Tx Path Ch_n	JA0 Ch_n
R/O	R/O	R/O	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	1

## • If the XRT75R03D has been configured to operate in the Hardware Mode

Then the user should tie pin 44 (JA0) to a logic "HIGH" and pin 42 (JA1) to a logic "LOW".

Once the user accomplishes either of these steps, then the Jitter Attenuator (within the XRT75R03D) will be configured to operate with a very narrow bandwidth.

d. Configure the Jitter Attenuator (within each of three three channels) to operate in the Transmit Direction.

The user can accomplish this by executing either the following steps.

## • If the XRT75R03D has been configured to operate in the Host Mode.

Then the user should be Bit D1 (JATx/JARx\*) to "1", within the Jitter Attenuator Control Register, as depicted below.



## JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0X07

## CHANNEL 1 ADDRESS LOCATION = 0X0F

## CHANNEL 2 ADDRESS LOCATION = 0X17

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
	Unused		SONET APS Recovery Time DisableCh_n	JA RESET Ch_n	JA1 Ch_n	JA in Tx Path Ch_n	JA0 Ch_n
R/O	R/O	R/O	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	1	1

#### • If the XRT75R03D has been configured to operate in the Hardware Mode.

Then the user should tie pin 43 (JATx/JARx\*) to "1".

## e. Enable the "SONET APS Recovery Time" Mode

Finally, if the user intends to use the XRT75R03D in an Application that is required to reacquire proper SONET and DS3 traffic, prior within 50ms of an APS (Automatic Protection Switching) event (per Telcordia GR-253-CORE), then the user should set Bit 4 (SONET APS Recovery Time Disable), within the "Jitter Attenuator Control" Register, to "0" as depicted below.

## JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0X07

## CHANNEL 1 ADDRESS LOCATION = 0X0F

## CHANNEL 2 ADDRESS LOCATION = 0X17

Віт 7	Віт 6	Віт 5	Віт 4	Віт З	Віт 2	Віт 1	Віт 0
	Unused		SONET APS Recovery Time DisableCh_n	JA RESET Ch_n	JA1 Ch_n	JA in Tx Path Ch_n	JA0 Ch_n
R/O	R/O	R/O	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	0	1

Notes:

- 1. The ability to disable the "SONET APS Recovery Time" mode is only available if the XRT75R03D is operating in the Host Mode. If the XRT75R03D is operating in the "Hardware" Mode, then this "SONET APS Recovery Time Mode" feature will always be enabled.
- The "SONET APS Recovery Time" mode will be discussed in greater detail in "Section 10.8.3, How does the XRT75R03D permit the user to comply with the SONET APS Recovery Time requirements of 50ms (per Telcordia GR-253-CORE)?" on page 127.

## 10.8.2 Recommendations on Pre-Processing the Gapped Clocks (from the Mapper/ASIC Device) prior to routing this DS3 Clock and Data-Signals to the Transmit Inputs of the XRT75R03D

In order to minimize the effects of "Clock-Gapping" Jitter within the DS3 signal that is ultimately transmitted to the DS3 Line (or facility), we recommend that some "pre-processing" of the "Data-Signals" and "Clock-Signals" (which are output from the Mapper device) be implemented prior to routing these signals to the "Transmit Inputs" of the XRT75R03D.

#### 10.8.2.1 SOME NOTES PRIOR TO STARTING THIS DISCUSSION:



### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

Our simulation results indicate that Jitter Attenuator PLL (within the XRT75R03D LIU IC) will have no problem handling and processing the "Data-Signal" and "Clock-Signal" from a Mapper IC/ASIC if no pre-processing has been performed on these signals. In order words, our simulation results indicate that the Jitter Attenuator PLL (within the LIU IC) will have no problem handling the "worst-case" of 59 consecutive bits of no clock pulses in the "Clock-Signal (due to the Mapper IC processing the TOH bytes, an Incrementing Pointer-Adjustment-induced "stuffed-byte", the POH byte, and the two fixed-stuff bytes within the STS-1 SPE, etc), immediately followed be processing clusters of DS3 data-bits (as shown in Figure 38) and still comply with the "Category I Intrinsic Jitter Requirements per Telcordia GR-253-CORE for DS3 applications.

**Note:** If this sort of "pre-processing" is already supported by the Mapper device that you are using, then no further action is required by the user.

## 10.8.2.2 OUR PRE-PROCESSING RECOMMENDATIONS

For the time-being, we recommend that the customer implement the "pre-processing" of the DS3 "Data-Signal" and "Clock-Signal" as described below. Currently we are aware that some of the Mapper products on the Market do implement this exact "pre-processing" algorithm. However, if the customer is implementing their Mapper Design in an ASIC or FPGA solution, then we strongly recommend that the user implement the necessary logic design to realize the following recommendations.

Some time ago, we spent some time, studying (and then later testing our solution with) the PM5342 OC-3 to DS3 Mapper IC from PMC-Sierra. In particular, we wanted to understand the type of "DS3 Clock" and "Data" signal that this DS3 to OC-3 Mapper IC outputs.


During this effort, we learned the following.

1. This "DS3 Clock" and "Data" signal, which is output from the Mapper IC consists of two major "repeating" patterns (which we will refer to as "MAJOR PATTERN A" and "MAJOR PATTERN B". The behavior of each of these patterns is presented below.

#### **MAJOR PATTERN A**

MAJOR PATTERN A consists of two "sub" or minor-patterns, (which we will refer to as "MINOR PATTERN P1 and P2).

MINOR PATTERN P1 consists of a string of seven (7) clock pulses, followed by a single gap (no clock pulse). An illustration of MINOR PATTERN P1 is presented below in Figure 59.

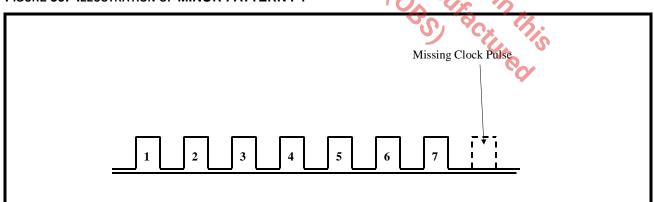


#### FIGURE 59. ILLUSTRATION OF MINOR PATTERN P1

It should be noted that each of these clock pulses has a period of approximately 19.3ns (or has an "instantaneously frequency of 51.84MHz).

MINOR Pattern P2 consists of string of five (5) clock pulses, which is also followed by a single gap (no clock pulse). An illustration of Pattern P2 is presented below in Figure 60.



### FIGURE 60. ILLUSTRATION OF MINOR PATTERN P2

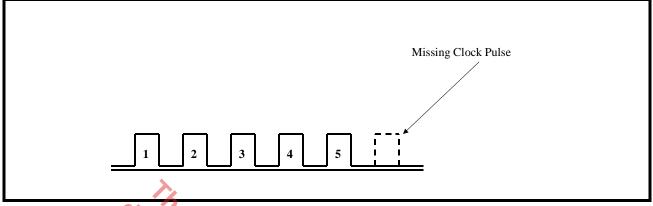

## HOW MAJOR PATTERN A IS SYNTHESIZED

MAJOR PATTERN A is created (by the Mapper IC) by:

- Repeating MINOR PATTERN P1 (e.g., 7 clock pulses, followed by a gap) 63 times.
- Upon completion of the 63rd transmission of MINOR PATTERN P1, MINOR PATTERN P2 is transmitted repeatedly 36 times.

Figure 61 presents an illustration which depicts the procedure that is used to synthesize MAJOR PATTERN A

## FIGURE 61. ILLUSTRATION OF PROCEDURE WHICH IS USED TO SYNTHESIZE MAJOR PATTERN A



Hence, MAJOR PATTERN A consists of " $(63 \times 7) + (36 \times 5)$ " = 621 clock pulses. These 621 clock pulses were delivered over a period of " $(63 \times 8) + (36 \times 6)$ " = 720 STS-1 (or 51.84MHz) clock periods.

## MAJOR PATTERN B

MAJOR PATTERN B consists of three sub or minor-patterns (which we will refer to as "MINOR PATTERNS P1, P2 and P3).


MINOR PATTERN P1, which is used to partially synthesize MAJOR PATTERN B, is exactly the same "MINOR PATTERN P1" as was presented above in Figure 31. Similarly, the MINOR PATTERN P2, which is also used to partially synthesize MAJOR PATTERN B, is exactly the same "MINOR PATTERN P2" as was presented in Figure 32.

MINOR PATTERN P3 (which has yet to be defined) consists of a string of six (6) clock pulses, which contains no gaps. An illustration of MINOR PATTERN P3 is presented below in Figure 62.

EXAR Experience Our Connectivity. ER REV. 1.0.4

## THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

## FIGURE 62. ILLUSTRATION OF MINOR PATTERN P3

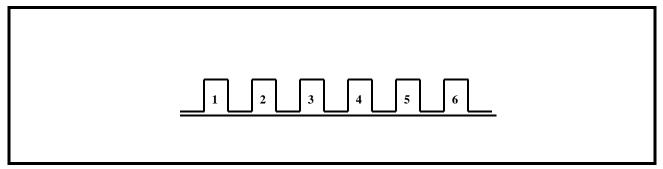


## HOW MAJOR PATTERN B IS SYNTHESIZED

MAJOR PATTERN B is created (by the Mapper IC) by:

- Repeating MINOR PATTERN P1 (e.g., 7 clock pulses, followed by a gap) 63 times.
- Upon completion of the 63rd transmission of MINOR PATTERN P1, MINOR PATTERN P2 is transmitted repeatedly 36 times.
- pon completion of the 35th transmission of MINOR PATTERN P2, MINOR PATTERN P3 is transmitted once.

Figure 63 presents an illustration which depicts the procedure that is used to synthesize MAJOR PATTERN B.

## FIGURE 63. ILLUSTRATION OF PROCEDURE WHICH IS USED TO SYNTHESIZE PATTERN B

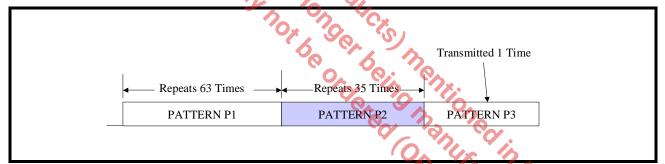

Hence, MAJOR PATTERN B consists of "(63 x 7) + (35 x 5)" + 6 = 622 clock pulses.

These 622 clock pulses were delivered over a period of " $(63 \times 8) + (35 \times 6) + 6 = 720$  STS-1 (or 51.84MHz) clock periods.

## PUTTING THE PATTERNS TOGETHER

Finally, the DS3 to OC-N Mapper IC clock output is reproduced by doing the following.


- MAJOR PATTERN A is transmitted two times (repeatedly).
- After the second transmission of MAJOR PATTERN A, MAJOR PATTERN B is transmitted once.
- Then the whole process repeats.

Throughout the remainder of this document, we will refer to this particular pattern as the "SUPER PATTERN".

Figure 64 presents an illustration of this "SUPER PATTERN" which is output via the Mapper IC.



## FIGURE 64. ILLUSTRATION OF THE SUPER PATTERN WHICH IS OUTPUT VIA THE "OC-N TO DS3" MAPPER IC

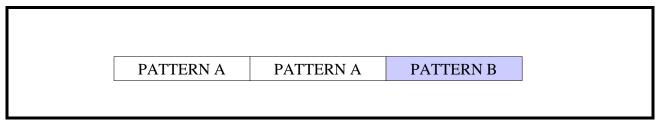


## CROSS-CHECKING OUR DATA

- Each SUPER PATTERN consists of (621 + 621 + 622) = 1864 clock pulses.
- The total amount of time, which is required for the "DS3 to OC-N Mapper" IC to transmit this SUPER PATTERN is (720 + 720 + 720) = 2160 "STS-1" clock periods.
- This amount to a period of (2160/51.84MHz) = 41,667ns.
- In a period of 41, 667ns, the XRT75R03D (when configured to operate in the DS3 Mode), will output a total (41,667ns x 44,736,000) = 1864 uniformly spaced DS3 clock pulses.
- Hence, the number of clock pulses match.

## APPLYING THE SUPER PATTERN TO THE XRT75R03D

Whenever the XRT75R03D is configured to operate in a "SONET De-Sync" application, the device will accept a continuous string of the above-defined SUPER PATTERN, via the TCLK input pin (along with the corresponding data). The channel within the XRT75R03D (which will be configured to operate in the "DS3" Mode) will output a DS3 line signal (to the DS3 facility) that complies with the "Category I Intrinsic Jitter Requirements - per Telcordia GR-253-CORE (for DS3 applications). This scheme is illustrated below in Figure 65.

## FIGURE 65. SIMPLE ILLUSTRATION OF THE XRT75R03D BEING USED IN A SONET DE-SYNCHRONIZER" APPLICA-

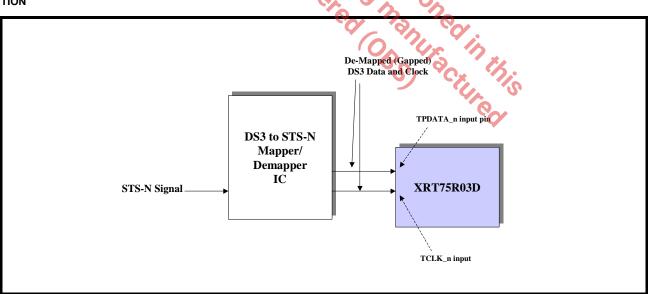

# 10.8.3 How does the XRT75R03D permit the user to comply with the SONET APS Recovery Time requirements of 50ms (per Telcordia GR-253-CORE)?

Telcordia GR-253-CORE, Section 5.3.3.3 mandates that the "APS Completion" (or Recovery) time be 50ms or less. Many of our customers interpret this particular requirement as follows.



#### THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

"From the instant that an APS is initiated on a high-speed SONET signal, all lower-speed SONET traffic (which is being transported via this "high-speed" SONET signal) must be fully restored within 50ms. Similarly, if the "high-speed" SONET signal is transporting some PDH signals (such as DS1 or DS3, etc.), then those entities that are responsible for acquiring and maintaining DS1 or DS3 frame synchronization (with these DS1 or DS3 data-streams that have been de-mapped from SONET) must have re-acquired DS1 or DS3 frame synchronization within 50ms" after APS has been initiated."

The XRT75R03D was designed such that the DS3 signals that it receives from a SONET Mapper device and processes will comply with the Category I Intrinsic Jitter requirements per Telcordia GR-253-CORE.

Reference 1 documents some APS Recovery Time testing, which was performed to verify that the Jitter Attenuator blocks (within the XRT75R03D) device that permit it to comply with the Category I Intrinsic Jitter Requirements (for DS3 Applications) per Telcordia GR-253-CORE, do not cause it to fail to comply with the "APS Completion Time" requirements per Section 5.3.3.3 of Telcordia GR-253-CORE. However, Table 3 presents a summary of some APS Recovery Time requirements that were documented within this test report.

Table 3,

DS3 PPM OFFSET (PER W&G ANT-20SE)	MEASURED APS RECOVERY TIME (PER LOGIC ANALYZER)
-99 ppm	1.25ms
-40ppm	1.54ms
-30 ppm	1.34ms
-20 ppm	1.49ms
-10 ppm	* 0 1.30ms
0 ppm	0 1.89ms
+10 ppm	1,21ms
+20 ppm	1.64ms
+30 ppm	9.32ms
+40 ppm	1.25ms
+99 ppm	9.35ms

## TABLE 33: MEASURED APS RECOVERY TIME AS A FUNCTION OF DS3 PPM OFFSET

**Note:** The APS Completion (or Recovery) time requirement is 50ms.

# Configuring the XRT75R03D to be able to comply with the SONET APS Recovery Time Requirements of 50ms

Quite simply, the user can configure a given Jitter Attenuator block (associated with a given channel) to (1) comply with the "APS Completion Time" requirements per Telcordia GR-253-CORE, and (2) also comply with the "Category I Intrinsic Jitter Requirements per Telcordia GR-253-CORE (for DS3 applications) by making sure that Bit 4 (SONET APS Recovery Time Disable Ch\_n), within the Jitter Attenuator Control Register is set to "0" as depicted below.



## JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0X07

#### CHANNEL 1 ADDRESS LOCATION = 0X0F

CHANNEL 2 ADDRESS LOCATION = 0X17	
-----------------------------------	--

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
Unused		SONET APS Recovery Time Disable Ch_n	JA RESET Ch_n	JA1 Ch_n	JA in Tx Path Ch_n	JA0 Ch_n	
R/O	R/O	R/O	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	0	1	1

**Note:** The user can only disable the "SONET APS Recovery Time Mode" if the XRT75R03D is operating in the Host Mode. If the user is operating the XRT75R03D in the Hardware Mode, then the user will have NO ability to disable the "SONET APS Recovery Time Mode" feature.

## 10.8.4 How should one configure the XRT75R03D, if one needs to support "Daisy-Chain" Testing at the end Customer's site?

Daisy-Chain testing is emerging as a new requirements that many of our customers are imposing on our SONET Mapper and LIU products. Many System Designer/Manufacturers are finding out that whenever their end-customers that are evaluating and testing out their systems (in order to determine if they wish to move forward and start purchasing this equipment in volume) are routinely demanding that they be able to test out these systems with a single piece of test equipment. This means that the end-customer would like to take a single piece of DS3 or STS-1 test equipment and (with this test equipment) snake the DS3 or STS-1 traffic (that this test equipment will generate) through many or (preferably all) channels within the system. For example, we have had request from our customers that (on a system that supports OC-192) our silicon be able to support this DS3 or STS-1 traffic snaking through the 192 DS3 or STS-1 ports within this system.

After extensive testing, we have determined that the best approach to complying with test "Daisy-Chain" Testing requirements, is to configure the Jitter Attenuator blocks (within each of the Channels within the XRT75R03D) into the "32-Bit" Mode. The user can configure the Jitter Attenuator block (within a given channel of the XRT75R03D) to operate in this mode by settings in the table below.

## JITTER ATTENUATOR CONTROL REGISTER - CHANNEL 0 ADDRESS LOCATION = 0X07

## CHANNEL 1 ADDRESS LOCATION = 0X0F

Віт 7	Віт 6	Віт 5	Віт 4	Віт 3	Віт 2	Віт 1	Віт 0
	Unused		SONET APS Recovery Time Disable Ch_n	JA RESET Ch_n	JA1 Ch_n	JA in Tx Path Ch_n	JA0 Ch_n
R/O	R/O	R/O	R/W	R/W	R/W	R/W	R/W
0	0	0	0	0	1	1	0

## CHANNEL 2 ADDRESS LOCATION = 0X17

#### REFERENCES


1. TEST REPORT - AUTOMATIC PROTECTION SWITCHING (APS) RECOVERY TIME TESTING WITH THE XRT94L43 DS3/E3/STS-1 TO STS-12 MAPPER IC - Revision C Silicon

## XRT75R03D THREE CHANNEL E3/DS3/STS-1 LINE INTERFACE UNIT WITH SONET DESYNCRONIZER

## ORDERING INFORMATION

PART NUMBER	Package	OPERATING TEMPERATURE RANGE
XRT75R03DIV	14 x 20 mm 128 Pin LQFP	- 40°C to + 85°C

## PACKAGE DIMENSIONS - 14X20 MM, 128 PIN PACKAGE

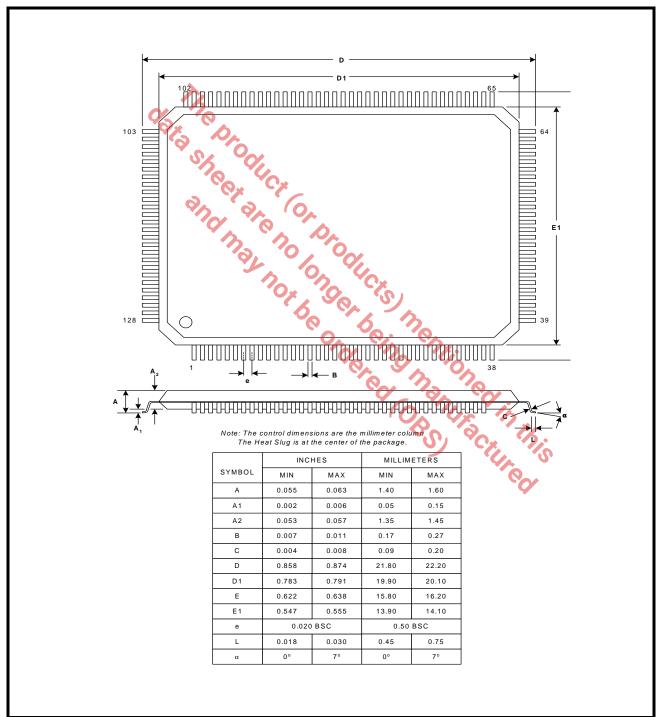






## XRT75R03D THREE CHANNEL E3/DS3/STS-1 LINE

## REVISIONS

REVISION	DATE	Сомментя
1.0.0	06/03	Initial issue
1.0.1	08/03	Changed XRT75VL03 to XRT75R03. Added R <sup>3</sup> Technology description.
1.0.2	12/03	Changed the pin description for E3Clk/Clk_en and STS-1Clk/12M. Removed page 18 (redundant page). Changed the Enable to Status in Register 0x21h.
1.0.3	03/05	Changed the pin listing for Pin 35. Changed from TAOS to TxCLK_0.
1.0.4	03/06	Changed Exar Logo. Corrected Table 21 Part Number register and description to 0x53 and Table 22 Chip Revision register and description to 0x8#. Updated Table 10 ALOS declaration and clearance threshold. Corrected JA setting for SONET De-sync mode on page 122. Updated RxMON functional description.

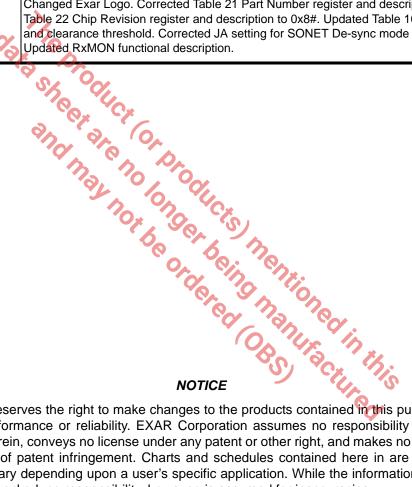

EXAR Corporation reserves the right to make changes to the products contained in this publication in order to improve design, performance or reliability. EXAR Corporation assumes no responsibility for the use of any circuits described herein, conveys no license under any patent or other right, and makes no representation that the circuits are free of patent infringement. Charts and schedules contained here in are only for illustration purposes and may vary depending upon a user's specific application. While the information in this publication has been carefully checked; no responsibility, however, is assumed for inaccuracies.

EXAR Corporation does not recommend the use of any of its products in life support applications where the failure or malfunction of the product can reasonably be expected to cause failure of the life support system or to significantly affect its safety or effectiveness. Products are not authorized for use in such applications unless EXAR Corporation receives, in writing, assurances to its satisfaction that: (a) the risk of injury or damage has been minimized; (b) the user assumes all such risks; (c) potential liability of EXAR Corporation is adequately protected under the circumstances.

Copyright 2006 EXAR Corporation

Datasheet March 2006.

Reproduction, in part or whole, without the prior written consent of EXAR Corporation is prohibited.